



## OilTank-Controller SCOTC

### Parker Fluid Connectors Group Europe

Bulletin 4089/UK

**Parker Hannifin Ges.mbH**  
A-2700 Wiener Neustadt  
Tel: +43 2622 23501  
Fax: +43 2622 66212

**Parker Hannifin Corporation**  
AE-Abu Dhabi  
Tel: +971 2 6788587  
Fax: +971 2 6793812

**Parker Hannifin Corporation**  
AZPAR - Techn. Repr. for  
Parker Hannifin plc  
AZ-1000 Baku  
Tel/Fax: +994 12 4983966

**Parker Hannifin S.A.-N.V.**  
B-1400 Nivelles  
Tel: +32 67280900  
Fax: +32 67280999

**Parker Hannifin s.r.o.**  
CZ-250 67 Klecany  
Tel: +420 2 84083111  
Fax: +420 2 84083112

**Parker Hannifin GmbH & Co. KG**  
D-41564 Kaarst  
Tel: +49 2131 4016-0  
Fax: +49 2131 4016-9199

**Parker Hannifin Danmark A/S**  
DK-2750 Ballerup  
Tel: +45 43560400  
Fax: +45 43733107

**Parker Hannifin España S.A**  
E-28850 Torrejón de Ardoz (Madrid)  
Tel: +34 91 6757300  
Fax: +34 91 6757711

**Parker Hannifin Corporation**  
EG-Cairo  
Tel: +20 2 5194018  
Fax: +20 2 5190605

**Parker Hannifin France SAS**  
F-74130 Contamine-sur-Arve  
Tel: +33 450258025  
Fax: +33 450978660

**Parker Hannifin Oy**  
FI-01510 Vantaa  
Tel: +358 9 476731  
Fax: +358 9 47673200

**Parker Hannifin Ltd.**  
GB-Derby DE24 8JA  
Tel: +44 1332 365631  
Fax: +44 1332 292146

**Parker Hannifin Corporation**  
GR-171 21 Athens  
Tel: +30 21 0933-6450  
Fax: +30 21 0933-6451

**Parker Hannifin Corporation**  
H-1149 Budapest  
Tel: +36 1 220-4155  
Fax: +36 1 422-1525

**Parker Hannifin S.p.A.**  
I-20094 Corsico (MI)  
Tel: +39 02 451921  
Fax: +39 02 4479340

**Parker Sales Ireland Ltd**  
IE-Blackrock, Co. Dublin  
Tel: +353 1 293 9999  
Fax: +353 1 293 9900

**Parker Hannifin Corporation**  
Gateway Ventures Ca Ltd.  
KZ-480100 Almaty  
Tel: +7 327 2505800  
Fax: +7 327 2505801

**Parker Hannifin A/S**  
N-1402 Ski  
Tel: +47 64 91 10 00  
Fax: +47 64 91 10 90

**Parker Hannifin B.V.**  
NL-7570 AH Oldenzaal  
Tel: +31 541 585000  
Fax: +31 541 585459

**Parker Hannifin Sp.z o.o.**  
PL-02-235 Warszawa  
Tel: +48 22 5732400  
Fax: +48 22 5732403

**Parker Hannifin Portugal Lda**  
PT-4450-625 Leça da Palmeira  
Tel: +351 22 9997360  
Fax: +351 22 9961527

**Parker Hannifin Corporation**  
Hidro Consulting Impex Srl  
RO-021381 Bucharest  
Tel: +40 21 2521382  
Fax: +40 21 2523381

**Parker Hannifin LLC**  
RU-119021 Moscow  
Tel: +7 495 5809145  
Fax: +7 495 5809146

**Parker Hannifin Corporation**  
RU-693000 Yuzhno-Sakhalinsk  
Tel/Fax: +7 4242 752742

**Parker Hannifin AB**  
SE-16308 Spånga  
Tel: +46 8 59795000  
Fax: +46 8 59795110

**Parker Hannifin Corporation**  
SI-8000 Novo Mesto  
Tel: +386 7 337-6650  
Fax: +386 7 337-6651

**Parker Hannifin Corporation**  
TR-34067 Merter/Istanbul  
Tel: +90 212 48291-06/07  
Fax: +90 212 48291-10

**Parker Hannifin Corporation**  
UA-01004 Kiev  
Tel: +380 44 4942731  
Fax: +380 44 4942730

**Parker Hannifin Africa**  
ZA-Kempton Park  
Tel: +27 11 9610700  
Fax: +27 11 3927213

Internet: [http://www.parker.com/euro\\_tfd](http://www.parker.com/euro_tfd)

For further information on other Parker Products, call the European Product Information Centre free of charge on 00800 2727 5374.



BUL/4089/UK  
© 2006 Parker Hannifin/0606  
PlantijnCasparie 0606





# 4 functions in one piece of equipment

► Level

► Temperature

► Filter

► Filling

## Everything from just one borehole!

Now there is room enough on your tank. You can install 4 pieces of equipment on your hydraulic unit using only one borehole. The OilTankController integrates connection facilities for air filter and tank filling with the monitoring functions of a LevelTempController. This saves space, assembly time and costs, reduces sources of error and supports the trend towards small and compact unit designs.


### These are the key areas:

- Compact design
- Simple switch point setting via menu
- Analogue output
- Safety control
- Cost savings in logistics, assembly and maintenance

Can be set also from your PC



# The SCOTC OilTankController

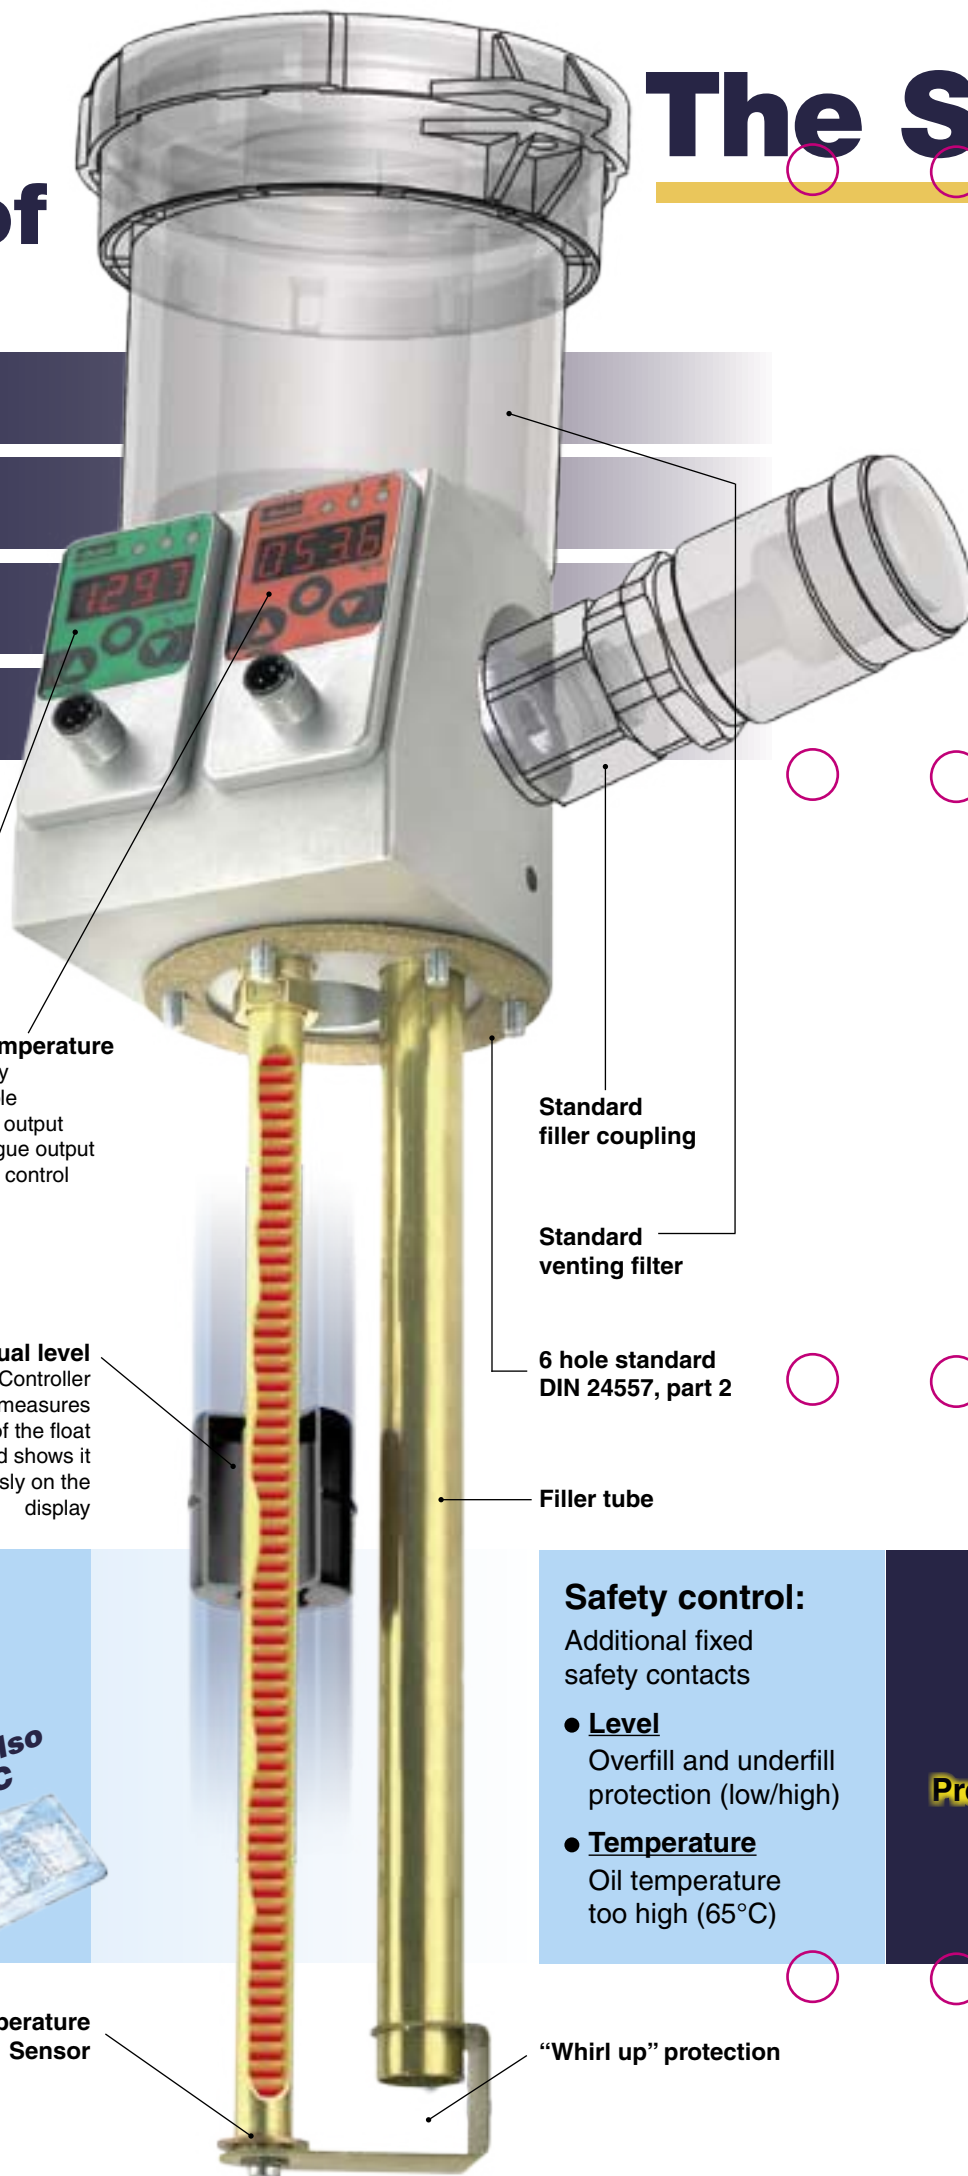

- Level / temperature**
- Display
  - Settable switch output
  - Analogue output
  - Safety control

**Actual level**  
The LevelController continuously measures the position of the float and shows it continuously on the display

Standard filler coupling

Standard venting filter

6 hole standard DIN 24557, part 2

Filler tube

### Safety control:

Additional fixed safety contacts

- **Level**  
Overfill and underfill protection (low/high)
- **Temperature**  
Oil temperature too high (65°C)



Now there's room enough on the tank!



## The Controller Family

