USB Data Link Adapter

USB-DLA

Parker Hannifin Canada
Electronic Controls Division
1305 Clarence Avenue
Winnipeg, MB R3T 1T4 Canada
office +1 204 452 6776
Fax +1 204 478 1749

http://www.parker.com/ecd

Copyright 2017 © **Parker Hannifin Corporation.** All rights reserved. No part of this work may be reproduced, published, or distributed in any form or by any means (electronically, mechanically, photocopying, recording, or otherwise), or stored in a database retrieval system, without the prior written permission of Parker Hannifin Corporation in each instance.

Warning!

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

- This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise.
- The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors.
- To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.

Offer of Sale

The items described in this document are hereby offered for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. This offer and its acceptance are governed by the provisions stated in the "Offer of Sale" elsewhere in this document, or available at www.parker.com.

Contents

Publication History	iv
Safety	V
Safety symbols	
General safety regulations	
Welding after installation	
Construction regulations	
Safety during installation	
Safety during installation	
Safety during start-upSafety during maintenance and fault diagnosis	
1. About the USB DLA	4
1.1. Contents of USB DLA Kit	1
2. Software Installation	2
2.1. Installing the USB drivers	
2. 1. Installing the OOB unvers	
3. Using the USB DLA	4
3.1. USB DLA LEDs	
4. Software Tools for the USB DLA	7
4.1. USB Update Tool	
4.2. VAPI Server	
4.3. RP1210 Chooser	
4.5. NF 12 10 C1100Se1	1 1
5. Appendix A	12
5.1. USB DLA Electrical Specifications	
5.2. USB DLA Environmental Specifications	12
6. Appendix B	15
6.1. Automotive Networks	
6.2. RP1210 Compatibility	
6.3. Software Model	
6.4. Software Files and Locations	
7. Glossary	40
1. Glussal y	19
8. Index	21

Publication History

The following table provides an overview of the changes made to this document over the course of its publication history.

Revision Description of Change		
Rev. 001	First release of this document	
Rev. 002	New template, minor edits, 5/12/2017	

User Guide iv

Safety

Do not perform the procedures in this manual unless you are experienced in the handling of electronic equipment.


Contact the manufacturer if there is anything you are not sure about or if you have any questions regarding the product and its handling or maintenance.

The term "manufacturer" refers to Parker Hannifin Corporation.

Safety symbols

The following symbols are used in this document to indicate potentially hazardous situations:



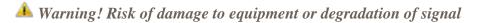

When you see these symbols, follow the instructions carefully and proceed with caution.

General safety regulations

Work on the hydraulics control electronics may only be carried out by trained personnel who are well-acquainted with the control system, the machine, and its safety regulations.



Follow the manufacturer's regulations when mounting, modifying, repairing, and maintaining equipment. The manufacturer assumes no responsibility for any accidents caused by incorrectly mounted or incorrectly maintained equipment. The manufacturer assumes no responsibility for the system being incorrectly applied, or the system being programmed in a manner that jeopardizes safety.





4 Do not use the product if electronic modules, cabling, or connectors are damaged or if the control system shows error functions.



Lectronic control systems in an inappropriate installation and in combination with strong electromagnetic interference fields can, in extreme cases, cause an unintentional change of speed of the output function.

Welding after installation

Complete as much as possible of the welding work on the chassis before the installation of the system. If welding has to be done afterwards, proceed as follows:



Lo not place the welding unit cables near the electrical wires of the control system.

- 1. Disconnect the electrical connections between the system and external equipment.
- 2. Disconnect the negative cable from the battery.
- 3. Disconnect the positive cable from the battery.
- 4. Connect the welder's ground wire as close as possible to the place of the welding.

Construction regulations

The vehicle must be equipped with an emergency stop which disconnects the supply voltage to the control system's electrical units. The emergency stop must be easily accessible to the operator. If possible, the machine must be built so that the supply voltage to the control system's electrical units is disconnected when the operator leaves the operator's station.

Safety during installation



Incorrectly positioned or mounted cabling can be influenced by radio signals, which can interfere with the functions of the system.

vi **USB-DLA**



Safety during start-up

2 Danger! Risk of death or injury. Do not start the machine's engine before the control system is mounted and its electrical functions have been verified.

Do not start the machine if anyone is near the machine.

Safety during maintenance and fault diagnosis

Before performing any work on the hydraulics control electronics, ensure that

- The machine cannot start moving.
- Functions are positioned safely.
- The machine is turned off.
- The hydraulic system is relieved from any pressure.
- Supply voltage to the control electronics is disconnected.

User Guide vii

1. About the USB DLA

The Data Link Adapter (DLA) provides a link between two different data networks or protocols. The Parker Vansco DLA provides the link between a PC and an automotive network. Information from the engine and transmission is converted into a format that a laptop can understand. The DLA transfers data from computer ports (USB) to vehicle ports (J1939, J1708).

The Data Link Adapter is sold in kit form, with all of the necessary cables and connectors included. This manual explains the contents of the kit, and how to set up and use the DLA for USB communication.

1.1. Contents of USB DLA Kit

The USB DLA kit is supplied in a high density polyethylene, blow-molded case. The kit includes the following:

Contents of USB DLA Kit				
Part No.	Description	Remarks		
	USB-DLA Data Link Adapter			
75144	CBL ASSY NETWORK DLA DEUTSCH	connects vehicle to DLA		
75145	CBL ASSY NETWORK DLA CANNON	connects vehicle to DLA and modules		
75850	CBL ASSY DLA BATTERY CLIP	power cable		
76547	CBL ASSY NETWORK CANNON DEUTSCH	connects VMM to vehicle bus w/Deutsch		
93373	CBL ASSY J1939 0.9M CANNON	connects VMM to vehicle bus w/Cannon		
51858	DT04-3P-P007 CONN RECP Y 3M DT	Deutsch J1939 y connector		
53801	130446-0000 SPLICE Y 4M AU J1939	Cannon J1939 y connector		
53800	086-0068-002 PLUG TERM 4F AU J1939	120 Ω bus terminating plug		
89248	CABLE USB 1.1 6FT MALE A-B	connects USB DLA to PC		



The illustration below shows the contents of the USB DLA kit.



Figure 1: USB DLA kit



2. Software Installation

Install the software for the USB DLA software *before* plugging the DLA into your computer. If you plug in the DLA first, WindowsTM will try to install its own USB drivers. You will have to cancel this driver installation and WindowsTM may ignore the device the next time it is plugged in.

The software installation is done in three parts:

- 1. Install the USB DLA drivers on your PC.
- 2. Plug in the DLA and let the PC recognize the device and load the USB drivers.
- 3. Install the applications.

2.1. Installing the USB drivers

You must be logged on as an administrator to install the USB DLA drivers.

- 1. The latest drivers for the USB DLA are available from Parker Electronic Controls Division website: http://www.parker.com/ecd.
- 2. Click on Support and then scroll down to the *Customer Toolbox* and select *Vansco DLA and PGM Drivers*.
- 3. Save the .zip file to your PC, then extract the setup files and save them to a temporary directory.
- 4. Run the setup.exe program to launch the setup. The Setup Wizard opens.
- 5. Follow the instructions in the Wizard until the installation is complete.



3. Using the USB DLA

The DLA is considered a high current device because it draws more than 100mA when operating. The unit must be plugged directly into your PC or into a powered USB hub. It will not operate if plugged into an un-powered USB hub.

! Warning! Damage to equipment. The USB ground is not isolated from the power ground. A computer connected to the USB port must be electrically floating and not have any connections to the outside world, including the AC power adapter and the serial port. Failure to observe this may result in damage to the DLA and the computer USB port. If a laptop battery needs to be charged, the USB port must be disconnected from the DLA. If the DLA is to be used with a desktop computer, care must be taken to ensure that the power supply to the DLA is isolated from any earth or vehicle ground.

1. Plug in the USB cable

- a. Connect the DLA to your computer using the USB cable provided.
- a. Plug the A-type receptacle into the back of your computer (1), and the Btype receptacle into the DLA (2). You should hear a Windows alert every time the DLA is connected or disconnected.



Figure 2: Connect DLA to PC



- b. Load the USB drivers. The USB DLA will be detected automatically when it is plugged into your laptop. The first time the device appears on a USB port, Windows launches the *Found New Hardware Wizard*. Windows will do this every time the device appears on a new USB port (e.g., if you attach the USB DLA to a new hub, Windows will want to install the driver for each port on the hub). The USB drivers are loaded like any other USB device.
- c. Select Install the software automatically (Recommended) and click Next. Windows loads the drivers for the USB DLA, and indicates that the installation is complete.
- d. Click Finish to close the window.
- 2. Plug in the vehicle interface cable
 - a. Connect the DLA to the vehicle using the vehicle interface cable provided. This cable is typically a DB-15 (3) connected to a 9-pin Deutsch (4). Note that the vehicle connector may change depending on the preference of the vehicle manufacturer.



Figure 3: Connect USB-DLA to vehicle



3.1. USB DLA LEDs

The USB DLA has 3 LEDs for status indication. The LED indicators on the USB DLA fall into two categories: power status (1 LED) and network status (2 LEDs).

LED colors and blink codes

- POWER ON (red) The LED is off when no power applied. After the LED self-test, the LED goes on steady.
- J1708 (green) The LED flashes on when the DLA detects traffic on the J1708 input terminals or when a J1708 message is sent from the DLA. During heavy traffic, the LED may appear to be on steady. The LED stays off if no traffic is detected and no messages are sent.
- J1939/CAN (red) The LED flashes on when the DLA detects traffic on the J1939/CAN input terminals or when a J1939/CAN message is sent from the DLA. During heavy traffic, the LED may appear to be on steady. The LED stays off if no traffic detected and no messages are sent.



4. Software Tools for the USB DLA

The following software tools are used to support the DLA on a PC:

- USB update tool can be used to update the embedded firmware in the DLA.
- VAPIserver starts automatically when an RP1210 application is started and provides a link between the USB or serial hardware and the PC application.
- RP1210 Chooser allows the use of different DLA hardware (such as Vansco's serial or parallel DLA) on the same computer.

Parker Vansco also has a number of software tools that are useful for troubleshooting vehicle networks. These are applications that have been developed over the years to assist in developing products such as instrument clusters, transmission controllers and DLAs.

- CANsniff is a PC application that displays the amount of data on the CAN bus as well as actual traffic.
- SimEngine is a powerful PC application that can simulate engine controller messages.
- SimGauges creates a virtual J1939 instrument cluster on a PC for a graphical display of data received by the DLA.

For further information about these software tools, please contact your Parker Vansco representative.

4.1. USB Update Tool



1 The USB update tool updates the firmware in the USB DLA. If done incorrectly or if the wrong firmware is loaded, the DLA can be rendered inoperative. The unit must then be returned to Parker Vansco for reprogramming.

To update the DLA firmware:

- 1. Plug the DLA into the USB port and run the program, udutool.exe. The program should show you that the DLA is connected to the USB port.
- 2. Click on the DLA to select it for a firmware update.



- 3. Use the browse button (indicated by the ellipsis) to select an appropriate firmware file. A valid DLA firmware file can be identified by three characteristics:
 - The filename should start with the DLA product number 779. Never program the DLA with firmware file that does not start with 779.
 - The filename should end with the application version number. Never program the DLA with an application code that has a lower version number.
 - The file type should be .VSF.

The software displays an alert asking you if you are sure you want to reprogram the DLA.

4. Click Yes to continue. A progress bar will move across the screen. A dialog box will inform you if the update was successful.

USB update tool will only allow you to update only the application code in the DLA and not the bootcode. This means that if you interrupt the update, you should be able to run it again and complete the update. However, it is highly recommended that the update be run without interruptions. The DLA should only be disconnected when USB update tool reports the update has completed successfully.

4.2. VAPI Server

A new icon appears in your system tray when you start an RP1210 application that uses the USB DLA. This is the VAPIserver (*Vansco Application Program Interface Server*) program; it provides the interface between the applications (such as SimGauges, SimEngine and CANsniff) and the DLA hardware.



Figure 4: VAPI Server icon

Double clicking the VAPIserver icon open a window showing the status of the VAPIserver program. The VAPIserver will search for a DLA connected to the PC once every minute. If it finds one, the status will change to "Connected" and the



VAPIserver will use that DLA until the connection is lost. The status window shows the number of applications that are connected to the DLA.

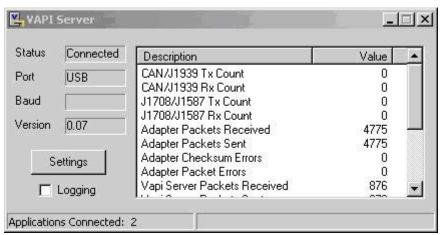


Figure 5: VAPI Server status window

The status window displays information on the data being sent through the DLA. This includes counts of the bytes sent through J1939 and J1708 and also connection status. In general, the Adapter Packets Tx count should match the Vapi Server Packets Rx count. However, if the DLA is disconnected, the Adapter Packets TX count will continue to increase as the PC attempts to communicate with the DLA.

IIIII IIV BAIA				
Status window messages				
Description Explanation				
CAN/J1939 Tx Count	Number of J1939 messages transmitted by DLA			
CAN/J1939 Rx Count	Number of J1939 messages received by DLA			
J1708/J1587 Tx Count	Number of J1708 messages transmitted by DLA			
J1708/J1587 Rx Count	Number of J1708 messages received by DLA			
Adapter Packets Tx Count	Number of packets transmitted by DLA to the PC			
Adapter Packets Rx Count	Number of packets received by DLA from the PC			
Adapter Packet Errors	Number of packet errors detected by the DLA			
Adapter Checksum Errors	Number of packet checksum errors			
Vapi Server Packets Tx Count	Number of packets transmitted by the PC to the DLA			
Vapi Server Packets Rx Count	Number of packets received by the PC from the DLA			
Vapi Server Packets Errors	Number of packet errors detected by the PC			
CAN 1 Status	Status of CAN 1 port. See table below			
CAN 2 Status	Status of CAN 2 port. See table below			
J1708 Status	Status of J1708 port. See table below			
Other Status	Status of optional port. See table below			
Client Threads	Number of clients			



A status byte is associated with each of the vehicle ports on the DLA. The status byte is displayed in hex format with each of the bits representing the following table.

Status byte			
Bit 7	reserved		
Bit 6	reserved		
Bit 5	reserved		
Bit 4	reserved		
Bit 3	Set to 1 when the data link is in the BUS OFF state (if applicable).		
Bit 2	Set to 1 when traffic has been detected on the data link.		
Bit 1	Set to 1 when the data link is enabled.		
Bit 0	Set to 1 when the data link is present.		

Clicking the Settings button will display a second dialog box, which allows the user to limit the serial ports that the VAPI Server uses. This is useful on a Bluetooth enabled laptop which may have up to 15 virtual COM ports. The Maximum Baud Rate setting reduces the connection speed. Older laptops, and laptops with multiple applications running in the background may have difficulty maintaining a connection at 115200.

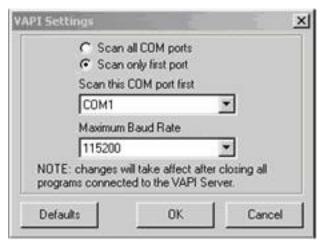


Figure 6: VAPI settings window

Multiple client connections

The VAPIserver program allows multiple applications to be simultaneously connected to the DLA. This is shown in the Status window as two active clients connected to the DLA.

Therefore, you can run *SimGauges* and *SimEngine* (two applications mentioned earlier) at the same time. This can be useful in testing a third device such as a transmission or ABS controller. However, it can also cause some confusion in that



you may see data appear on SimGauges before you've hooked it up to the vehicle. This is valid as SimEngine is instructing the DLA to broadcast messages, which are then received by the DLA. In order to reduce traffic going to the DLA, the VAPI Server will transfer this data locally between applications.

4.3. RP1210 Chooser

RP1210 was intended to reduce the number of DLA hardware devices. However, one DLA may be USB, another wireless and another the original Vansco Electronics parallel version. The application will not know the difference, as all will present a standard RP1210 API. In order to select which API for the application to use, provisions for using multiple DLAs with the same laptop have been included in the RP1210 specification. Some applications will recognize this and present the user with a choice of available APIs. Parker Vansco applications will use the first API on the list. In order to make sure the DLA uses the correct API the installer includes a small PC application called RP1210 Chooser.

Running RP1210Chooser.exe provides the screen shown below.

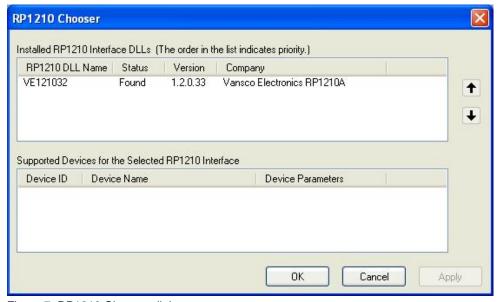


Figure 7: RP1210 Chooser dialog

Simply select the API required for your device, VE121032 for the USB DLA, and move it to the top of the list with the arrows on the right hand side of the screen. If you subsequently need to use another RP1210 device on the same PC, run RP1210 Chooser and move the corresponding API to the top of the list, such as PCSRP32 for a legacy serial only DLA.



5. Appendix A

5.1. USB DLA Electrical Specifications

The USB DLA operates using power supplied by typical automotive battery/charging system for both 12 and 24 volt systems. The following table lists the electrical requirements.

General ratings (@ 25 °C unless otherwise specified)					
Parameter	Min	Nom	Max	Units	Remarks
Operating temperature	-40		+85	°C	
Storage temperature	-55		+125	°C	
Operating voltage	4.4	4.75	5.0	V	when powered by USB from PC
Operating current draw (USB power pin)		150	200	mA	when powered by USB from PC
Operating voltage	5	12-24	32	V	when powered by vehicle battery
Operating current draw		100	300	mA	when powered by vehicle battery

5.2. USB DLA Environmental Specifications

The USB DLA is made to operate in a typical automotive service environment. The unit is protected to extremes of temperature and chemicals. As a handheld unit, the unit can withstand being dropped but is not protected from vehicle stresses such as steam cleaning or pressure washing.



The test descriptions below are based on the following environmental specifications:

- ANSI/ASAE EP455 JUL 91
- ISO 7637 2nd edition
- ISO 14982 1st edition
- J1455 APR 03

Environmental rating tests passed by USB DLA					
Test Spec. Test Description Ref.		Deviation			
EP455	Operating Temperature Level 2				
Section 5.1.1					
EP455	Storage Temperature Level 2				
Section 5.1.2					
EP455	Thermal Shock				
Section 5.1.3					
EP455	Operating Voltage Level 1	7 VDC to 32 VDC			
Section 5.10.1					
J1455	Over Voltage Level 2	32 VDC			
Section 4.11.1					
J1455	Reverse Polarity	-26VDC			
Section 4.11.1					
EP455	Short Circuit Protection	+26 VDC			
Section 5.10.4					
J1455	Starting Voltage				
Section 4.11.1					
EP455	Power Up Operational	Test from 7 VDC			
Section 5.10.7					
EP455	Accessory Noise	26 + 1.5 sin(2πft)			
Section 5.11.1					
EP455	Batteryless Operation Level 2	6 + 26 sin(2πft)			
Section 5.11.3					
ISO 7637-2	Pulse 1 (Inductive Load Switching)	Vs = -300 V			
ISO 7637-2	Pulse 2 (Mutual Coupling Power Lines)	Vs = 200 V			
ISO 7637-2	Pulse 5 (Load Dump)				
EP455	Alternator Field Decay	Vs = 24 VDC, Ri = 10Ω,			
Section 5.11.2		Cycle = 50 sec.			
ISO 7637-3	Mutual Coupling Signal Lines				



EP455	Electrostatic Discharge	
Section 5.12		
EP455	Mechanical Shock Operational	
Section 5.14.1		
EP455	Mechanical Shock Handling	
Section 5.14.2.2	Bench Level 1	
EP455	Mechanical Shock Handling	
Section 5.14.2.2	Bench Level 2	
EP455	Random Vibration	
Section 5.15.1		
ISO 14982	EMC Susceptibility Level 2	
ISO 14982	EMC - Emissions	



6. Appendix B

6.1. Automotive Networks

Automotive information networks will not communicate with standard computer interfaces. PCs use parallel, RS232 serial, and USB ports, while engine controllers and instrument panels typically use J1708, J1850 and J1939. These are automotive network standards defined by the Society of Automotive Engineers (SAE). PC ports and automotive networks use different voltage levels, data rates and check sums. An adapter is required to connect the laptop and engine together, this is where the DLA comes into play. The DLA supports CAN (Controller Area Network) and the J1708 and J1939 automotive networks.

J1939

In the 1980's Bosch developed a system called Controller Area Network (CAN). CAN was intended to be used as a communication network for industrial controllers. It has gained acceptance in a wide variety of markets including the automotive industry. CAN hardware ports are now embedded in microcontrollers. J1939 is a standard developed by the Society of Automotive Engineers (SAE) that defines how information is passed on a CAN network. J1939 is a differential pair network using CAN Transceivers in a dominant/recessive mode. The network cable is terminated on each end by a 120Ω resistor. The maximum data rate is 250Kbps. The data packet format is <PGN><8 DATA BYTES><CRC>.

J1708

J1708 is an automotive network developed by SAE about the same time as CAN. J1708 is a differential pair network using standard RS485 drivers in a dominant/recessive mode. J1708 is terminated by $4.7K\Omega$ pull-up / pull-down and 47Ω series resistor. The data format and rate is the same as the standard computer serial port: 9600bps, 1 start bit, 8 data bits, 1 stop bit. The data packet format is <MID><PID><DATA><PID><DATA><CHK>.

6.2. RP1210 Compatibility

RP1210 was developed by the Technology and Maintenance Council (TMC) of the American Trucking Association (ATA) to address issues in servicing vehicles



manufactured by different vendors. Service personnel were forced to purchase an expensive DLA to communicate with each different type of vehicle and engine. RP1210 provides a consistent application interface so that the same DLA hardware can be used with many different applications. If software developers follow the RP1210 standard, then their engine diagnostic software should work a DLA from any manufacturer. Parker Vansco's industry standard RP1210 API is ve121032.dll.

Parker has made every effort to make the USB DLA RP1210 compliant. It should be usable with test tools from Dearborn, Cummins, and other manufacturers. We cannot guarantee this into the future, as the engine developers may add extensions to RP1210 to address issues unique to their systems.

The TMC RP1210 Specification is available from ATA for a fee.

Parker Vansco developed the RP1210 drivers used with the USB DLA. The latest updates are available on our website: www.parker.com/ecd.

6.3. Software Model

Several levels of software are required to operate a Vansco DLA: an application, the RP1210 interface, the VAPI server interface, the VAPIserver, and the USB driver.

This section only compares how the USB and Legacy RS232 software models look. However, they cannot be used at the same time.

Applications: The main purpose of the application is to present information to the user in an organized manner. This allows the user to decide the kind of data to transmit or receive on the automotive network. The application is the highest software level and it does not require information on how the data was passed to the computer. The application gets all its information from either the RP1210 API or Parker Vansco's proprietary API.

ve121032.dll: An industry standard RP1210 API. Allows applications to communicate with vehicle networks even when different DLA hardware is used. The hardware interface could be USB, Serial, or even 802.11. Parker Vansco provides an RP1210 front end which in turn makes calls to the VAPI.dll

VAPI.dll: The VAPI.dll provides a software interface for applications and for ve121032.dll to communicate with the VAPI Server.

Although it is possible to bypass the RP1210 interface and communicate directly with the vapi.dll, we do not recommend this. The software model was developed



to address legacy issues. The long-term goal is to support the industry standard interface (RP1210).

VAPIserver: The VAPIserver program communicates with the PC hardware in order to transfer data to a DLA. The DLA may be connected to any of the PC hardware ports. The VAPIserver searches for and maintains a connection to a DLA and makes the DLA available to the application. The VAPIserver can support multiple clients; more than one application can request information from the VAPIserver.

USB Drivers: VAPIserver does not communicate directly with the USB hardware, rather it passes all requests on to the USB driver.

6.4. Software Files and Locations

If you experience difficulty installing the software or if you want to update only one file it may be easier to manually copy the files into the proper locations.

Files copied during software installation:

- ve121032.dll: RP1210 API. Receives RP1210 calls and hands them off to a VAPI.dll Interface.
- VE121032.h: Header file that contains the parameter, error definitions and prototypes of the functions exported by VE121032.dll.
- VAPI.dll: Vansco API that passes data from applications to the VAPIserver.
 Multiple copies of the dll's can be running at any given time.
- VAPIserver.exe: Provides the interface between the dll's and the DLA hardware. Only one VAPIserver is running at any time.
- dlapnp.sys: Plug and play driver for USB DLA
- usbdla.sys: USB DLA driver
- Readme.txt: Installation information

Default File locations (all versions of Windows):

- C:\Program Files\Vansco\USB DLA\Driver\dlapnp.sys
- C:\Program Files\Vansco\USB DLA\Driver\usbdla.inf
- C:\Program Files\Vansco\USB DLA\Driver\usbdla.sys
- C:\Program Files\Vansco\USB DLA\udutool.exe
- C:\Program Files\Vansco\USB DLA\RP1210Chooser.exe
- C:\WINDOWS\system32\VAPIserver.exe
- C:\WINDOWS\system32\VE121032.dll
- C:\WINDOWS\system32\VAPI.dll



Running a newer version of the setup program will install updated versions of the USB drivers and applications. The updated version of the applications will be copied over existing versions installed on your PC. The USB driver will also be copied onto your PC.

Windows will not use the new USB driver until you have updated the driver in *Device Manager*.

- 1. Manually update the driver in Windows, (ie: Settings > Control Panel > System > Hardware > Device Manager).
- 2. Right click on Vansco USB DLA and select *Update Driver*.

7. Glossary

application software

A level of software that makes a product (hardware) perform desired functions for the end user.

CAN bus

See controller area network (CAN) bus.

CAN high

The positive wire in a shielded twisted-pair cable, which, when connected with a CAN low, provides a complete CAN differential signal.

CAN low

The negative wire in a shielded twisted-pair cable, which, when connected with a CAN high, provides a complete CAN differential signal.

CAN shield

The shielding that wraps around the CAN high and CAN low wires in a shielded twisted-pair cable.

controller area network (CAN) bus

A communications network bus that permits data from sensors and other equipment within a motor vehicle to communicate with each other and, through telltales and other diagnostic tools, with the operator.

data link adaptor (DLA)

A development tool that connects the CAN bus to a personal computer (through a USB or RS232 port), so that programming and diagnostics can be performed on the product before installing it in a vehicle.

driver (software)

A block of software that provides access to different hardware components.



RS232

An inexpensive type of serial communication used on most PC and laptop computers that doesn't define the communication protocol, making it attractive for embedded applications. RS232 is an older technology that is slowly being phased out of production in favor of USB.

8. Index

```
About the USB DLA • 1
Appendix A • 12
Appendix B • 15
application software • 19
Automotive Networks • 15
C
CAN bus • 19
CAN high • 19
CAN low • 19
CAN shield • 19
Construction regulations • vi
Contents of USB DLA Kit • 1
controller area network (CAN) bus • 19
data link adaptor (DLA) • 19
driver (software) • 19
General safety regulations • v
Installing the USB drivers • 3
Publication History • iv
RP1210 Chooser • 11
RP1210 Compatibility • 15
RS232 • 20
S
Safety • v
Safety during installation • vi
Safety during maintenance and fault diagnosis • vii
Safety during start-up • vii
Safety symbols • v
Software Files and Locations • 17
Software Installation • 3
Software Model • 16
Software Tools for the USB DLA • 7
USB DLA Electrical Specifications • 12
```

USB DLA Environmental Specifications • 12

```
USB DLA LEDs • 6
USB Update Tool • 7
Using the USB DLA • 4

V
VAPI Server • 8

W
Welding after installation • vi
```



USB Data Link Adapter USB-DLA User Guide HY33-5010-IB/US