



## Wiring diagram

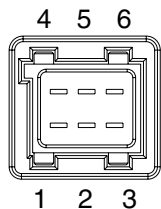



1. CAN-L
2. D.OUT (alarm)
3. -BAT
4. CAN-H
5. +RTC (clock)
6. +BAT

Mating connector kit: 5031022

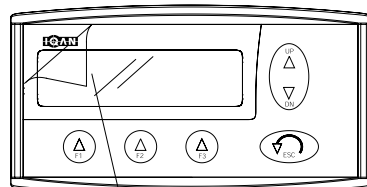

### Note!

It is important that you make sure that the foil is removed before use.

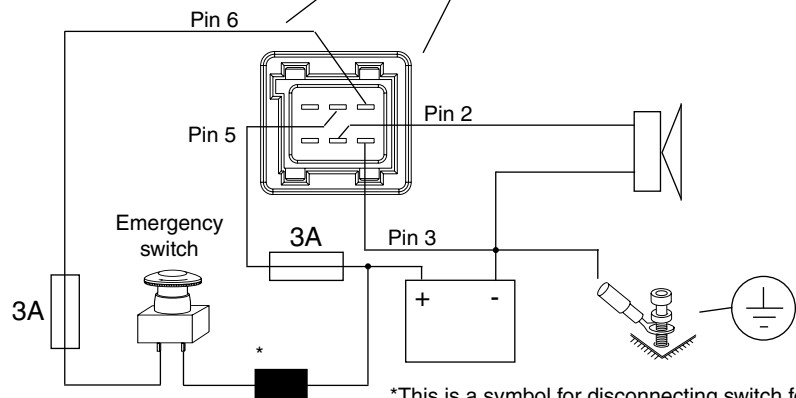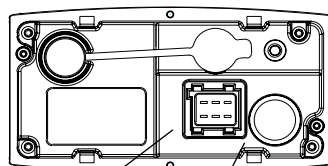

\*This is a symbol for disconnecting switch for battery, ignition lock and other fuses.

## Installation

## IQAN-MDM

Publ.no: M5010010A  
Ed. B

expansion unit


levers

display unit





### Note!

It is required to download the operating system vmAC before using the controller.


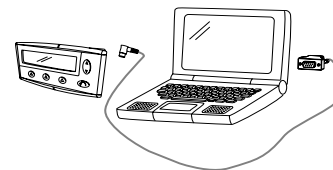


For further information see:  
HY17-8328/UK Instructions  
HY17-8363/UK Menu system

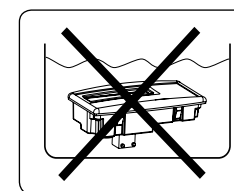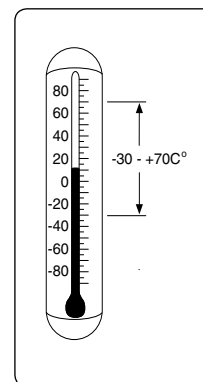

## IQAN-MDM

Installation alt. 1  
unit = mm

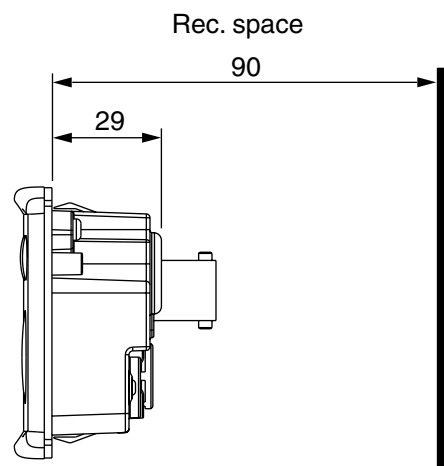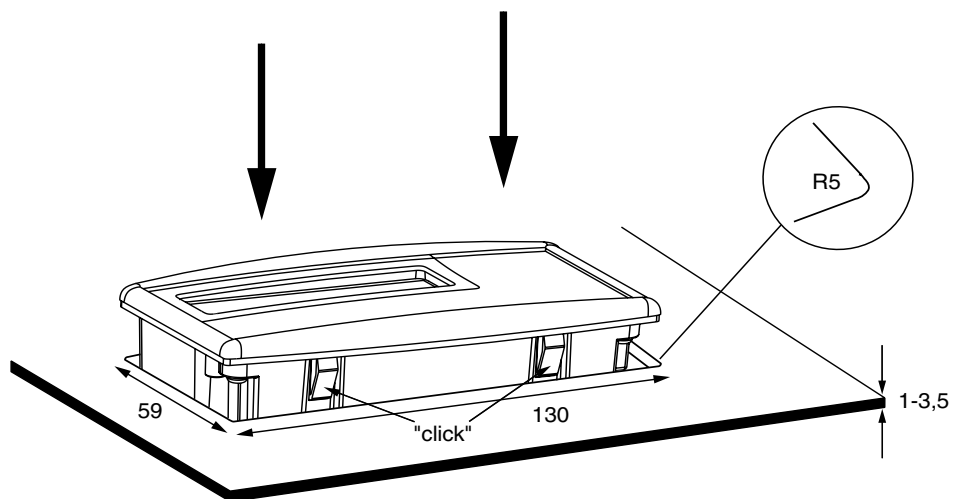

## IQAN-MDM

Installation alt. 2  
unit = mm

