



## Seal Kits 1

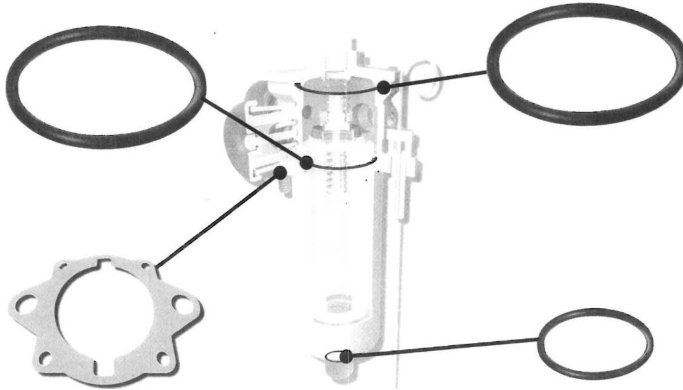

## Part Numbers

No.	FTA	FTB	FTC	Pressure Rating Bar
1	FTS-0001 (Nitrile)	FTS-0003 (Nitrile)	FTS-0005 (Nitrile)	N/A
	FTS-0002 (Fluorelastomer)	FTS-0004 (Fluorelastomer)	FTS-0006 (Fluorelastomer)	
2	FTS-0011	FTS-0011	N/A	N/A
3	FTS-0015	FTS-0015	N/A	N/A
4	FTS-0012 (G 1/2)	FTS-0013 (G 3/4)	N/A	N/A
5	FTS-0014	FTS-0014	FTS-0014	N/A
6	FTS-0008 FTS-0028	FTS-0008 FTS-0027	FTS-0008 FTS-0027	1.7 3.5
7	FTS-0010 (N/C)	FTS-0010 (N/C)	FTS-0010 (N/C)	1.7
	FTS-0016 (N/C)	FTS-0016 (N/C)	FTS-0016 (N/C)	1.7
8	FTS-0007 FTS-0027	FTS-0007 FTS-0027	FTS-0007 FTS-0027	1.7 3.5
6&8	FTS-0009 FTS-0029	FTS-0009 FTS-0029	FTS-0009 FTS-0029	1.7 3.5


102853-001-ISSUE 3

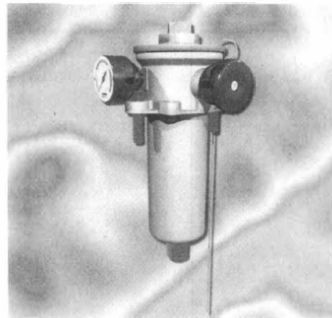


## Element Service

When servicing a FTA, FTB and FTC, filter, use the following procedure:


- Stop the system's power unit.
  - Rotate the cover anti-clockwise and remove.
  - Element and bowl are removable through the head. Discard the used element and clean the inside of the bowl.
- NOTE: Save the black nylon bypass assembly attached to the element.
- Inspect the bowl and cover seals and replace if necessary.
  - Place the bypass valve on the new, clean element and seat securely in the bowl.
  - Replace the entire assembly back through the head and into the tank.
  - Place the cover spring on the cover spigot and hand tighten the cover by rotating clockwise.

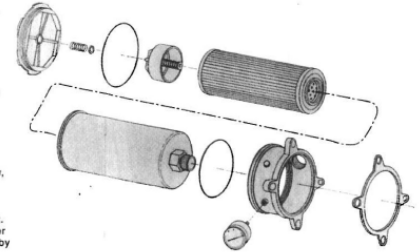

## Accessories

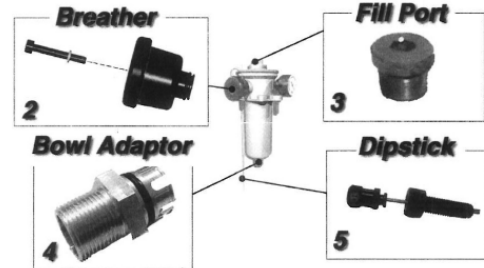

## Indicators

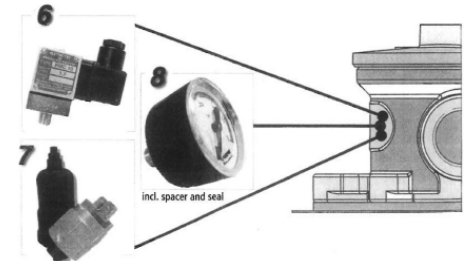

Hydraulic and Industrial Process Filtration EMEA (HIFE)  
www.parker.com



ENGINEERING YOUR SUCCESS.