


HCDC

Hyper-Connected Dryer Controller

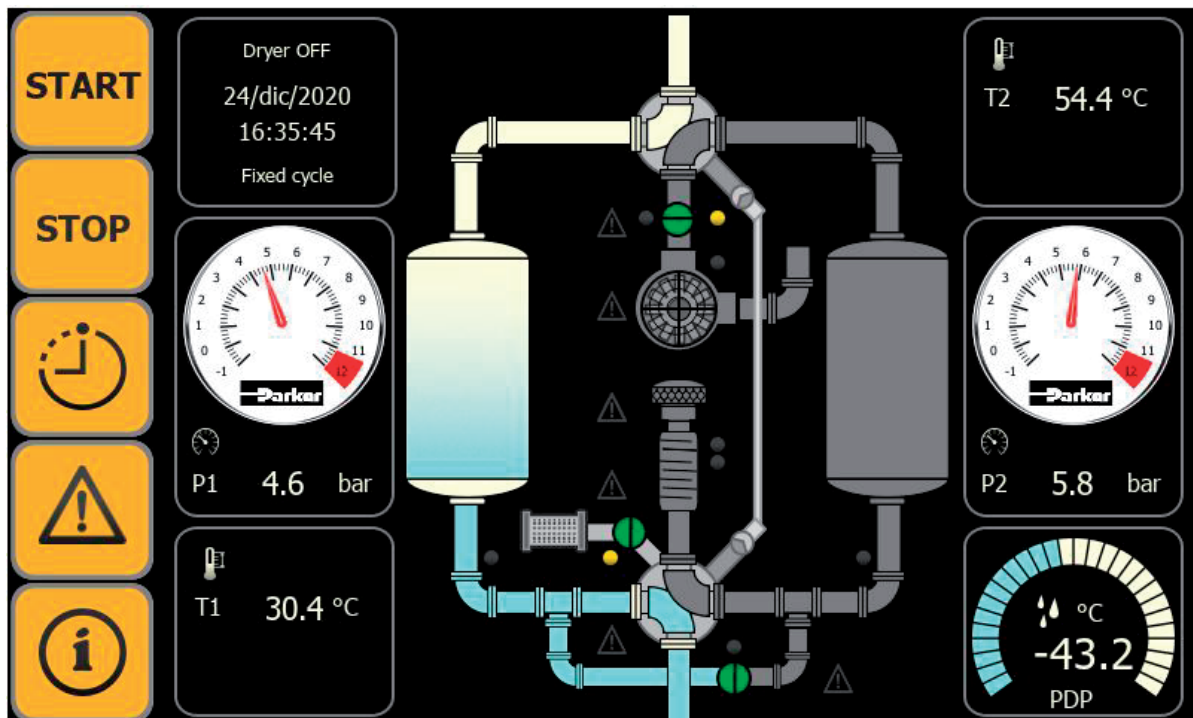

Operating Manual



28/01/2026 - rev 06 /EN
Cod: 398H271800

Index

1. Manufacturer's details	2
2. About these operating instructions	3
3. Technical data	4
3.1 Technical features	4
4. Overview of the operating and display elements	5
4.1 The home screen	5
5. Starting and stopping the dryer	8
6. Timer status	9
7. Alarms	10
8. System information menu	11
8.1 Serial number	12
8.2 Alarm buffer	13
8.3 User access (service).....	14
8.4 Log out (service).....	14
8.5 Operation hours & cycle	15
8.6 Status I/O menu	16
8.7 Trend menu	19
8.7.1 Sampling interval (Service)	20
8.7.2 Temperature Trend.....	20
8.7.3 Pressure trend.....	21
8.7.4 USB.....	21
8.7.5 Dew point trend.....	22
8.8 General setting menu.....	23
8.8.1 Timer setting.....	24
8.8.2 Pressure setting	25
8.8.3 Temperatures setting.....	26
8.8.4 Dew point-cycle setting.....	27
8.8.5 Selection stop mode.....	28
8.8.6 Communication setting	30
8.8.7 Languages setting	33
8.8.8 Date/hour setting	34
9. Modbus variables	35
9.1 DESCRIPTION OF MODBUS VARIABLES	35

1. Manufacturer's details

Name and address

Parker Hannifin Manufacturing S.r.l.

Sede Legale:

Via Sebastiano Caboto 1, Palazzina "A" 20094 Corsico (MI) Italy

Sede Operativa:

Gas Separation and Filtration Division EMEA - Strada Zona Industriale, 4

35020 S. Angelo di Piove (PD) Italy

tel +39 049 971 2111- fax +39 049 9701911

Web-site: www.parker.com/

2. About these operating instructions

The present Operating Instructions contain basic information regarding safe operation of the controller and are only valid in conjunction with the manual of the respective dryer. For this reason, the present operating instructions are a supplement to the manual of the dryer.

Characters and symbols used

w Work steps that you have to carry out in the sequence stated are marked by black triangles.

Lists are marked by a small box.

Note:

These notes provide tips for safe and efficient handling of the controller.



Caution!

These safety notes warn against damage to property and help you to avoid such damage.



Danger!

These danger notes with a grey background warn against personal injury and/or danger to life and limb; danger notes help you to avoid serious or life-threatening situations for yourself and/or third parties.

Target group for the present operating instructions

The present operating instructions address all persons who work with and on the controller. We assume that these persons must be expert and qualified technicians.

Operating instructions: handling

These operating instructions must be continuously available at the site where the dryer is used. We recommend to prepare a copy and to keep the same in a safe and freely accessible place next to the dryer. Keep the original document in a safe place.

Supplementary documents

The present Operating Instructions represent a supplement to the manual of the dryer. All notes given there must be heeded, in particular all notes on safety.

Warranty notes

Heed the warranty notes given in the enclosed dryer manual. The statements made there also apply to the controller.

3. Technical data

3.1 Technical features

Touch screen LCD (colors)

Resolution: 7" TFT 16:9 64k 800x480

Operating temperature: from -0° C to a +50° C

Storage temperature: from -20° C to a 70° C

Protection class IP65

Dimensions (L x A x P: 182 x 140 x 95 mm)

Integrated P&ID flowchart

Providing excellent overview

Internal memory

Permanent logging of measured data at 60 seconds minimum

Evaluation and display in curve chart

Possibility to download the recorded data to USB memory without having to open the electrical panel.

Ethernet connection

RJ45 with web service

Communication modules (optional)

Profibus (DPVO; Profinet)

Modbus RTU on RS485 and Modbus TCP/IP on RJ45 (standard)

Analog outputs

2 analog outputs 4-20 mA, Two measuring points can be selected for transmission.

Note

Analogue outputs are not galvanically protected. If required, install an insulated signal amplifier.

Floating contacts


Collective alarm

4. Overview of the operating and display elements

The operating panel in the switch cabinet door is used to check the operating status and to edit parameters. The display is a *Touch Screen Panel*.

4.1 The home screen

The dryer status appears on the display after power on.

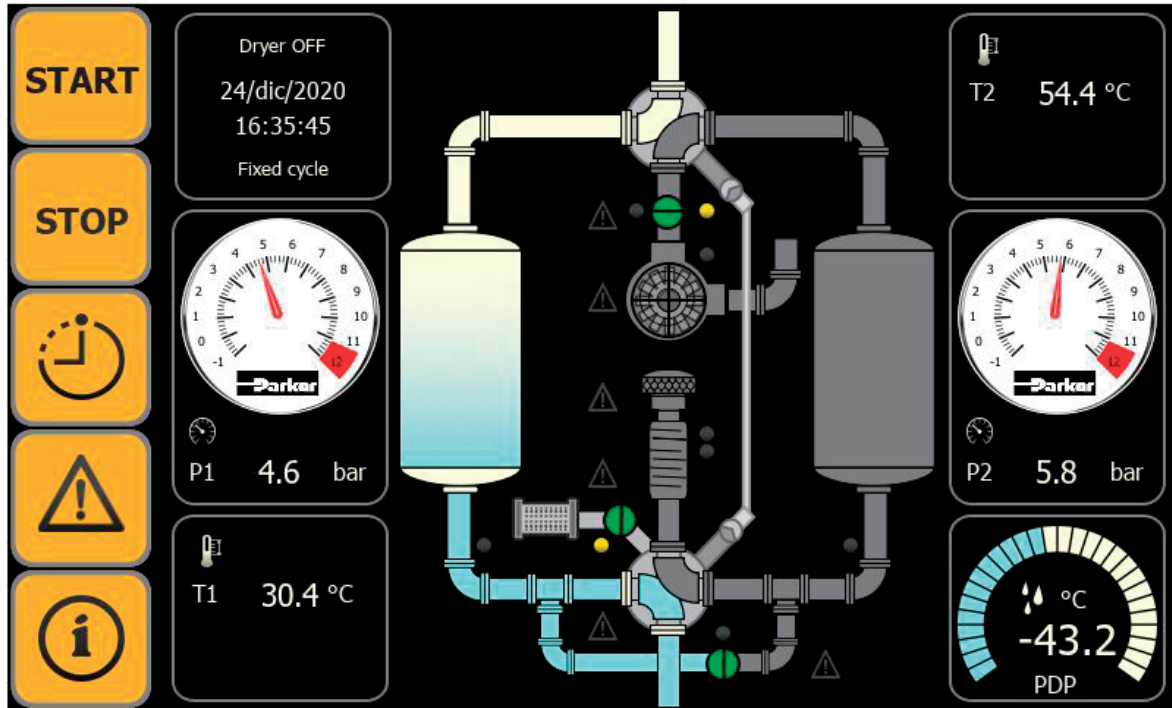

Home screen

The display shows the following values:

the dryer status (ON/OFF), and the current cycle of the vessel


the current vessel pressure in bar (P01/P02)

the measured temperature at resistance thermometers T1 and T2 in °C

the current pressure dewpoint in °C .





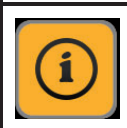
the cycle the dryer is in (fixed or dewpoint-dependent)

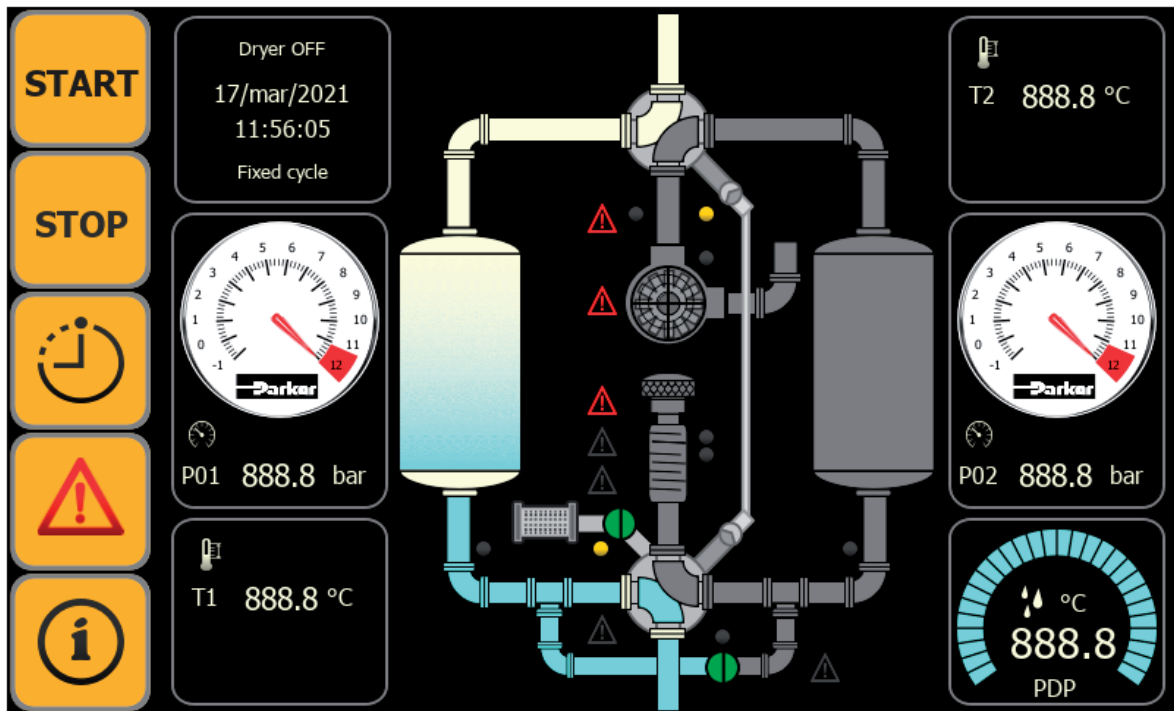





The main display is also the start display for navigation in the menu.

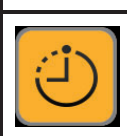

Home screen

The flow chart view provides a graphic overview of the current state of devices and components. Alarms are also attributed to each of the components. The respective component is marked red in the flow chart and an alarm symbol lights up when an error occurs.

	touch to switch on the dryer
	touch to switch off the dryer
	touch to see the machine status (standby, adsorption, regeneration, pressurization...)
	touch to see the activated alarms, the icon blinking when an alarm is present.
	touch to enter in the system menu

 <p>A circular pressure gauge with a white face and black markings. The needle points to 4.6. The brand name 'Parker' is visible at the bottom of the gauge. Below the gauge, the text 'P1 4.6 bar' is displayed.</p>	<p>Shows the pressure vessel N°1</p>
 <p>A circular pressure gauge with a white face and black markings. The needle points to 5.8. The brand name 'Parker' is visible at the bottom of the gauge. Below the gauge, the text 'P2 5.8 bar' is displayed.</p>	<p>Shows the pressure vessel N°2</p>
 <p>A semi-circular display with a blue and yellow arc. The text '°C' is at the top, '-43.2' is in the center, and 'PDP' is at the bottom.</p>	<p>Shows the dew point</p>
 <p>A small square display with a thermometer icon. The text 'T1 30.4 °C' is shown.</p>	<p>Shows the heating temperature T1</p>
 <p>A small square display with a thermometer icon. The text 'T2 54.4 °C' is shown.</p>	<p>Shows the regeneration temperature T2</p>
 <p>A small square display showing the following text: 'Dryer OFF', '24/dic/2020', '16:35:45', and 'Fixed cycle'.</p>	<p>Shows date/hour and dryer condition.</p>

5. Starting and stopping the dryer


Make sure all necessary preparations have been made. For this purpose, follow the attached dryer manual.

The Dryer is equipped with an electrical panel with a main switch that give/remove the supply voltage.

Note


For the correct functioning of the installed valves it is necessary that the system is under pressure! The pressure must be higher than 4 bar (sp).

- w Set the main switch to "I".
- w The display lights up on the main screen.

- w Touch **START**  to start directly the dryer.

The dryer now runs fully automatically according to the stored operating parameters.


Stopping the dryer (stop program)

- w Touch **STOP**  to stop directly the dryer.

6. Timer status


w Touch .

The following display appears:

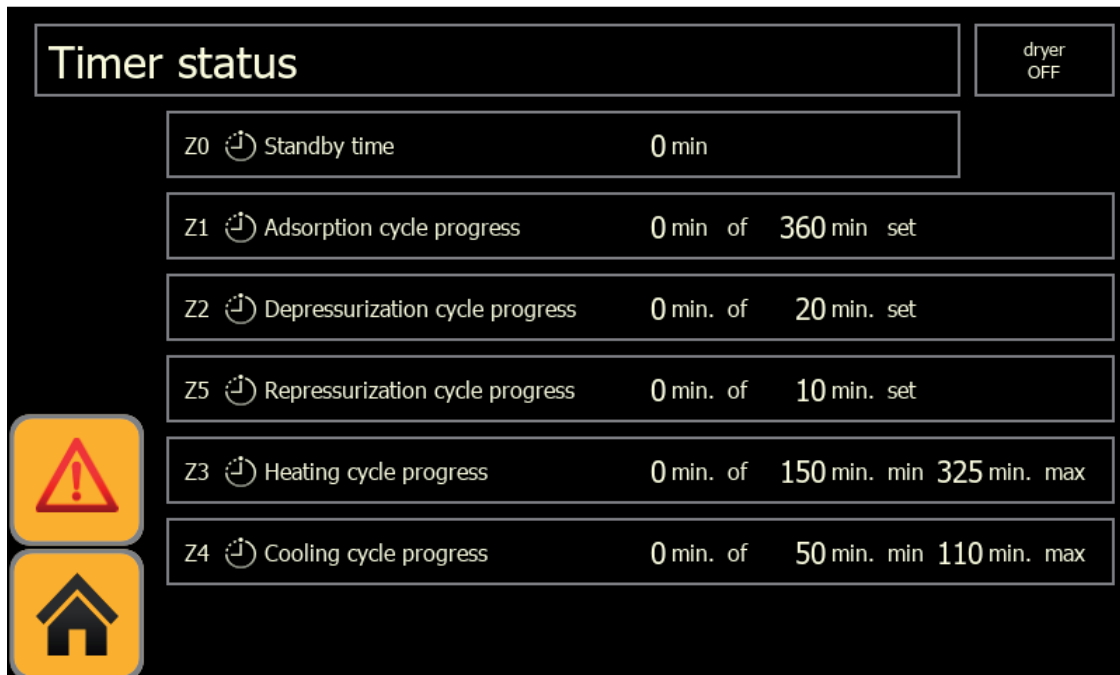

Display: Status timer menu

View the working times of the dryer

w Touch  to return to home screen.

7. Alarms


with Touch .


The following display appears:



Display: Alarms menu

Shows which alarms is present.

Touch  to return on the previous display.

with Touch  to return to home screen.


8. System information menu

The main menu is the entry point for the controller's navigation systematics. You can easily go to any submenu from here. To open the System menu, proceed as follows:







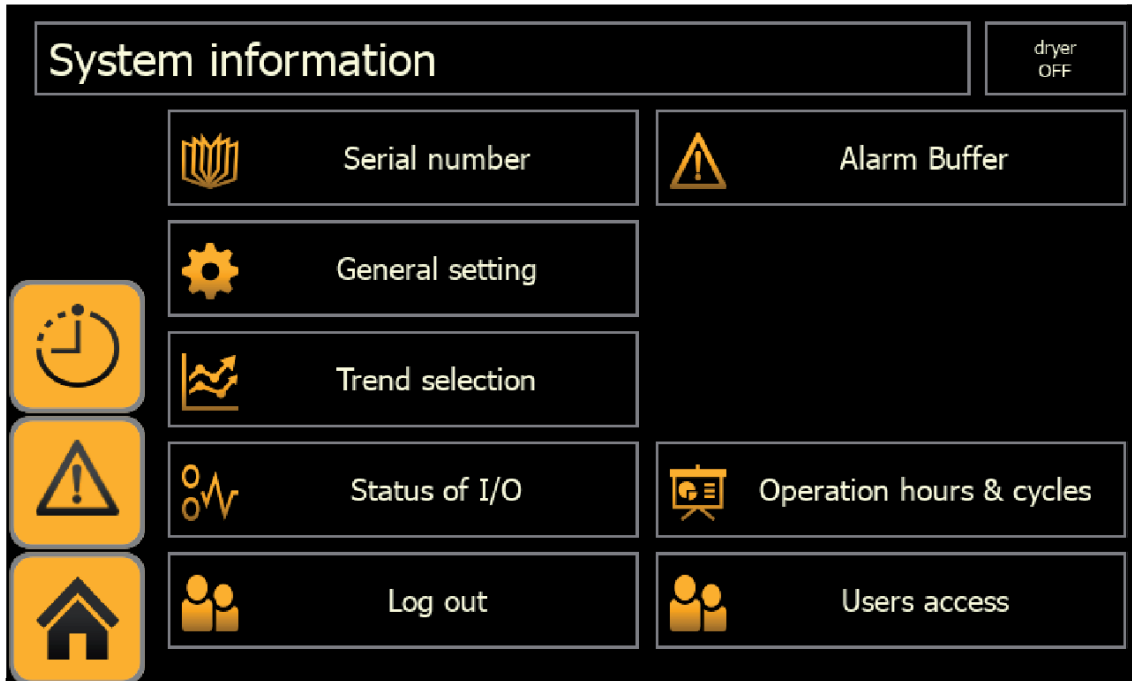



On the main menu touch  .

The following display appears:




Display: System information

Here you can press the respective key to enter the corresponding submenu.

 Serial number	Enter on "serial number " menu: shows release software, serial number, and PLC version.
 General setting	Enter on "General setting" menu: to shwos the parameters and configure the dryer.
 Trend selection	Enter on Graphics menu: pressure / temperature / dew point graphs, data download, deleted data
 Status of I/O	Enter on "status I/O" menu: digital input/output, analogic ouput and set of the analogic output.
 Alarm Buffer	Enter on "Historical alarm" menu.
 Operation hours & cycles	Enter on "work hour" menu: shows work huors of the dryer, vacuum pump and other parameter.
 Users access	For enter on service /maintenance menu
 Log out	For exit from service/maintenance menu

8.1 Serial number

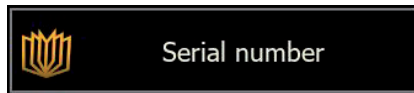


w Touch


Appear the following display:



Display: serial number

View the release software, serial number, and PLC version

w Touch  to return on the previous display.

w Touch  to return to home screen.

8.2 Alarm buffer



w Touch

Appear the following display:

ID	State	Time	Description
aBDP	Not Triggered	07/ago/2015 - 17:37:24	pressure dew point sensor broken
aR1	Not Triggered	07/ago/2015 - 17:49:22	heating sensor broken
aR2	Not Triggered	07/ago/2015 - 17:49:22	regeneration sensor broken
aP02	Not Triggered	07/ago/2015 - 17:49:22	pressure in vessel 2 sensor broken
aTA1	Not Triggered	07/ago/2015 - 17:49:22	current phase 1 sensor broken
aTA3	Not Triggered	07/ago/2015 - 17:49:22	current phase 3 sensor broken
aPH1	Not Triggered	07/ago/2015 - 17:49:22	internal error controller 1
aPH2	Not Triggered	07/ago/2015 - 17:49:22	internal error controller 2
aEV3	Not Triggered	07/ago/2015 - 17:49:22	alarm regeneration valve

Display: alarms history

View the list of alarms over time.

List of alarms fixed cylce (a.r.:automatic reset; m.r.: manual reset)

aR1	heating sensor broken - alarm - a.r.	aLPR	low pressure in vessel in line - alarm - a.r.
aR2	regeneration sensor broken - alarm - a.r.	aTHO	monitoring heater time - warning
aR3	inlet air sensor broken - alarm - a.r.	aWDP	warning high dew point - warning
aR4	outlet air sensor broken - alarm - a.r.	aHDP	alarm high dew point - warning
aP01	pression in vessel 1 sensor broken - alarm - a.r.	aTPR	regeneration valve open - alarm - a.r.
aP02	pression in vessel 2 sensor broken - alarm - a.r.	aPRV	working pressure - alarm - a.r.
aBDP	pressure dew point sensor broken - warning (fixed cyle)	aEM	emergency button (if installed) - alarm - m.r.
aBFM	flow meter sensor broken - warning	aSTM	service time - warning
aTA1	current phase 1 sensor broken - warning	aEV1	generic alarm main valve (if limit switch instal.) - alarm - a.r.
aTA3	current phase 3 sensor broken- warning	aEV3	generic alarm regeneration valve - alarm - a.r.
aB3	ambient temperature sensor broken (if installed)- warning	aEV4	generic alarm pressurization valve - alarm - a.r.
aRH	ambient humidity sensor broken (if installed) - warning	aEV5	generic alarm expansion valve - alarm - a.r.
aR5	used only in W1230 version - alarm - a.r.	aPRS	pressure alarm - alarm - a.r.
aR6	used only in W1230 version - alarm - a.r.	aQF1	vacuum pump motor protection - alarm - a.r.
aPH1	communication expansion 1 alarm (A2) - alarm - a.r.	aTSH	heater safety thermostat - alarm - a.r.
aPH2	communication expansion 2 alarm (A3) - alarm - a.r.		

▶ Touch  to return on the previous display. Touch  to return to home screen.

8.3 User access (service)

w Touch  to enter on factory/maintenance menu.

User name:

Password:


Show password

Only for technical service.

8.4 Log out (service)


w Touch  to exit from factory/maintenance menu.

8.5 Operation hours & cycle

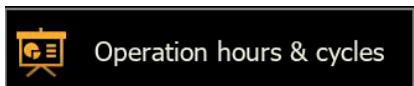

w Touch

Appear the following display:

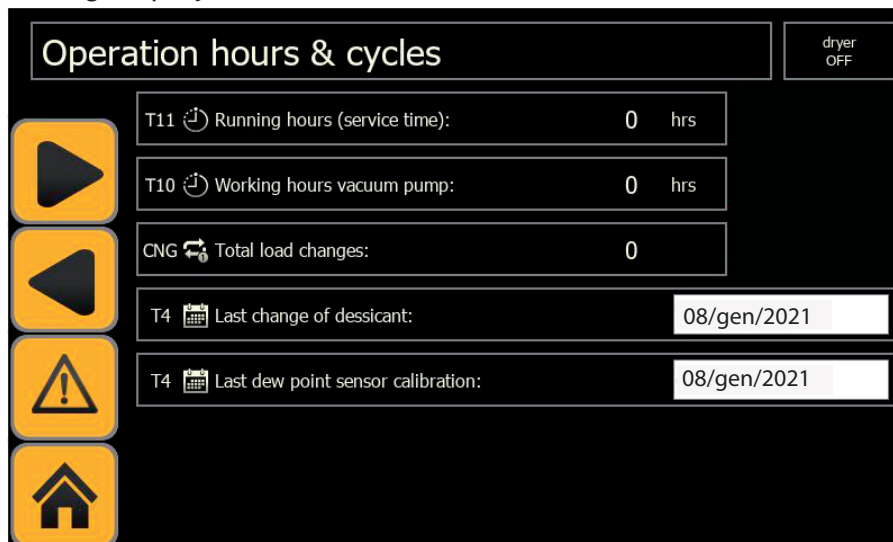


Display: operation hours & cycle 1



w Touch

Appear the following display:

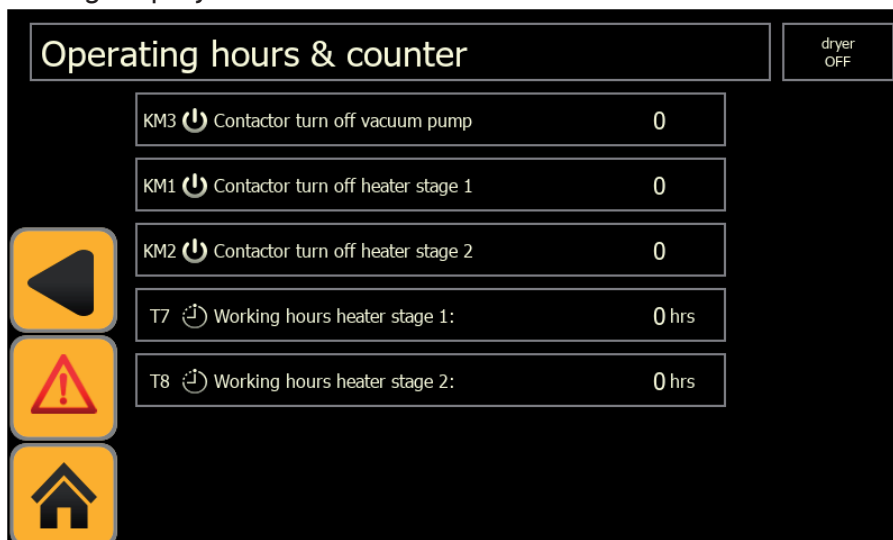

Display: operation hours & cycle 2




w Touch to return on the previous display.




w Touch to return to home screen.

8.6 Status I/O menu

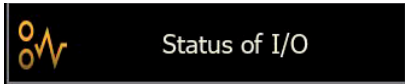

with touch

Appear the following display:

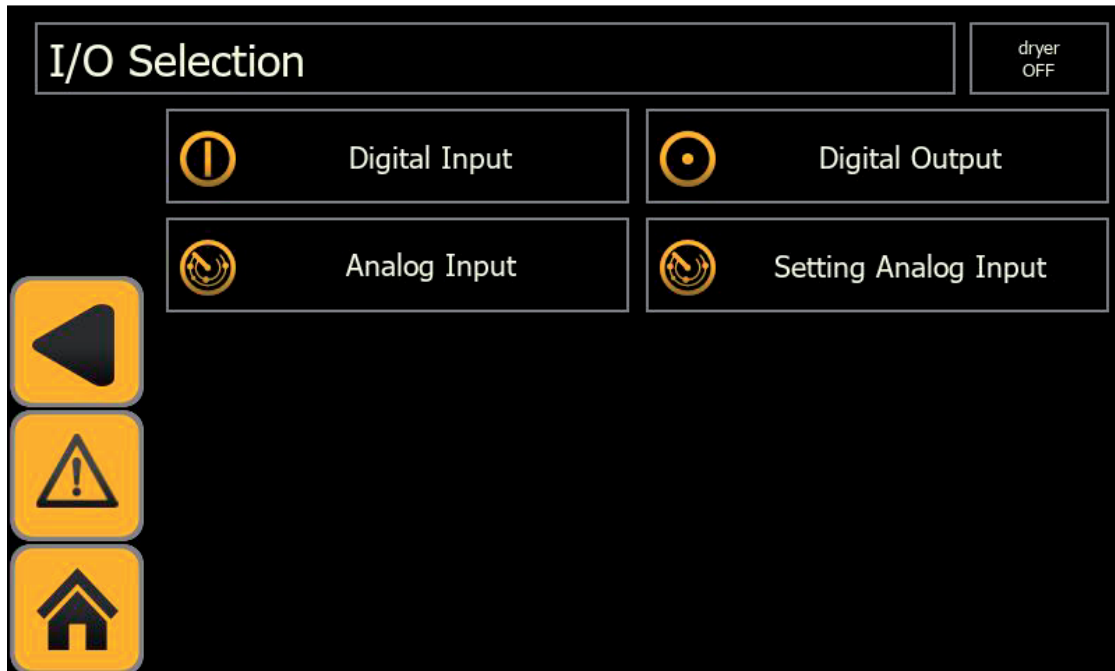


Display: Status I/O

Displays digital and analogue inputs, and the set of analogue inputs.



with touch

Appear the following display:

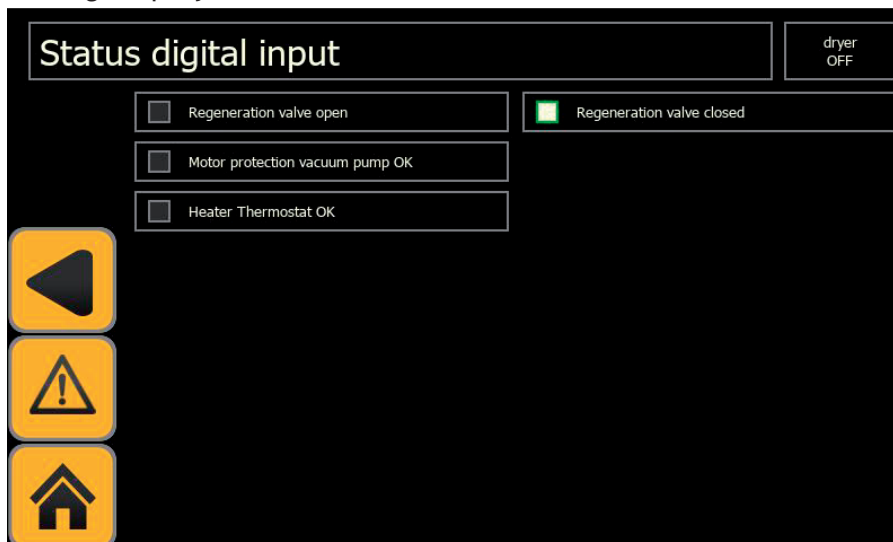


Display: status of digital input





w touch

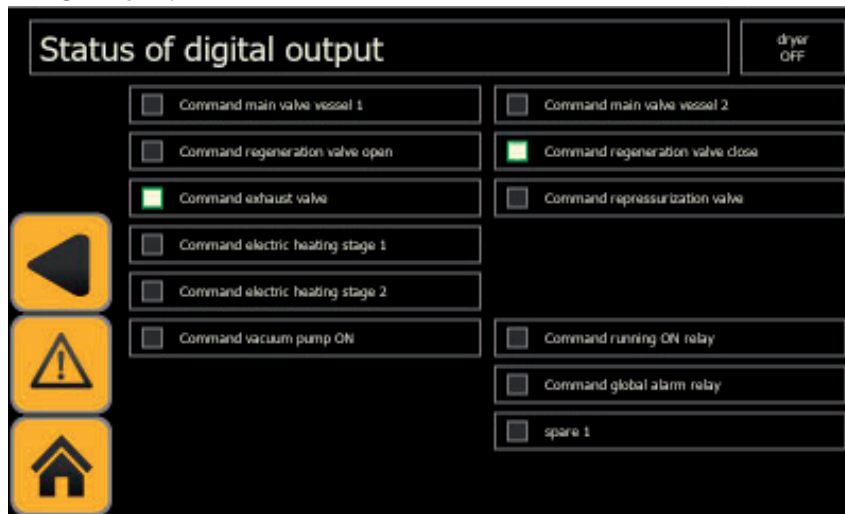
Appear the following display:



Display: status of digital output


w Touch  to return on the previous display.

w Touch  to return to home screen.

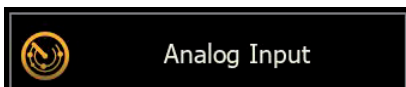


w touch


Appear the following display:

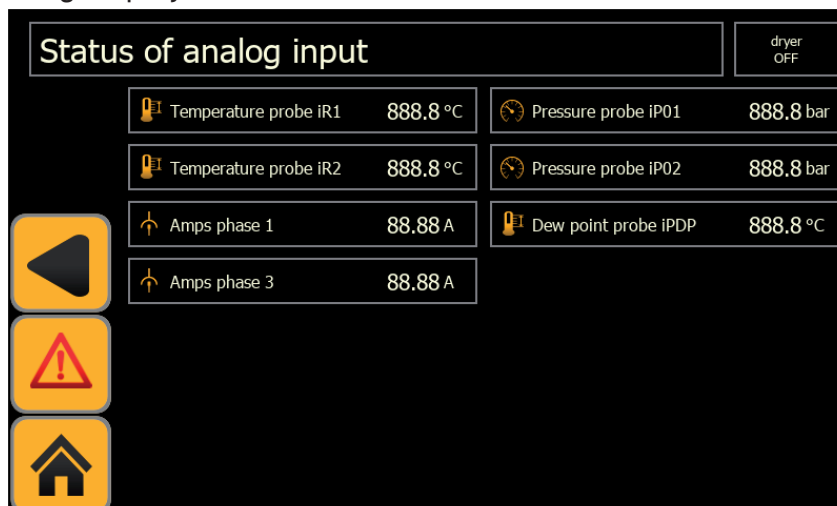


Display: status of analog input

iR1: heating Temperature T1; iR2 : regeneration temperature T2;
 iP01: pressure vessel 1; iP02 pressure vessel 2; iPDP: dew point;

w Touch  to return on the previous display.


w Touch  to return to home screen.

w

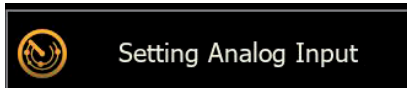

w touch


Appear the following display:

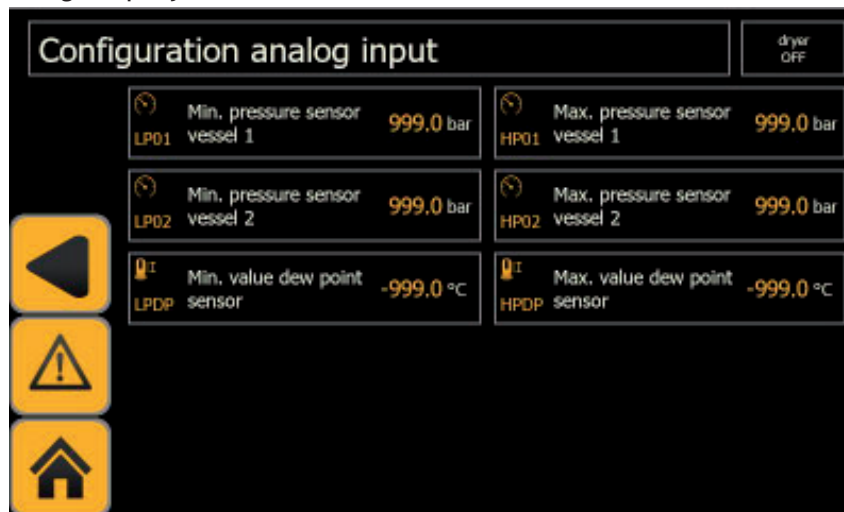


Display: analog input set

w On all these screens it is possible to see which inputs / outputs are enabled, and in particular in the case of analogue inputs it is also possible to see the value and set

w The parameters can only be configured by authorized service person.

w Touch  to return on the previous display.


w Touch  to return to home screen.

8.7 Trend menu





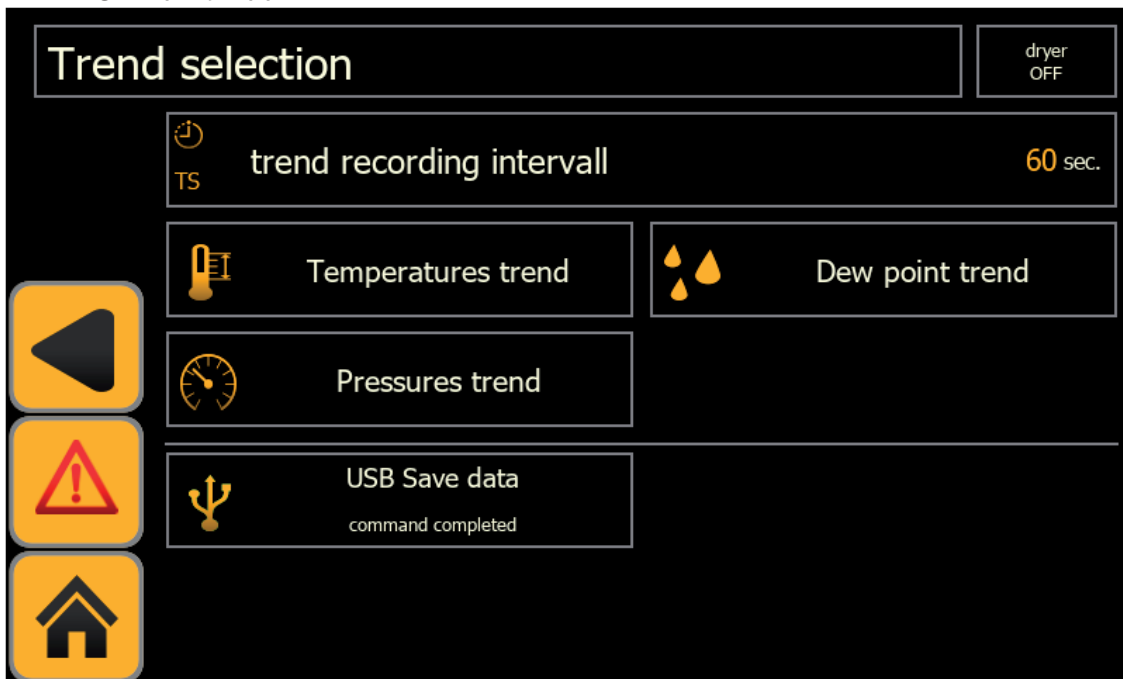


with touch


The following display appears:



Display: Trend selection

 trend recording intervall	Only readable by the user, Adjustable only by technical service (Adjust the sampling time)
 Temperatures trend	Shows the trend of the temperature actual and previous
 Pressures trend	Shows the trend of the pressure actual and previous
 USB Save data command completed	Starts the download on a USB key
 Dew point trend	Shows the trend of the dew point actual and previous

8.7.1 Sampling interval (Service)

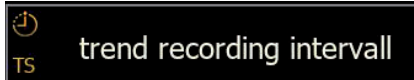

w Touch

Appear a numeric keyboard

w Enter the desired sampling time (minimum=60; maximum=3600 seconds).

w Touch "Enter" to confirm.

the number for the Sampling appears on the left of "trend recording interval".

8.7.2 Temperature Trend



w touch

Appear the graphic




Display: temperature trend

on the left the actual value of temperature: T1(iR1), T2(iR2)


on the right the value of T1(iR1), T2(iR2), read at the red line, use the arrows




to see the values previously recorded by the dryer. The date and time of the recording indicated by the red line is shown at the bottom right.

w Touch  to return on the previous display.

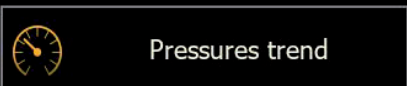

8.7.3 Pressure trend

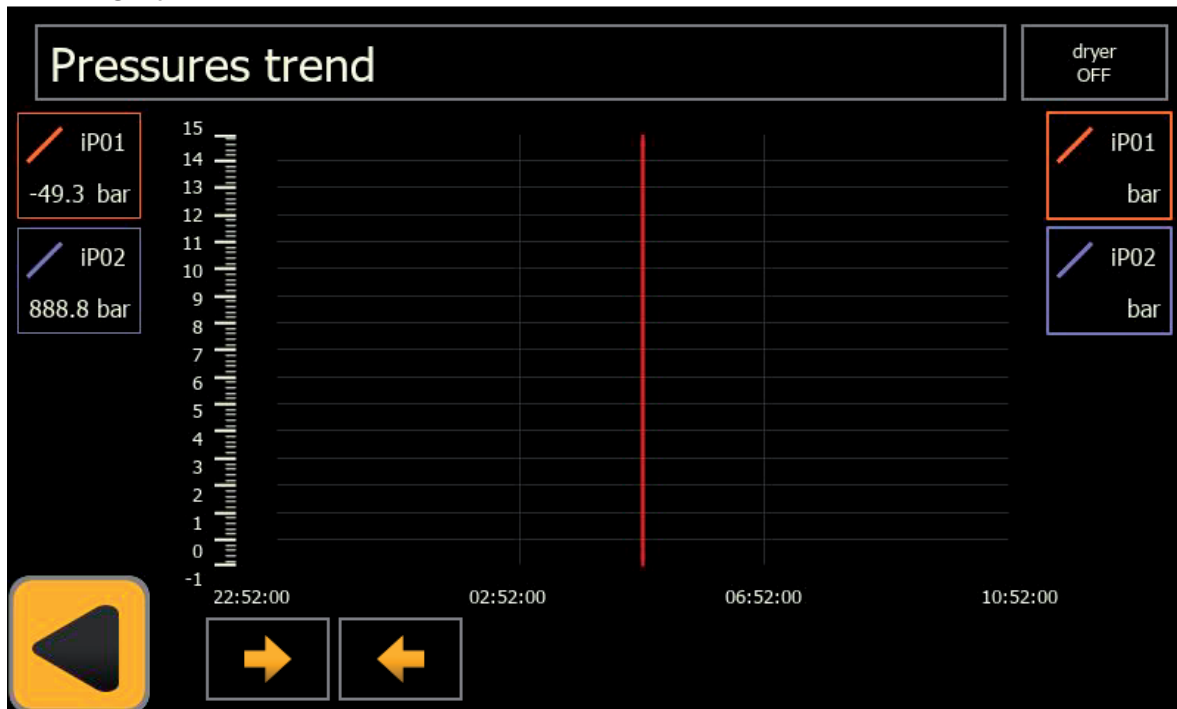
with touch  Pressures trend
Appear the graphic



Display: Pressure trend

on the left the actual value of pressure iP01, iP02 actuali
on the right the value of iP01, iP02 read at the red line, use the arrows

  to see the values previously recorded by the dryer. The date and time of the recording indicated by the red line is shown at the bottom right.


with Touch  to return on the previous display.

8.7.4 USB

Insert the USB drive in the appropriate hole located in the front panel of the electrical panel.

with touch  USB Save data
command completed


Blinking (green) during the saving.
When stop to blink the download is finished.

with Touch  to return on the previous display.

8.7.5 Dew point trend



Appear the graphic

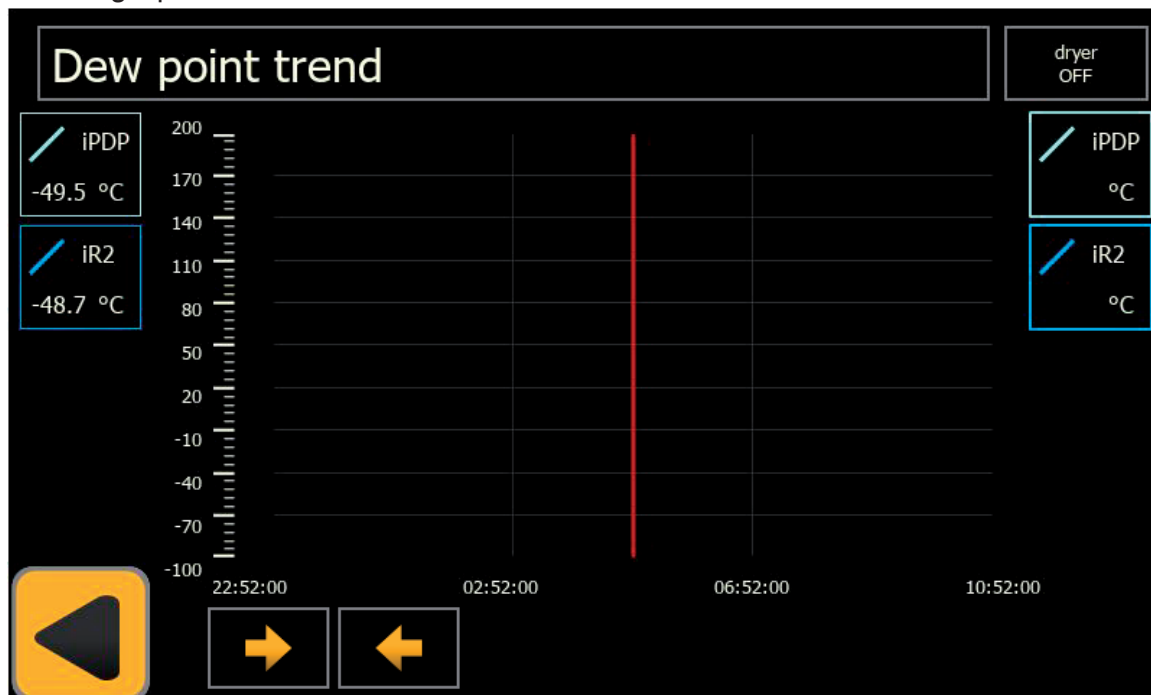


Display: dew point trend

on the left the actual value of dew point and temperature iPDP, T2(iR2)

on the right the value of iPDP, T2(iR2) read at the red line, use the arrows




to see the values previously recorded by the dryer. The date and time of the recording indicated by the red line is shown at the bottom right.






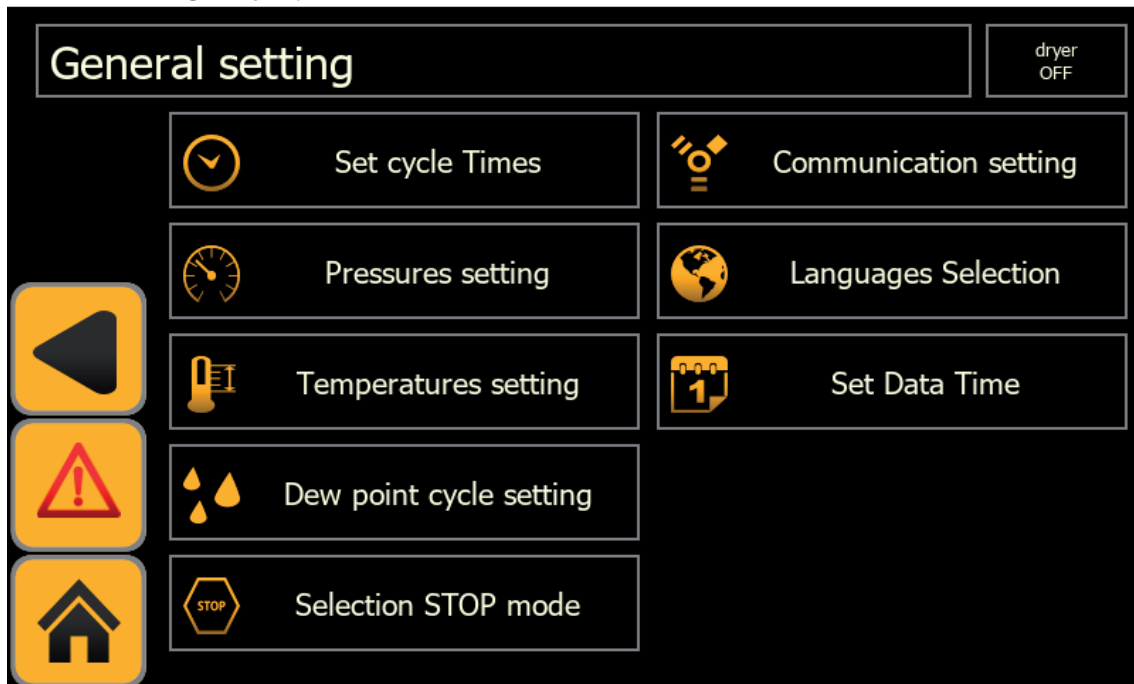


w Touch  to return on the previous display.

8.8 General setting menu


With touch  General setting
Appear the following display



Display: General setting


 Set cycle Times	Shows the set time: heating (fixed, variable), cooling and the heater
 Pressures setting	Shows the pressure min.max. and the actual value of dessicant beds of the vessel.
 Temperatures setting	Shows the set temperature and the actual value of sensor T1 e T2
 Dew point cycle setting	Shows the dew point set, the cycle and the actual value of the dew point.
 Selection STOP mode	Choose the type of the stop.
 Communication setting	Configuration fo the Modbus (RTU/TCP-IP)
 Languages Selection	Choose the language
 Set Data Time	For set date and hour

8.8.1 Timer setting

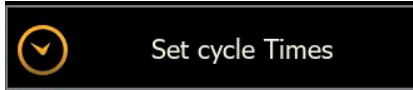

w touch

Appear the following display:

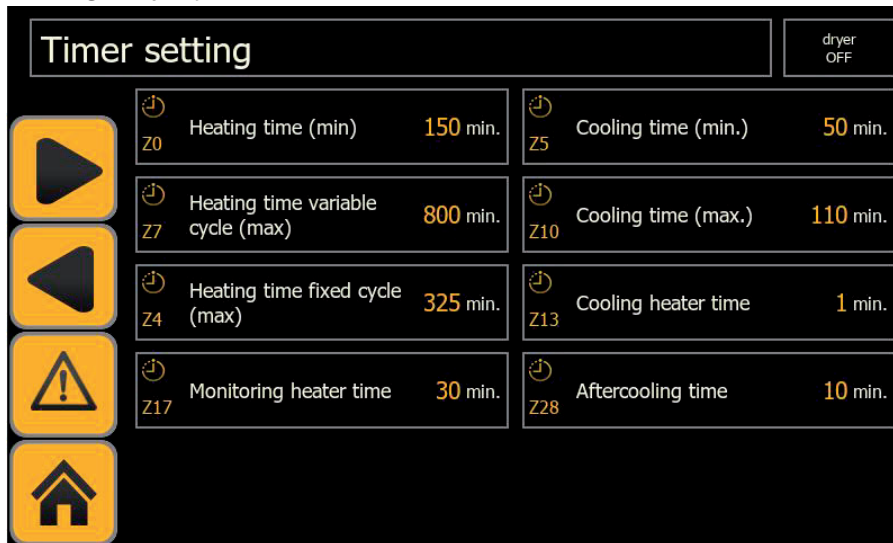


Display: timer setting 1

Parameters only readable.

w Touch

Appear the following display:

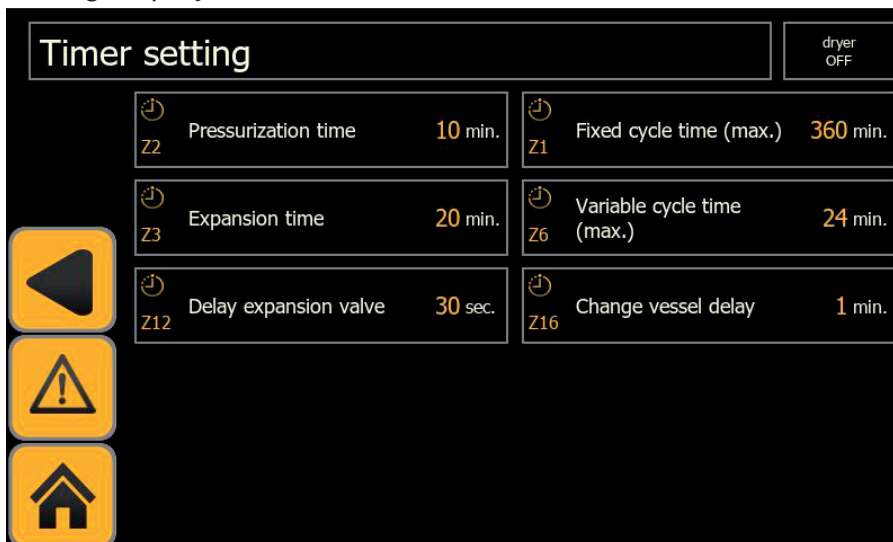

Display: timer setting 2

Appear all cycles timer setting and actual state of the dryer.


Parameters only readable.

w Touch to return on the previous display.


w Touch to return to home screen.

8.8.2 Pressure setting

with touch

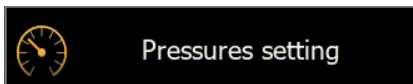

Appears the following display:

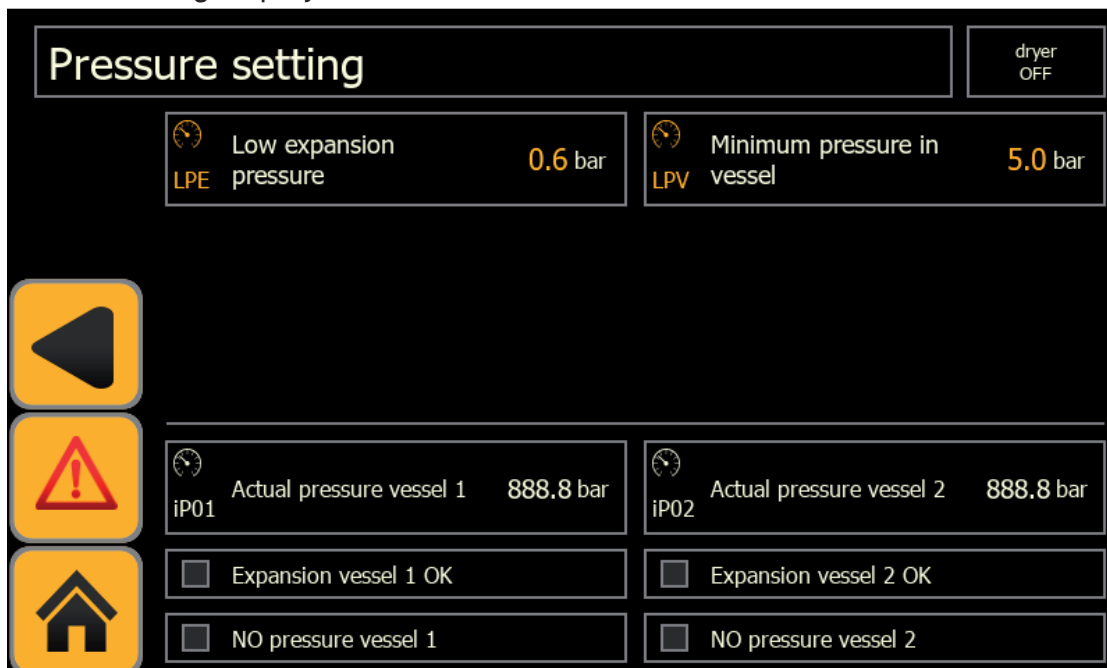


Display: pressure setting

Appears all pressures setting actual state of the dryer.
Parameters only readable.


with Touch  to return on the previous display.







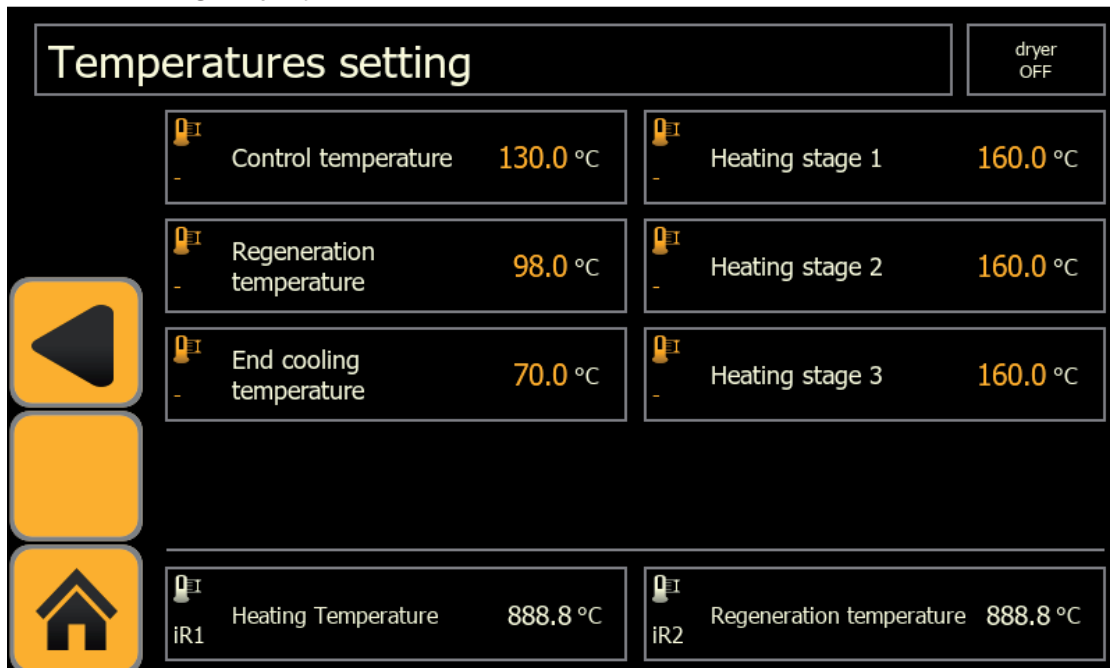


with Touch  to return to home screen.

8.8.3 Temperatures setting

w touch  Temperatures setting


Appear the following display:




Temperatures setting		dryer OFF	
	Control temperature	130.0 °C	
-			Heating stage 1
			160.0 °C
	Regeneration temperature	98.0 °C	
-			Heating stage 2
			160.0 °C
	End cooling temperature	70.0 °C	
-			Heating stage 3
			160.0 °C
		Heating Temperature	
	iR1	888.8 °C	iR2
			Regeneration temperature
			888.8 °C

Display: temperatures setting


Appear all temperatures setting and the actual values of the sensors.
Parameters only readable.

w Touch  to return on the previous display.


w Touch  to return to home screen.

8.8.4 Dew point-cycle setting

w touch

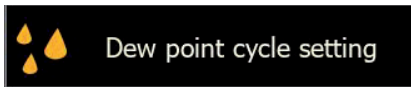


Appear the following display:

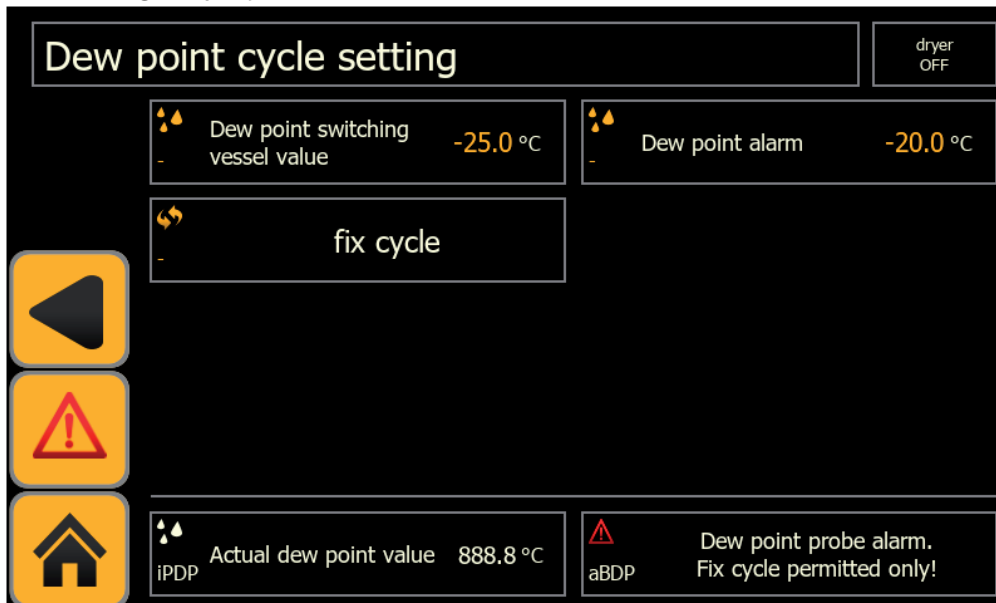

Display: dew point cycle set

Appear the dew point set, type of cycle, option and actual value of the dew point. Some values are changeable, other values are for service personnel.

w Touch "fix cycle" to change the cycle (fixed/variable).

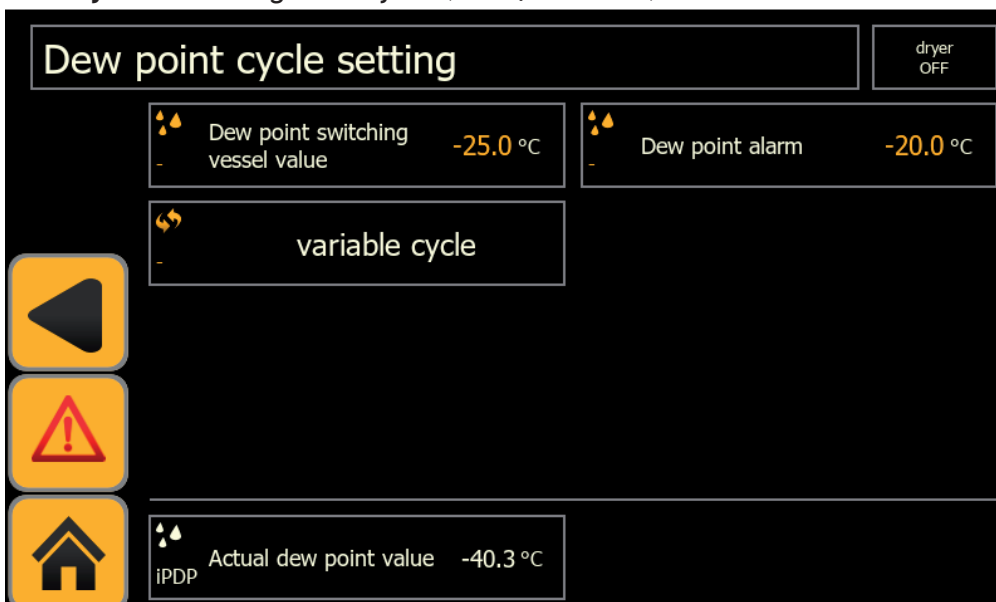


w Touch the parameter to see the numeric keyboard and modify the value. Enter to confirm, so the new value appears on the right of the parameter.

w If sensor dew point is broken, you could only use "fix cycle".

w Touch  to return to the previous display.

w Touch  to return to home screen.

8.8.5 Selection stop mode

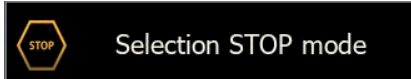

with touch

You could choose these options:



Display: selection Stop Mode

Note:

You should always prefer the “normal stop” function to ensure the current regeneration cycle can be completed before the dryer shuts down.

Note:

Regeneration will be incomplete when the dryer is stopped with “direct stop” in a phase other than the standby phase (e.g. heating or cooling). As a result, the set pressure dew point may initially not be achieved when re-starting. When switching off during the heating stage, the safety thermostat on the heater may be triggered. When re-starting, the dryer then runs without heating and does not regenerate properly.

You can stop the dryer in various ways:

Touch the button “A” to set the condition normal/direct.

Touch the button “B” to set the condition local/remote.

**Local shut down with normal stop
(choose “Normal stop”- “Local”)**

The dryer is switched off directly via the display. The current regeneration cycle terminates before the program stops. The fully regenerated vessel remains unpressurised. The pressure build-up phase only occurs after the dryer was restarted.

- Under these conditions the regeneration solution of one or both tanks is made available. ("Regeneration of both tanks").

Local shut down with immediate stop
(chose "Stop directly"- "Local")

The dryer is also switched off via the display. The program stops immediately, the current cycle is not completed.

Remote shut down with normal stop
(chose "Normal stop"- "Remote")

The dryer is shut down by a control center. The current regeneration cycle will be completed. The fully regenerated vessel remains unpressurised. The pressure build-up phase only occurs after the dryer was restarted.


- Under these conditions the regeneration solution of one or both tanks is made available. ("Regeneration of both tanks").


Remote shut down with direct stop
(chose "Stop directly"- "Local")

The dryer is also shut down by a control center. The program stops immediately, the current cycle is not completed.

Stopping the dryer

w Touch "**touch here to stop**" in the "start/stop" menu or in the flow chart display. On the main display, you could see the deactivation fo the dryer.

w Touch  to return on the previous display.



w Touch  to return to home screen.

8.8.6 Communication setting



with touch



Appear the configuration of the Modbus

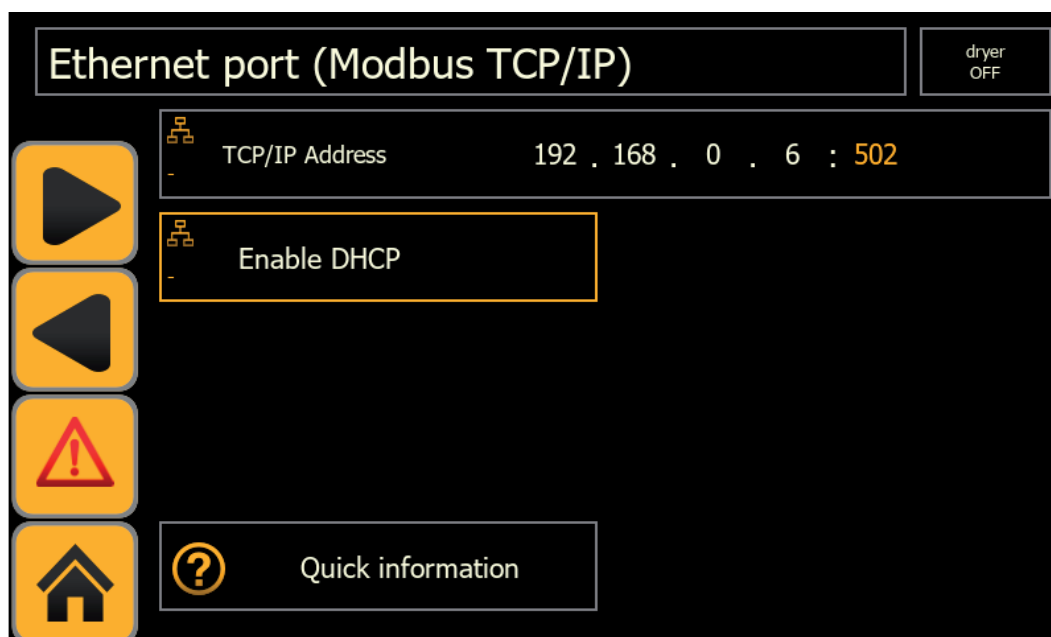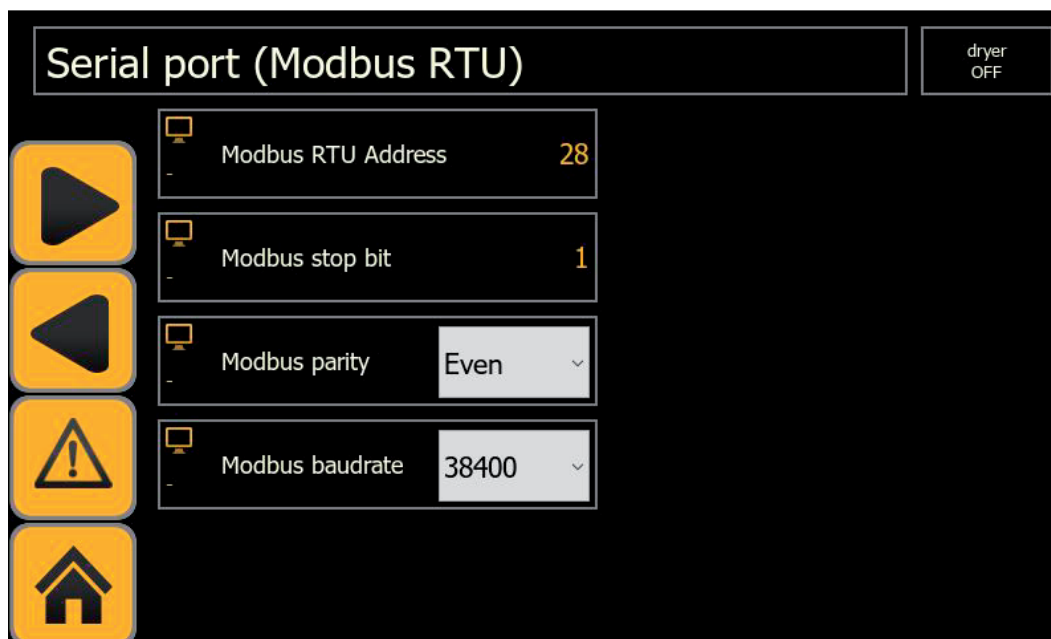

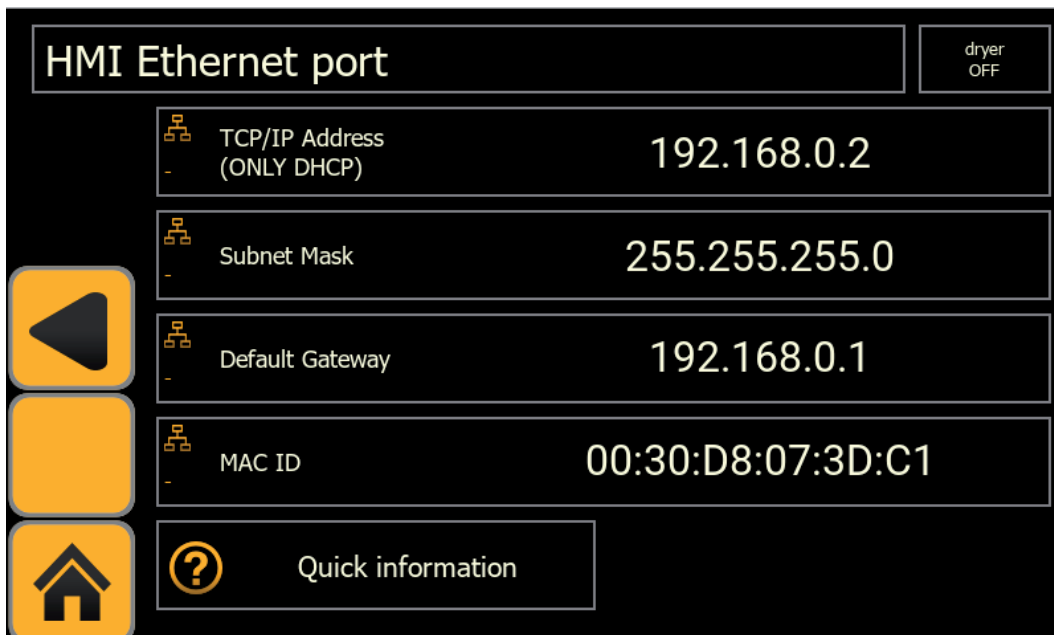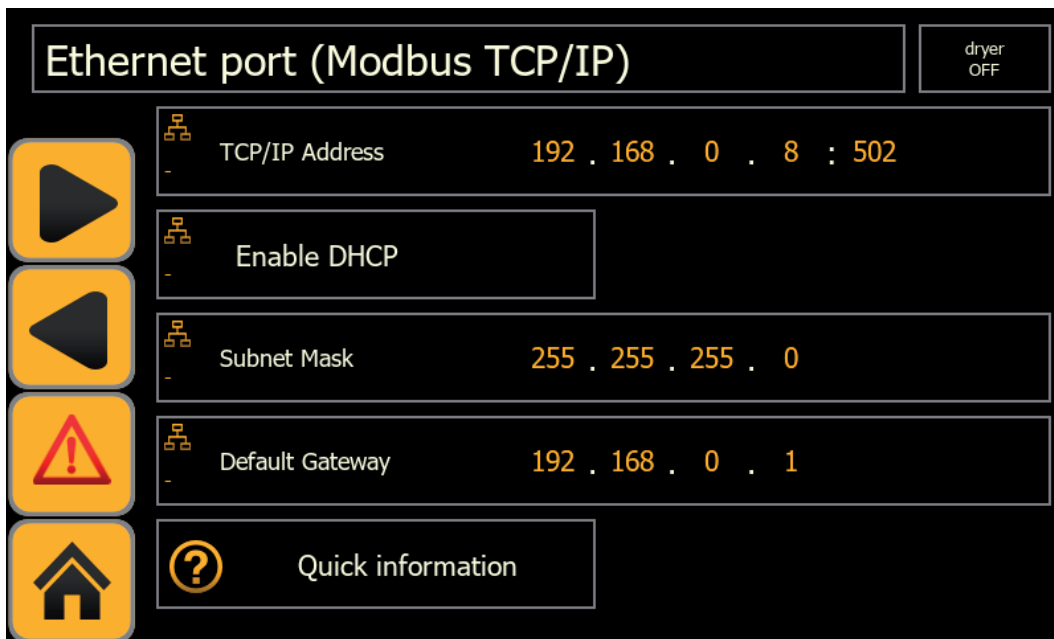

Display: Modbus menu




Display: Modbus menu

- w For Modbus (RTU) it is possible to choose and change each parameter.
- w For Modbus (TCP/IP) it is possible to change Address, Getway and Netmask;
- w If you select “**Enable DHCP**” automatically will be fixed the address.
- w For enable or disable “**Enable DHCP**” it is necessary to switch OFF and ON the dryer (from main switch I/O).


w Touch  to return on the previous display.

w Touch  to return to home screen.


with touch  Quick information to see the TCP/IP connection,

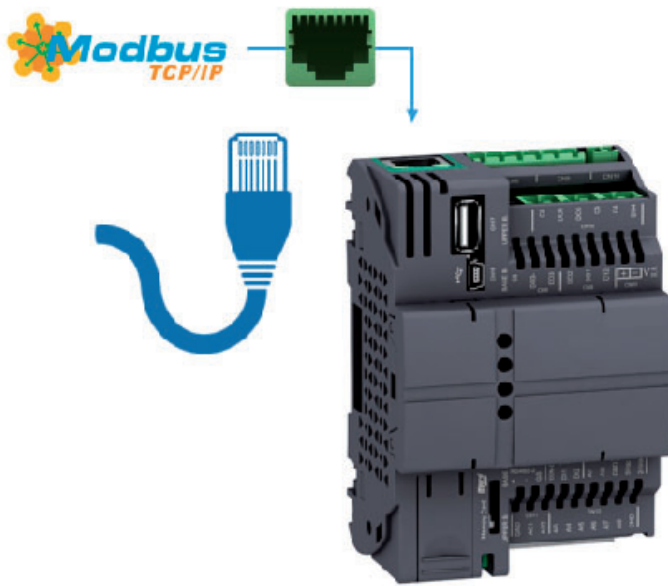

and the cloud connection.

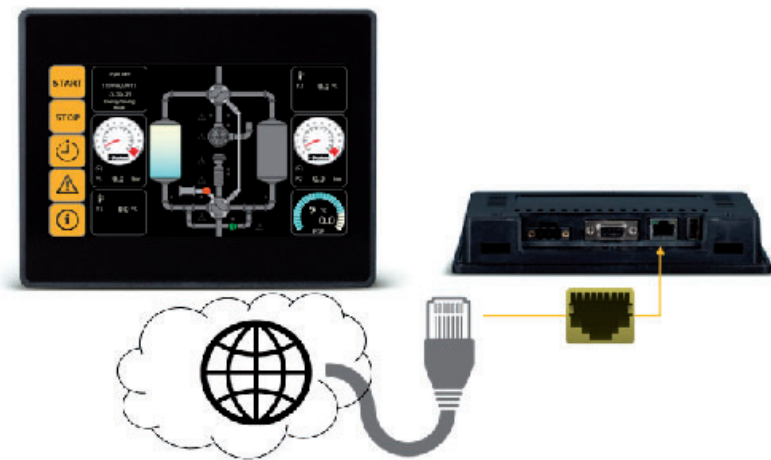


8.8.7 Languages setting


w touch  Languages Selection
Appear the languages available




Display: languages selection

w Touch the language to select it.

w Touch  to return on the previous display.


w Touch  to return to home screen.

8.8.8 Date/hour setting

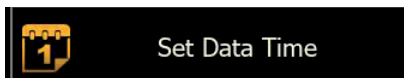

w touch


Appear the following display

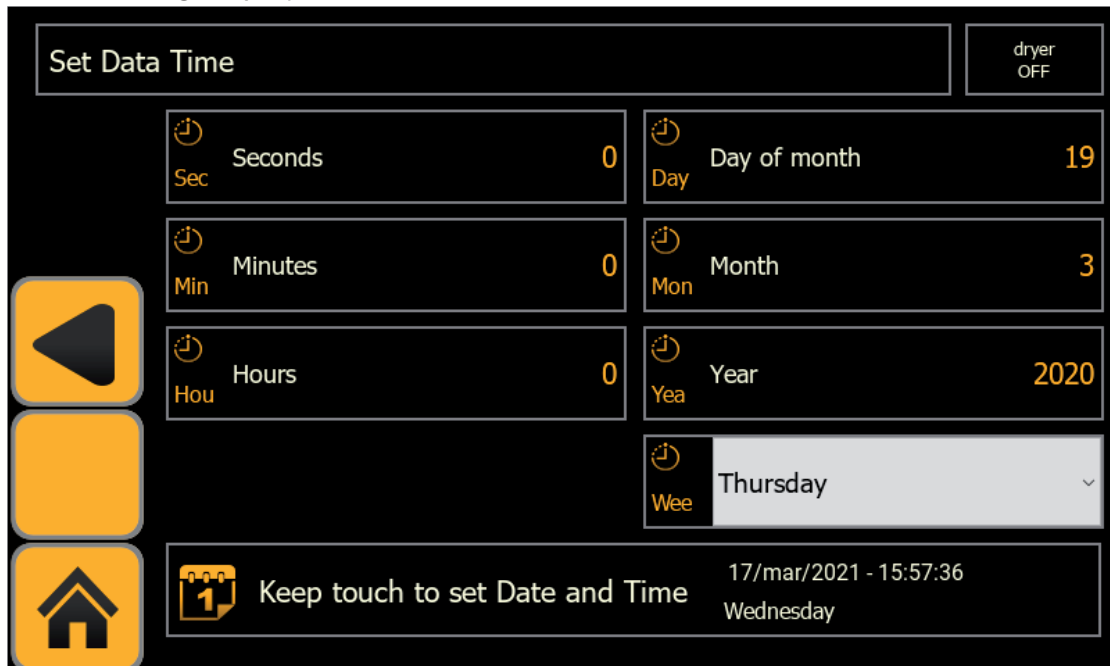


Display: Set data time

w Set hours, minutes, seconds, day, month, year.

w Touch the fields to confirm.

w Touch  to return on the previous display.

w Touch  to return to home screen.

9. Modbus variables

9.1 DESCRIPTION OF MODBUS VARIABLES

The Modbus on WVM 5th generation is Modicon standard (so 1-based addresses).

All the variables are access as Holding register (Modbus function FC03, 40000).

As standard configuration, RS-485 baudrate 19200, 8bit, Even, stop 1 address 16, you can change it by the touch screen. When the standard configuration was change the PLC must be reboot (de-energized).

As standard configuration, IP address 10.0.0.10, port 502, you can change it by the touch screen. When the standard configuration was change the PLC must be reboot (de-energized).

Tag	Adress	Type	Access	Description	u.m.
iVER	8960	UINT	ReadOnly	PLC software version	x
x	8961	INT	ReadOnly	not used	x
x	8962	INT	ReadOnly	not used	x
x	8963	UDINT	ReadOnly	not used	x
x	8965	UDINT	ReadOnly	not used	x
iR1	8967	INT	ReadOnly	current value of heating temperature	1/10 °C
iR2	8968	INT	ReadOnly	current value of regeneration temperature	1/10 °C
iR3	8969	INT	ReadOnly	current value of inlet air temperature	1/10 °C
iR4	8970	INT	ReadOnly	current value of outlet air temperature	1/10 °C
iP01	8971	INT	ReadOnly	current value of pression in vessel 1	bar
iP02	8972	INT	ReadOnly	current value of pression in vessel 2	bar
iPDP	8973	INT	ReadOnly	current value of pressure dew point	1/10 °C
iSp1	8974	INT	ReadOnly	not used	x
iTA1	8975	INT	ReadOnly	current value of total current phase 1	1/10 A
iTA3	8976	INT	ReadOnly	current value of total current phase 3 (if installed)	1/10 A
iB3	8977	INT	ReadOnly	current value of ambient temperature (if installed)	1/10 °C
iRH	8978	INT	ReadOnly	current value of ambient humidity (if installed)	1/10 RH%
iR5	8979	INT	ReadOnly	used only in W1230 version	1/10 °C
iR6	8980	INT	ReadOnly	used only in W1230 version	1/10 °C
x	8981	INT	ReadOnly	not used	x
x	8982	INT	ReadOnly	not used	x
sDI1	8983	WORD	ReadOnly	status of digital input, word 1	x
xLS11	8983.0	BIT	ReadOnly	main valve in vessel 1 (if limit swith installed) - if true	x
xLS12	8983.1	BIT	ReadOnly	main valve in vessel 2 (if limit swith installed) - if true	x
xLS31	8983.2	BIT	ReadOnly	regeneration valve open - if true	x
xLS32	8983.3	BIT	ReadOnly	regeneration valve closed - if true	x
xQVP	8983.4	BIT	ReadOnly	circuit breaker vacuum pump (closed if true)	x
xEH1	8983.5	BIT	ReadOnly	safety thermostat of heater (good if true)	x
xRO	8983.6	BIT	ReadOnly	remote ON/OFF phisical contact (ON if true)	x
xEM	8983.7	BIT	ReadOnly	emergency button (if installed) - good if true	x
x	8983.8	BIT	ReadOnly	not used	x
x	8983.9	BIT	ReadOnly	not used	x

x		8983.10	BIT	ReadOnly	not used	x
x		8983.11	BIT	ReadOnly	not used	x
x		8983.12	BIT	ReadOnly	not used	x
x		8983.13	BIT	ReadOnly	not used	x
x		8983.14	BIT	ReadOnly	not used	x
x		8983.15	BIT	ReadOnly	not used	x
sDI2	8984		WORD	ReadOnly	status of digital input, word 2	x
x		8984.0	BIT	ReadOnly	not used	x
x		8984.1	BIT	ReadOnly	not used	x
x		8984.2	BIT	ReadOnly	not used	x
x		8984.3	BIT	ReadOnly	not used	x
x		8984.4	BIT	ReadOnly	not used	x
x		8984.5	BIT	ReadOnly	not used	x
x		8984.6	BIT	ReadOnly	not used	x
x		8984.7	BIT	ReadOnly	not used	x
x		8984.8	BIT	ReadOnly	not used	x
x		8984.9	BIT	ReadOnly	not used	x
x		8984.10	BIT	ReadOnly	not used	x
x		8984.11	BIT	ReadOnly	not used	x
x		8984.12	BIT	ReadOnly	not used	x
x		8984.13	BIT	ReadOnly	not used	x
x		8984.14	BIT	ReadOnly	not used	x
x		8984.15	BIT	ReadOnly	not used	x
sDO1	8985		WORD	ReadOnly	status of digital output, word 1	x
yEV11		8985.0	BIT	ReadOnly	main valve on vessel 2 - if true	x
yEV12		8985.1	BIT	ReadOnly	main valve on vessel 1 - if true	x
yEV31		8985.2	BIT	ReadOnly	regeneration valve open - if true	x
yEV32		8985.3	BIT	ReadOnly	regeneration valve closed - if true	x
yEV4		8985.4	BIT	ReadOnly	pressurization valve	x
yEV5		8985.5	BIT	ReadOnly	expansion valve	x
yEV6		8985.6	BIT	ReadOnly	steam regeneration valve	x
yEV8		8985.7	BIT	ReadOnly	spare	x
yEV9		8985.8	BIT	ReadOnly	cooling loop valve	x
yKM1		8985.9	BIT	ReadOnly	contactor heater stage 1	x
yKM2		8985.10	BIT	ReadOnly	contactor heater stage 2	x
yKM3		8985.11	BIT	ReadOnly	contactor vacuum pump	x
yKM4		8985.12	BIT	ReadOnly	contactor Ystart (if installed)	x
yKM5		8985.13	BIT	ReadOnly	contactor Dstart (if installed)	x
yAL		8985.14	BIT	ReadOnly	free contact general alarm	x
yON		8985.15	BIT	ReadOnly	dryer is ON	x
sDO2	8986		WORD	ReadOnly	status of digital output, word 2	x
x		8986.0	BIT	ReadOnly	not used	x
x		8986.1	BIT	ReadOnly	not used	x
x		8986.2	BIT	ReadOnly	not used	x
x		8986.3	BIT	ReadOnly	not used	x

x		8986.4	BIT	ReadOnly	not used	x
x		8986.5	BIT	ReadOnly	not used	x
x		8986.6	BIT	ReadOnly	not used	x
x		8986.7	BIT	ReadOnly	not used	x
x		8986.8	BIT	ReadOnly	not used	x
x		8986.9	BIT	ReadOnly	not used	x
x		8986.10	BIT	ReadOnly	not used	x
x		8986.11	BIT	ReadOnly	not used	x
x		8986.12	BIT	ReadOnly	not used	x
x		8986.13	BIT	ReadOnly	not used	x
x		8986.14	BIT	ReadOnly	not used	x
x		8986.15	BIT	ReadOnly	not used	x
sST1	8987		WORD	ReadOnly	status of dryer, word 1	x
bON		8987.0	BIT	ReadOnly	dryer ON (only status)	x
bVAR		8987.1	BIT	ReadOnly	cycle fixed (if true) or dew point depend (if false)	x
bEV11		8987.2	BIT	ReadOnly	main valve in vessel 1 (without hardware feedback) - if true	x
bEXP		8987.3	BIT	ReadOnly	expansion phase - if true	x
bEOK		8987.4	BIT	ReadOnly	expansione finished good - if true	x
bREG		8987.5	BIT	ReadOnly	regeneration phase - if true	x
brG1		8987.6	BIT	ReadOnly	regeneration vessel 1 - if true	x
brG2		8987.7	BIT	ReadOnly	regeneration vessel 2 - if true	x
bHON		8987.8	BIT	ReadOnly	heating phase - if true	x
bCL		8987.9	BIT	ReadOnly	cooling phase - if true	x
bVCL		8987.10	BIT	ReadOnly	vessel cooled - if true	x
bPRS		8987.11	BIT	ReadOnly	pressurization phase - if true	x
bEXV1		8987.12	BIT	ReadOnly	in expansion vessel 1 - if true	x
bEXV2		8987.13	BIT	ReadOnly	in expansion vessel 2 - if true	x
bNV1		8987.14	BIT	ReadOnly	no pressure vessel 1 - if true	x
bNV2		8987.15	BIT	ReadOnly	no pressure vessel 2 - if true	
sST2	8988		WORD	ReadOnly	status of dryer, word 2	x
x		8988.2	BIT	ReadOnly	not used	x
x		8988.2	BIT	ReadOnly	not used	x
x		8988.2	BIT	ReadOnly	not used	x
x		8988.3	BIT	ReadOnly	not used	x
x		8988.4	BIT	ReadOnly	not used	x
x		8988.5	BIT	ReadOnly	not used	x
x		8988.6	BIT	ReadOnly	not used	x
x		8988.7	BIT	ReadOnly	not used	x
x		8988.8	BIT	ReadOnly	not used	x
x		8988.9	BIT	ReadOnly	not used	x
x		8988.10	BIT	ReadOnly	not used	x
x		8988.11	BIT	ReadOnly	not used	x
x		8988.12	BIT	ReadOnly	not used	x
x		8988.13	BIT	ReadOnly	not used	x

x		8988.14	BIT	ReadOnly	not used	x
x		8988.15	BIT	ReadOnly	not used	x
sST3	8989		WORD	ReadOnly	status of dryer, word 3	x
x		8989.0	BIT	ReadOnly	not used	x
x		8989.1	BIT	ReadOnly	not used	x
x		8989.2	BIT	ReadOnly	not used	x
x		8989.3	BIT	ReadOnly	not used	x
x		8989.4	BIT	ReadOnly	not used	x
x		8989.5	BIT	ReadOnly	not used	x
x		8989.6	BIT	ReadOnly	not used	x
x		8989.7	BIT	ReadOnly	not used	x
x		8989.8	BIT	ReadOnly	not used	x
x		8989.9	BIT	ReadOnly	not used	x
x		8989.10	BIT	ReadOnly	not used	x
x		8989.11	BIT	ReadOnly	not used	x
x		8989.12	BIT	ReadOnly	not used	x
x		8989.13	BIT	ReadOnly	not used	x
x		8989.14	BIT	ReadOnly	not used	x
x		8989.15	BIT	ReadOnly	not used	x
sST4	8990		WORD	ReadOnly	status of dryer, word 4	x
x		8990.0	BIT	ReadOnly	not used	x
x		8990.1	BIT	ReadOnly	not used	x
x		8990.2	BIT	ReadOnly	not used	x
x		8990.3	BIT	ReadOnly	not used	x
x		8990.4	BIT	ReadOnly	not used	x
x		8990.5	BIT	ReadOnly	not used	x
x		8990.6	BIT	ReadOnly	not used	x
x		8990.7	BIT	ReadOnly	not used	x
x		8990.8	BIT	ReadOnly	not used	x
x		8990.9	BIT	ReadOnly	not used	x
x		8990.10	BIT	ReadOnly	not used	x
x		8990.11	BIT	ReadOnly	not used	x
x		8990.12	BIT	ReadOnly	not used	x
x		8990.13	BIT	ReadOnly	not used	x
x		8990.14	BIT	ReadOnly	not used	x
x		8990.15	BIT	ReadOnly	not used	x
sAL1	8991		WORD	ReadOnly	status of alarm, word 1	x
aR1		8991.0	BIT	ReadOnly	heating sensor broken	x
aR2		8991.1	BIT	ReadOnly	regeneration sensor broken	x
aR3		8991.2	BIT	ReadOnly	inlet air sensor broken	x
aR4		8991.3	BIT	ReadOnly	outlet air sensor broken	x
aP01		8991.4	BIT	ReadOnly	pression in vessel 1 sensor broken	x
aP02		8991.5	BIT	ReadOnly	pression in vessel 2 sensor broken	x
aPDP		8991.6	BIT	ReadOnly	pressure dew point sensor broken	x
aSp1		8991.7	BIT	ReadOnly	not used	x

aTA1		8991.8	BIT	ReadOnly	current phase 1 sensor broken	x
aTA3		8991.9	BIT	ReadOnly	current phase 3 sensor broken	x
aB3		8991.10	BIT	ReadOnly	ambient temperature sensor broken (if installed)	x
aRH		8991.11	BIT	ReadOnly	ambient humidity sensor broken (if installed)	x
aR5		8991.12	BIT	ReadOnly	used only in W1230 version	x
aR6		8991.13	BIT	ReadOnly	used only in W1230 version	x
aPH1		8991.14	BIT	ReadOnly	internal error controller 1	x
aPH2		8991.15	BIT	ReadOnly	internal error controller 2	x
sAL2	8992		WORD	ReadOnly	status of alarm, word 2	x
aLPR		8992.0	BIT	ReadOnly	low pressure in vessel in line	x
aTHO		8992.1	BIT	ReadOnly	monitoring heater time	x
aWDP		8992.2	BIT	ReadOnly	warning high dew point	x
aPDP		8992.3	BIT	ReadOnly	alarm high dew point	x
aTPR		8992.4	BIT	ReadOnly	regeneration valve open	x
aPRV		8992.5	BIT	ReadOnly	working pressure	x
aEM		8992.6	BIT	ReadOnly	emergency button (if installed)	x
aSTM		8992.7	BIT	ReadOnly	service time	x
aEV1		8992.8	BIT	ReadOnly	generic alarm main valve (if limit swith installed)	x
aEV3		8992.9	BIT	ReadOnly	generic alarm regeneration valve	x
x		8992.10	BIT	ReadOnly	not used	x
aEV5		8992.11	BIT	ReadOnly	generic alarm expansion valve	x
aPRS		8992.12	BIT	ReadOnly	pressure alarm	x
aQVP		8992.13	BIT	ReadOnly	alarm vacuum pump motor protection	x
aTSH		8992.14	BIT	ReadOnly	alarm safety thermostat electrical heater	x
aGL		8992.15	BIT	ReadOnly	general alarm	x
sAL3	8993		WORD	ReadOnly	status of alarm, word 3	x
x		8993.0	BIT	ReadOnly	not used	x
x		8993.1	BIT	ReadOnly	not used	x
x		8993.2	BIT	ReadOnly	not used	x
x		8993.3	BIT	ReadOnly	not used	x
x		8993.4	BIT	ReadOnly	not used	x
x		8993.5	BIT	ReadOnly	not used	x
x		8993.6	BIT	ReadOnly	not used	x
x		8993.7	BIT	ReadOnly	not used	x
x		8993.8	BIT	ReadOnly	not used	x
x		8993.9	BIT	ReadOnly	not used	x
x		8993.10	BIT	ReadOnly	not used	x
x		8993.11	BIT	ReadOnly	not used	x
x		8993.12	BIT	ReadOnly	not used	x
x		8993.13	BIT	ReadOnly	not used	x
x		8993.14	BIT	ReadOnly	not used	x
x		8993.15	BIT	ReadOnly	not used	x
sAL4	8994		WORD	ReadOnly	status of alarm, word 4	x
x		8994.0	BIT	ReadOnly	not used	x
x		8994.1	BIT	ReadOnly	not used	x

x		8994.2	BIT	ReadOnly	not used	x
x		8994.3	BIT	ReadOnly	not used	x
x		8994.4	BIT	ReadOnly	not used	x
x		8994.5	BIT	ReadOnly	not used	x
x		8994.6	BIT	ReadOnly	not used	x
x		8994.7	BIT	ReadOnly	not used	x
x		8994.8	BIT	ReadOnly	not used	x
x		8994.9	BIT	ReadOnly	not used	x
x		8994.10	BIT	ReadOnly	not used	x
x		8994.11	BIT	ReadOnly	not used	x
x		8994.12	BIT	ReadOnly	not used	x
x		8994.13	BIT	ReadOnly	not used	x
x		8994.14	BIT	ReadOnly	not used	x
x		8994.15	BIT	ReadOnly	not used	x
cWd1	8995		WORD	Read/Write	command word 1	x
x		8995.0	BIT	Read/Write	not used	x
x		8995.1	BIT	Read/Write	not used	x
x		8995.2	BIT	Read/Write	not used	x
cHRS		8995.3	BIT	Read/Write	reset working hours	x
cSTM		8995.4	BIT	Read/Write	reset service time	x
cHVP		8995.5	BIT	Read/Write	reset hours vacuum pump	x
cCNG		8995.6	BIT	Read/Write	reset counter change vessel	x
cES1		8995.7	BIT	Read/Write	reset counter expansion vessel 1	x
cES2		8995.8	BIT	Read/Write	reset counter expansion vessel 2	x
cKVP		8995.9	BIT	Read/Write	reset counter contactor vacuum pump	x
cKH1		8995.10	BIT	Read/Write	reset counter contactor heater stage 1	x
cKH2		8995.11	BIT	Read/Write	reset counter contactor heater stage 2	x
cHH1		8995.12	BIT	Read/Write	reset hours heater stage 1	x
cHH2		8995.13	BIT	Read/Write	reset hours heater stage 2	x
cHHS		8995.14	BIT	Read/Write	reset hours steam heater	x
x		8995.15	BIT	Read/Write	not used	x
cWd2	8996		WORD	Read/Write	command word 2	x
x		8996.0	BIT	Read/Write	not used	x
x		8996.1	BIT	Read/Write	not used	x
x		8996.2	BIT	Read/Write	not used	x
x		8996.3	BIT	Read/Write	not used	x
x		8996.4	BIT	Read/Write	not used	x
x		8996.5	BIT	Read/Write	not used	x
x		8996.6	BIT	Read/Write	not used	x
x		8996.7	BIT	Read/Write	not used	x
x		8996.8	BIT	Read/Write	not used	x
x		8996.9	BIT	Read/Write	not used	x
x		8996.10	BIT	Read/Write	not used	x
x		8996.11	BIT	Read/Write	not used	x
x		8996.12	BIT	Read/Write	not used	x

x		8996.13	BIT	Read/Write	not used	x
x		8996.14	BIT	Read/Write	not used	x
x		8996.15	BIT	Read/Write	not used	x
sT0	8997		UINT	ReadOnly	time of standby in current cycle	hrs
sT1	8998		UINT	ReadOnly	time of adsorption in current cycle	hrs
sT2	8999		UINT	ReadOnly	time of expansion in current cycle	min
sT3	9000		UINT	ReadOnly	time of heating in current cycle	min
sT4	9001		UINT	ReadOnly	time of cooling in current cycle	min
sT5	9002		UINT	ReadOnly	time of pressurization in current cycle	min
sT6	9003		UDINT	ReadOnly	hours working of dryer	hrs
sT7	9005		UDINT	ReadOnly	hours working heater stage 1	hrs
sT8	9007		UDINT	ReadOnly	hours working heater stage 2 (if installed)	hrs
sT9	9009		UDINT	ReadOnly	hours working steam stage (with optional steam regeneration)	hrs
sT10	9011		UDINT	ReadOnly	hours working of vacuum pump	hrs
sT11	9013		UDINT	ReadOnly	hours count down service time	hrs
sKM1	9015		UDINT	ReadOnly	number of switch off contactor heater stage 1	n x100
sKM2	9017		UDINT	ReadOnly	number of switch off contactor heater stage 2 (if installed)	n x100
sKM3	9019		UDINT	ReadOnly	number of switch off contactor vacuum pump	n x100
sEX1	9021		UINT	ReadOnly	number of expansion vessel 1	n
sEX2	9022		UINT	ReadOnly	number of expansion vessel 2	n
sCHG	9023		UINT	ReadOnly	number of change of vessels	n
sSH1	9024		INT	ReadOnly	set (read only) of heating temperature stage 1	1/10 °C
sSH2	9025		INT	ReadOnly	set (read only) of heating temperature stage 2	1/10 °C
sSH3	9026		INT	ReadOnly	set (read only) of heating temperature stage 3	1/10 °C
sSRT	9027		INT	ReadOnly	set (read only) of regeneration temperature	1/10 °C
sSCO	9028		INT	ReadOnly	set (read only) of end cooling temperature	1/10 °C
setWd1	16387		WORD	Read/Write	set word 1	x
x		16387.0	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.1	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.2	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.3	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.4	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.5	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.6	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.7	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.8	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.9	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.10	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.11	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.12	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.13	BIT	Read/Write	reserviert darf nicht verwendet werden	x
x		16387.14	BIT	Read/Write	reserviert darf nicht verwendet werden	x
cmdON		16387.15	BIT	Read/Write	comand ON/OFF dryer (true is ON or false is OFF)	x



A division of Parker Hannifin Corporation

Parker Hannifin Manufacturing S.r.l.

Sede Legale:

Via Sebastiano Caboto 1, Palazzina "A" 20094 Corsico (MI) Italy

Sede Operativa:

Gas Separation and Filtration Division EMEA - Strada Zona Industriale, 4

35020 S. Angelo di Piove (PD) Italy

tel +39 049 971 2111- fax +39 049 9701911

Web-site: www.parker.com