



# THERM-A-GAP™ GEL 75 Reliability Report

## TR1103 March 2022 Rev. B

Chomerics Division of Parker Hannifin  
77 Dragon Court, Woburn, MA 01888  
(781) 939-4623

### **WARNING – USER RESPONSIBILITY**

**FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.**

This document and other information from Parker-Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors. To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.

## Executive Summary

THERM-A-GAP™ GEL 75 is a high-performance, one-component, fully-cured dispensable thermally conductive gel. The paste-like consistency enables superior performance and long-term thermal stability. This material is designed to be dispensed in applications requiring low compressive forces and minimal thermal resistance for maximal thermal performance. This document outlines the examination of the thermal reliability of this high-performance gap filler after being subjected to long-term environmental aging under dry heat, heat & humidity conditions, and temperature cycling from -40°C to 125°C.

The thermal performance of THERM-A-GAP™ GEL 75 was examined after being subjected to multiple environmental stress tests. The thermal impedance of the aged samples did not experience a significant increase after any of the treatments studied. After 1000-hour dwell at 125°C, 1000 hours at 85°C/85% relative humidity, and 1000 temperature cycles from -40°C to 125°C, there was no statistically significant change in impedance according to one-way ANOVA with the Tukey method for multiple comparisons. The mean value for thermal impedance decreased slightly for each aging treatment, indicating an improvement in thermal performance.

For vibration testing GEL 75 was dispensed and compressed at 0.010" and 0.040" gap thicknesses. Post compression, samples were subjected to an overall power spectral density of 2.0 grms while being subjected to a thermal cycling profile that reached a minimum temperature of -40°C and maximum temperature of 105°C.

The results show minimal displacement / cracking of the gel samples from their original compressed location within the test fixture.

Based on these results, THERM-A-GAP™ GEL 75 demonstrates the ability to withstand long-term aging without a reduction in performance.

## 1.0 Introduction

The purpose of this document is to examine the thermal reliability of this high-performance thermal gel. Samples of production-scale batches were subjected to long-term aging conditions, and the thermal performance was measured over time.

Successful survival of long-term aging is demonstrated by a lack of statistically significant increase in thermal impedance of the reliability fixtures after the full aging duration. The reliability fixtures comprise GEL 75 sandwiched between two stainless-steel coupons, with thickness set by PTFE spacers. It is worth noting that the exact impedance value of the reliability fixture is not representative of the impedance value of the thermal interface material itself, but it can be used to measure changes to thermal performance over time.

## 2.0 Long-Term Aging

### 2.1. Purpose

Long-term aging was performed on GEL 75 between stainless-steel substrates to evaluate the reliability of thermal performance over time. The material was subjected to an extended dwell time of 1000 hours at 125°C, 1000 cycles of temperature cycling from -40°C to 125°C, and long-term heat and humidity aging at 85°C and 85% relative humidity.

### 2.2. Materials

- 2.2.1. Twenty-four 1" x 1" x 0.040" 316 stainless-steel coupons.
- 2.2.2. PTFE shims, 0.040" thick.
- 2.2.3. Twenty-four clamps.
- 2.2.4. Russells Humidity Chamber GD-16-3-3-AC.
- 2.2.5. Sun Electronics Systems PTL-001 Temperature Cycling System.

### 2.3. Sample Preparation

- 2.3.1. 2.5 g samples of GEL 75 were dispensed onto the center of each stainless-steel coupon.
- 2.3.2. The 0.040" PTFE shims were placed at each corner of the coupon.
- 2.3.3. A second stainless-steel coupon was placed on top of the dispensed material.
- 2.3.4. Two clamps were placed onto the assembly to hold the substrates at a constant thickness of 0.040".
- 2.3.5. The above procedure was performed for all 12 sample assemblies.

### 2.4. Test Procedure

- 2.4.1. The assemblies were removed from their clamps and one drop of 500 cSt silicone oil was applied by pipette to the outside of each stainless-steel substrate.

- 2.4.2. The samples were tested initially for thermal impedance at 50°C and 100 psi per ASTM D5470.
- 2.4.3. After testing each assembly, the silicone oil was gently removed from the surfaces and the clamps were placed back onto the assemblies.
- 2.4.4. Four assemblies were subjected to each aging condition:
- 2.4.4.1. Dry heat aging: oven at 125°C.
  - 2.4.4.2. Heat/humidity aging: humidity chamber at 85°C, 85% relative humidity.
  - 2.4.4.3. Temperature cycling: thermal cycling chamber from -40°C to 125°C; 10°C/min ramp; 15-minute dwell.
- 2.4.5. After 250 hours of dry heat or heat/humidity aging, or 250 temperature cycles, the samples were removed from their respective environments, allowed to equilibrate at room temperature for at least two hours, and re-tested for thermal impedance.
- 2.4.6. Once tested, the samples were returned to their respective aging environments and the aging intervals were repeated until the samples had been subjected to a total of 1000 hours of dry heat or heat/humidity aging, or 1000 temperature cycles.

## 2.5. Results

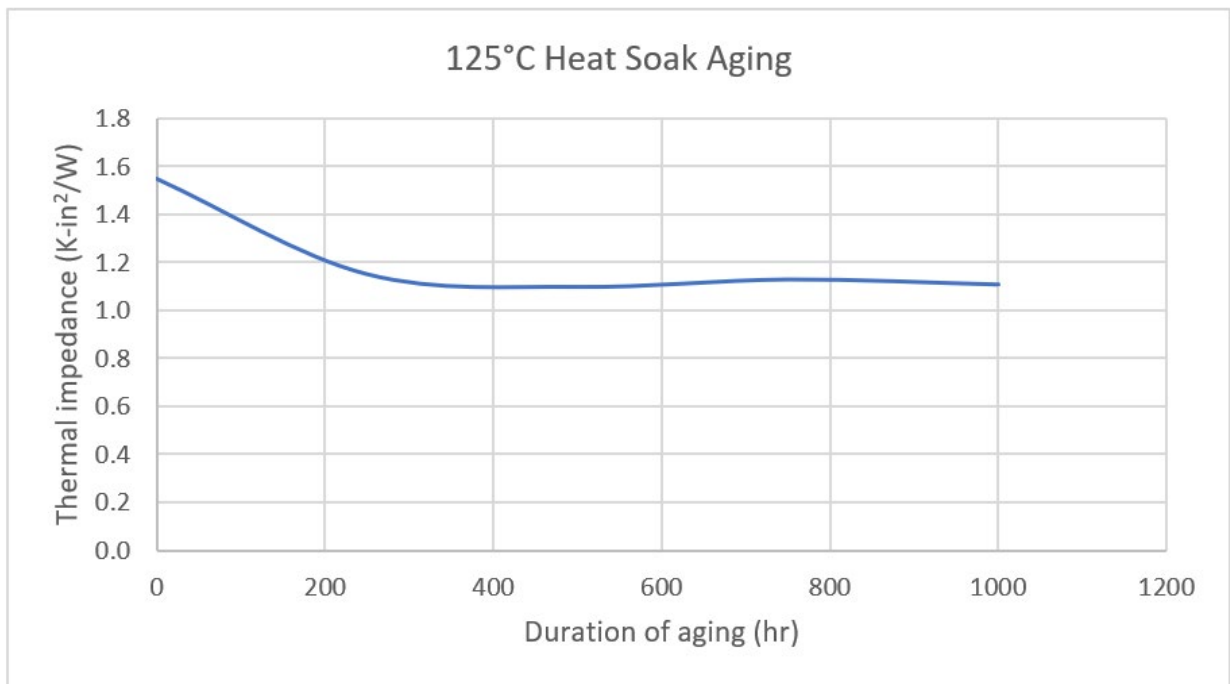


Figure 1: Dry heat aged thermal impedance versus time

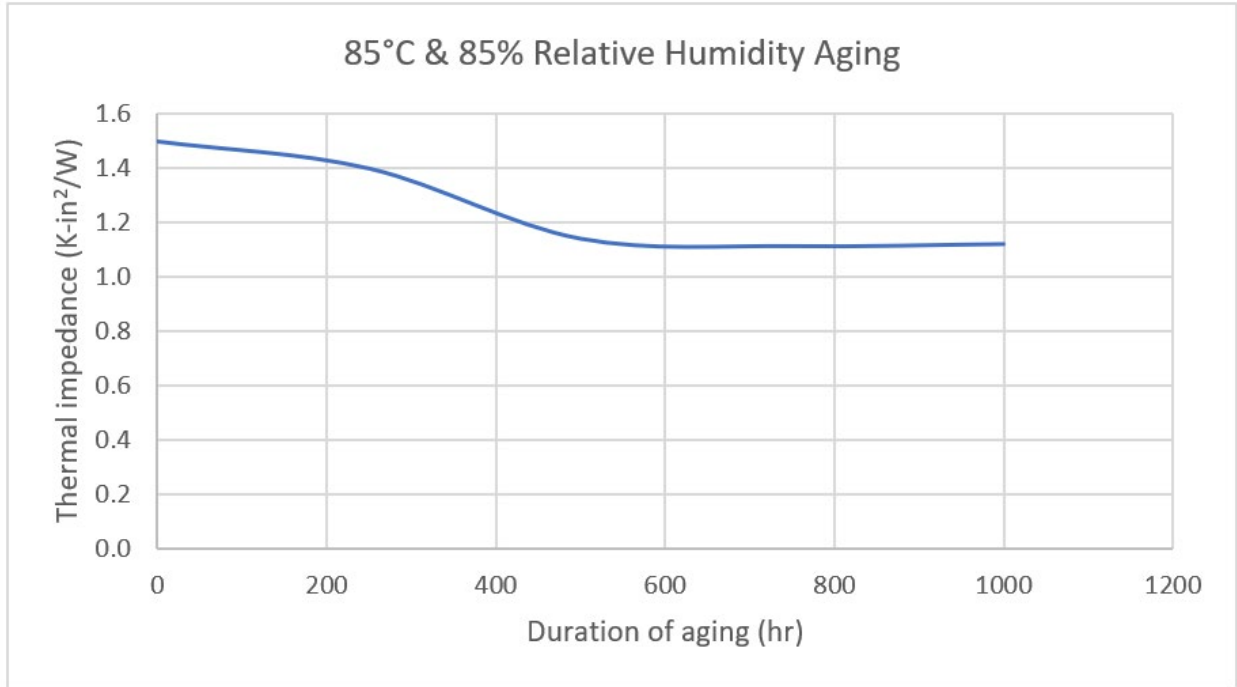


Figure 2: Heat & humidity aged thermal impedance versus time

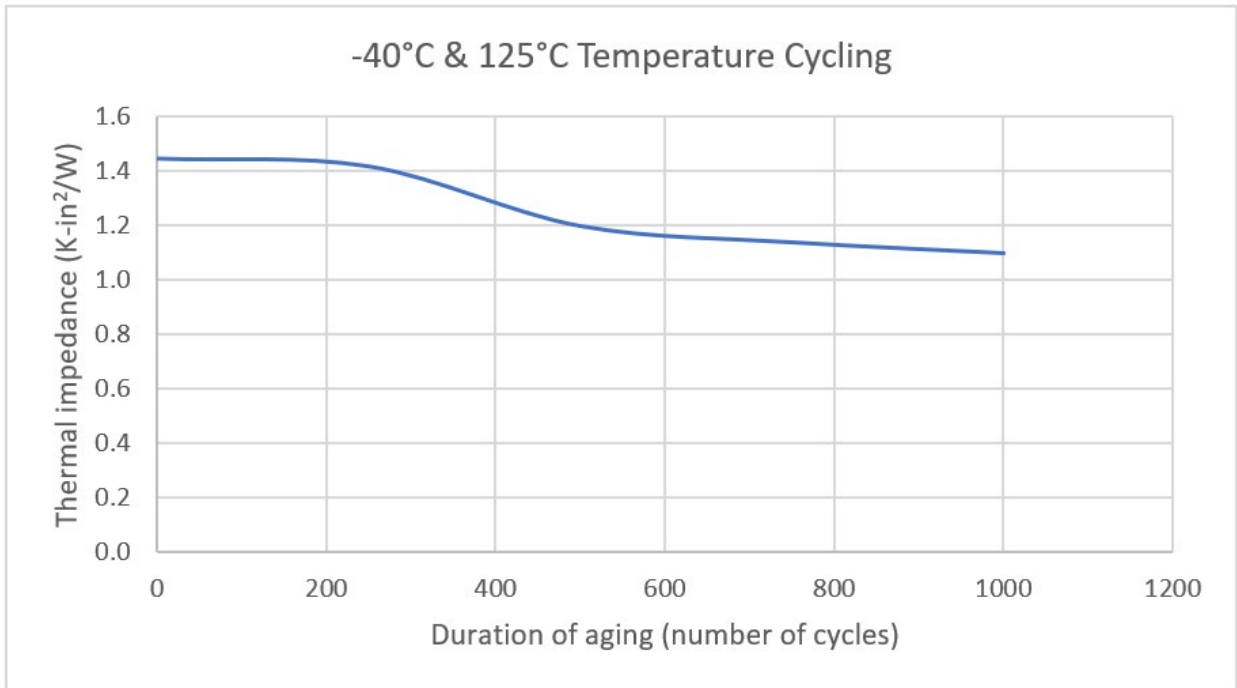


Figure 3: Temperature cycling thermal impedance versus elapsed cycles

### 3.0 Total Mass Loss

#### 3.1. Purpose

This test is intended to provide data on the volatile silicone content of THERM-A-GAP™ GEL 75. Volatile silicone is of concern due to its ability to migrate and cause problems in electronics applications. The material was tested by thermogravimetric analysis (TGA) and by an independent outside laboratory.

#### 3.2. Materials

- 3.2.1. TA Instruments Thermogravimetric Analyzer.
- 3.2.2. Small sample of GEL 75.

#### 3.3. Test Procedure

- 3.3.1. A small amount of GEL 75 was dispensed onto a TGA test aluminum dish.
- 3.3.2. The sample was subjected to 125° C for three hours in a nitrogen environment and the sample weight loss was recorded.

#### 3.4. Results

GEL 75 experienced a total mass loss of 0.042 % after a 3-hour dwell at 125°C.

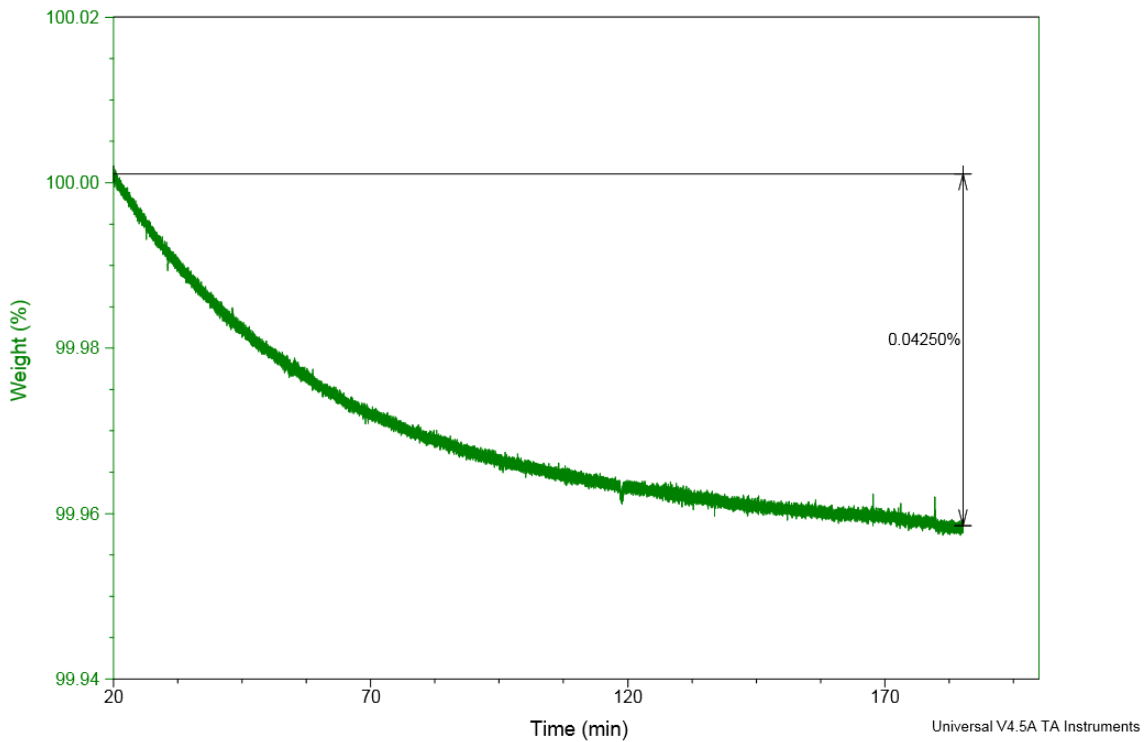


Figure 4: Thermogravimetric Analysis of GEL 75 at 125°C for 3 hours

The National Aeronautics & Space Administration (NASA) criteria for low-volatility materials limits the total mass loss (TML) to 1.0% and collected volatile condensable material (CVCM) to 0.10%.

Outgassing Results	
% Total mass loss	0.18
% CVCM	0.05

Table 1: Independent laboratory outgassing test results

Based on the independent laboratory results, GEL 75 passes the NASA outgassing criteria for low-volatility material.

#### 4.0 Results


THERM-A-GAP™ GEL 75 is a one-component, fully-cured, dispensable thermal compound. The thermal performance of GEL 75 was measured after exposure to multiple accelerated aging conditions. The aging treatments featured in this study include 1000 hours of dry heat aging at 125°C, 1000 hours of heat and humidity aging at 85°C and 85% relative humidity, and 1000 temperature cycles from -40°C to 125°C. There was no statistically significant increase in the thermal impedance of the sample assemblies for any of the aging treatments according to one-way ANOVA with the Tukey method for multiple comparisons. The mean decrease in impedance represents improved thermal performance.

#### 5.0 Vibration Testing

The purpose of this testing is to demonstrate high-performance of THERM-A-GAP™ GEL 75 when subjected to random vibration frequencies and thermal cycling in 3 mutually perpendicular axes. Material from a production-scale batch was dispensed into machined cavities designed for gap thicknesses of 0.010" and 0.040". A dollop of material was dispensed in the center of each engraved 1.5" x 1.5" square (see Figure 1). The weight per dollop for each cavity was calculated such that material expands to the edges of the square post-compression.

The cavity is a milled aluminum with an approximate surface finish of 16-32 Ra  $\mu$ m (N5-N6 finish). The top plate mating surface, designed to maintain the gap thicknesses within each cavity, is a sand blasted aluminum with an approximate surface finish of 125 Ra  $\mu$ m (N8 finish). After dispensing and compressing material into each cavity, x-rays were taken to visualize original position of each compressed gel dollop. After x-rays, the test fixture was subjected to the conditions detailed in Figure 2 & Figure 3 for vibration and thermal cycling, respectively. Post-stress, x-rays were taken again to visualize displacement of gel within each cavity.

## 6.0 Test Fixture Design & Stress Conditions

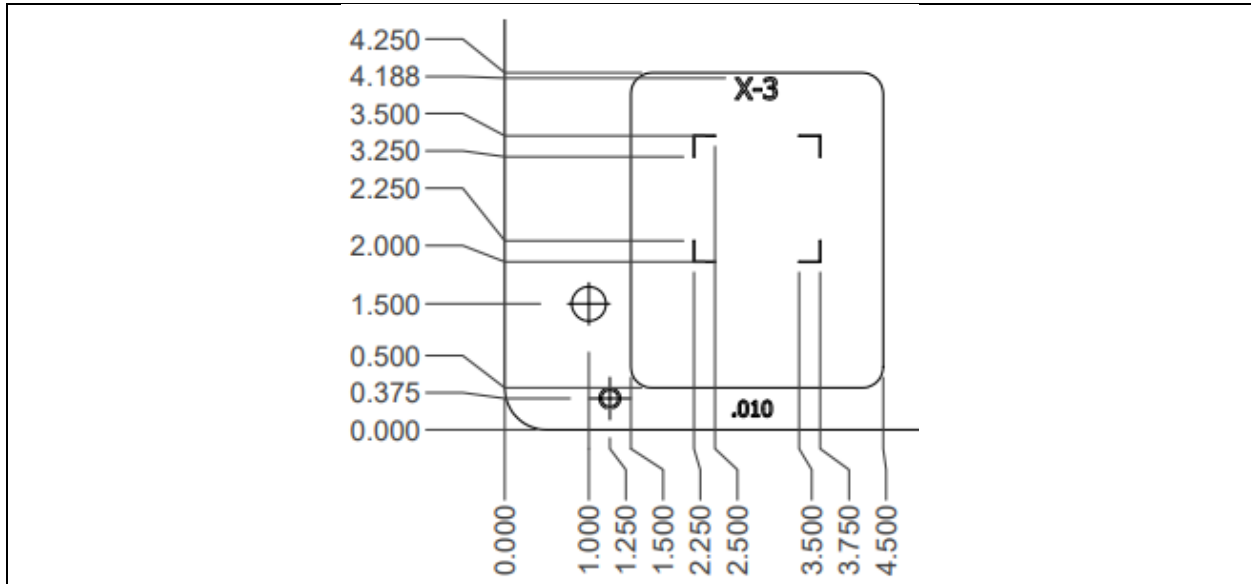

**Figure 5**– Cavity design for one of three 0.010” cavities per test plate.

GEL is dispensed in the center of the engraved 1.5” x 1.5” square of the cavity.

Additional spaces of 0.75” and 1.25” in the x and y direction, respectively, within the cavity, were designed to allow the GEL to move during stress.

Cavity surface finish: N5-N6

Mating top plate surface finish: N8

Break Point Table		
Frequency (Hz)	Power Spectral Density (PSD) (m/s <sup>2</sup> ) <sup>2</sup> /Hz	Power Spectral Density (PSD) g <sup>2</sup> /Hz
10	9.9248	0.1032
55	3.2313	0.0336
180	0.1250	0.0013
300	0.1250	0.0013
360	0.0673	0.0007
1000	0.0673	0.0007
RMS Acceleration	19.6 m/s <sup>2</sup>	2.0 grms

**Figure 6** – Vibration frequencies

The samples were subjected to a random vibration at all frequencies from 10 Hz to 1000 Hz per the break point table above.

The samples were subjected to this vibration for 81 hours in each of three (3) mutually perpendicular axes for a total accumulated vibration time of 243 hours.

Time (minutes)	Temperature (°C)
0	+20
60	-40
150	-40
210	+20
300	+105
410	+105
480	+20


**Figure 7** – Thermal cycling profile

The samples were exposed to the above temperature profile during vibration testing


ID	Description	Manufacturer	Model	Calibration Due
11697	Electro Dynamic Shaker	Unholtz-Dickie	4.5K	NCR
15602	Vibration Controller	Vibration Research	VR9500	06/29/21
16678	Accelerometer	Endevco	7920A-30	07/05/17
16257	Accelerometer	PCB Piezotronics	320C04/ACS-23	06/16/21
EC114	Environmental Chamber	Thermotron	F-6-CEV-15-15	01/04/22
08169	Electro Dynamic Shaker	Unholtz-Dickie	6K	NCR
15249	Vibration Controller	Vibration Research	VR9500	12/09/21
14974	Accelerometer	PCB Piezotronics	320C04/ACS-23	08/05/21
EC020	Environmental Chamber	Envirotronics	EV33-2-7.5	10/14/21

**Figure 8** – All test instruments were calibrated and are traceable to the International System of Units (SI) through a National Measurement Institute such as the National Institute of Standards and Technology (NIST) or through consensus standards. The Element Warren calibration system meets the requirements of ISO 17025:2005.


## 7.0 Results

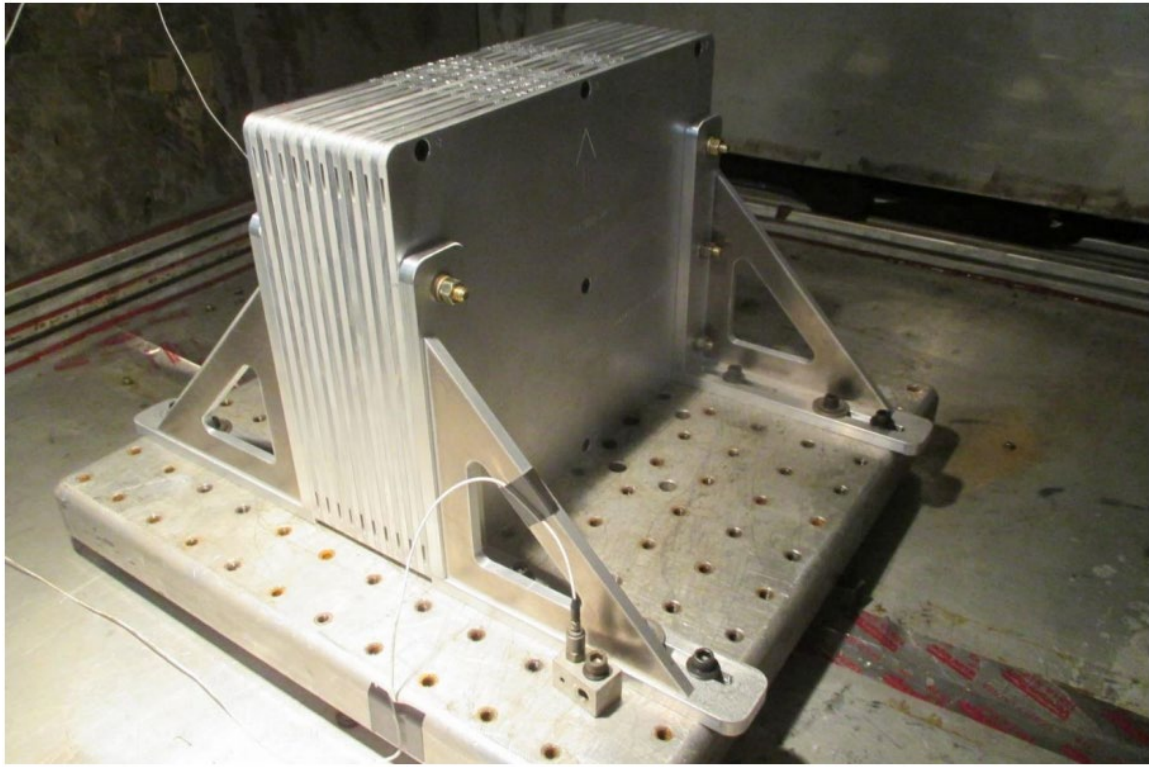


**Figure 9 – Vibration with Thermal Cycling, Vertical Axis**

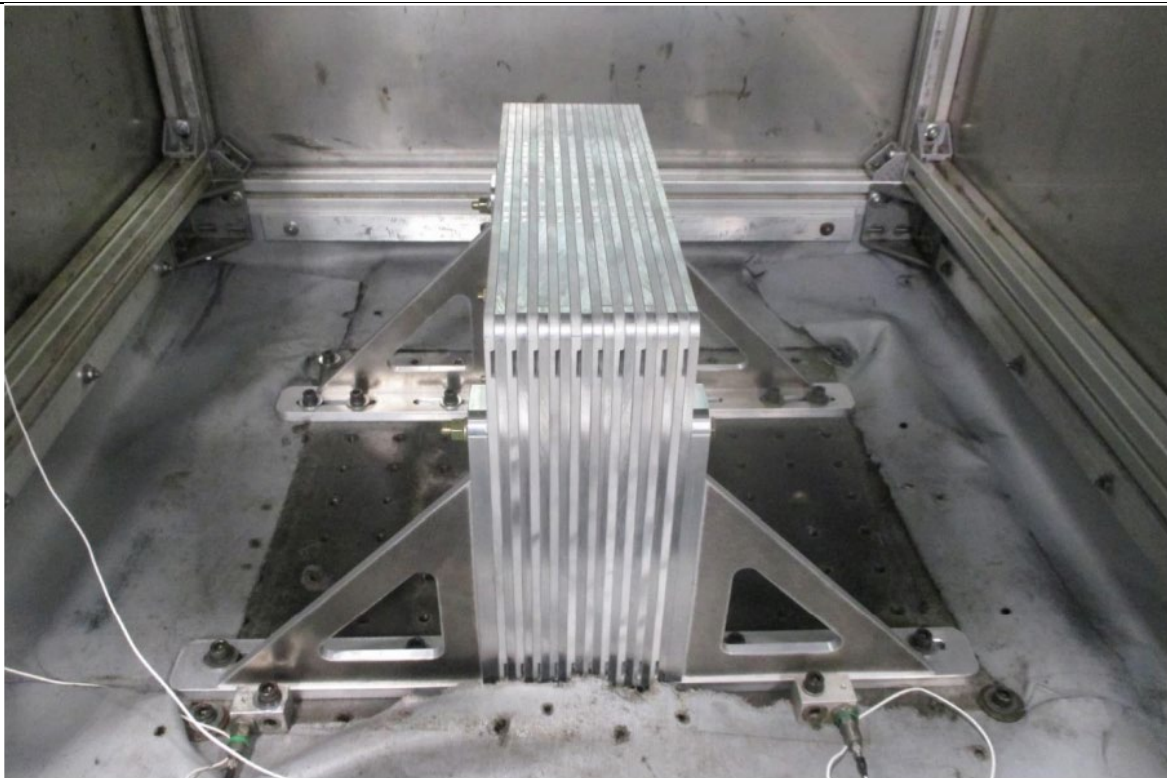


**Figure 10 – Vibration with Thermal Cycling, First Horizontal Axis**

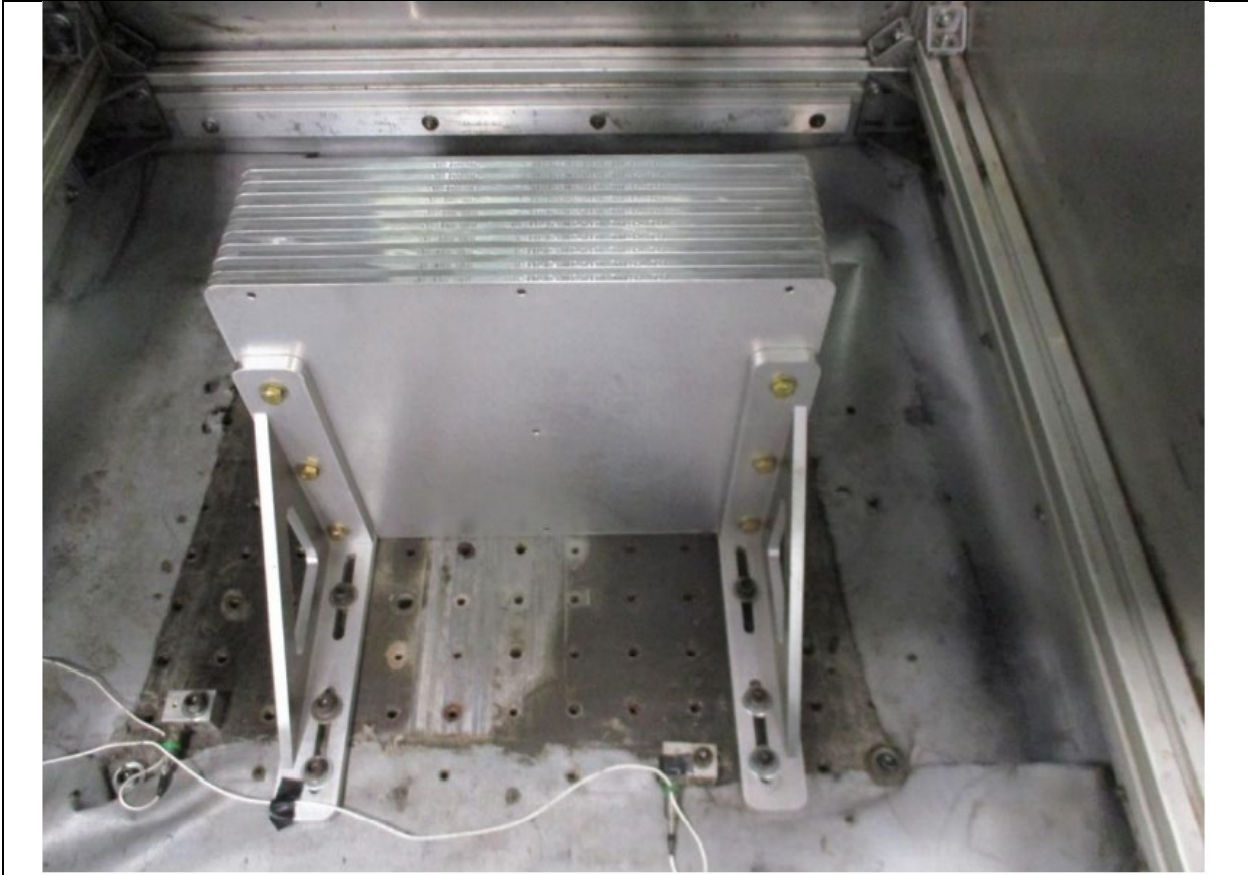

**Figure 11 – Vibration with Thermal Cycling, Second Horizontal Axis**

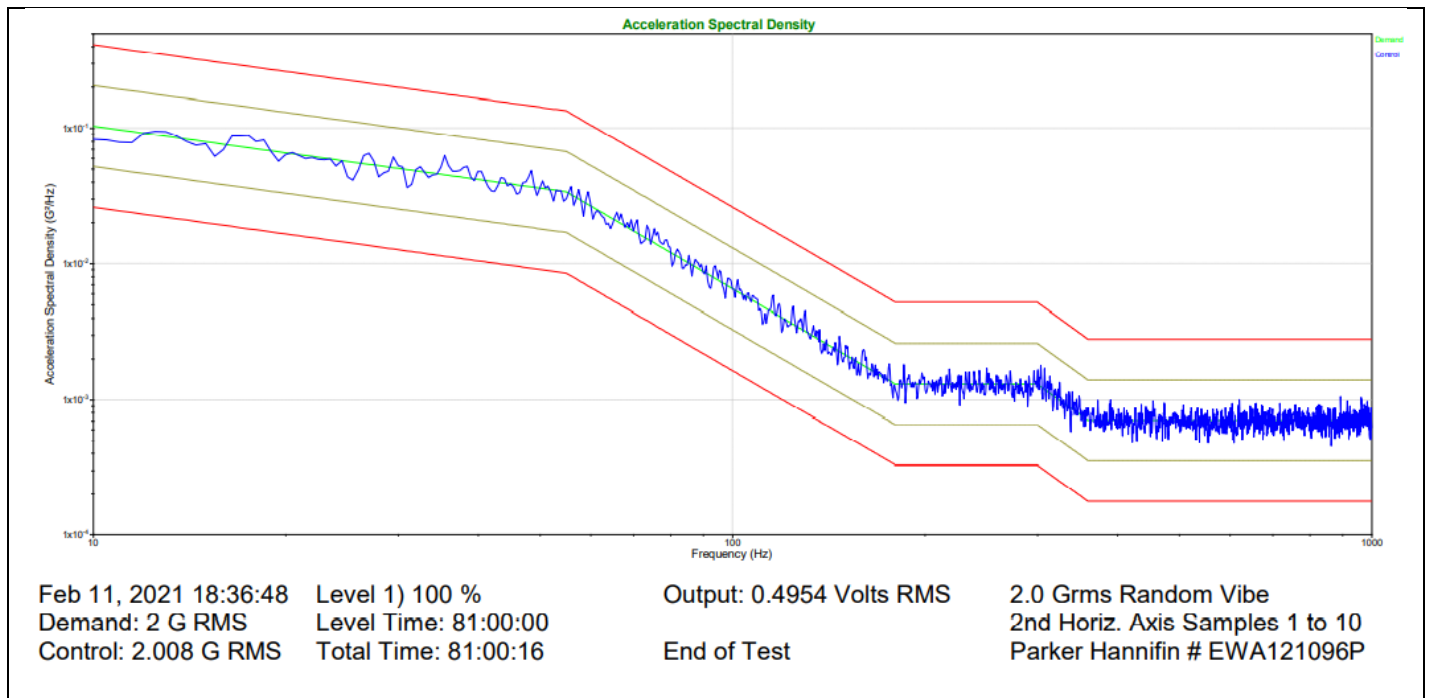

**Figure 12 – Acceleration Spectral Density**

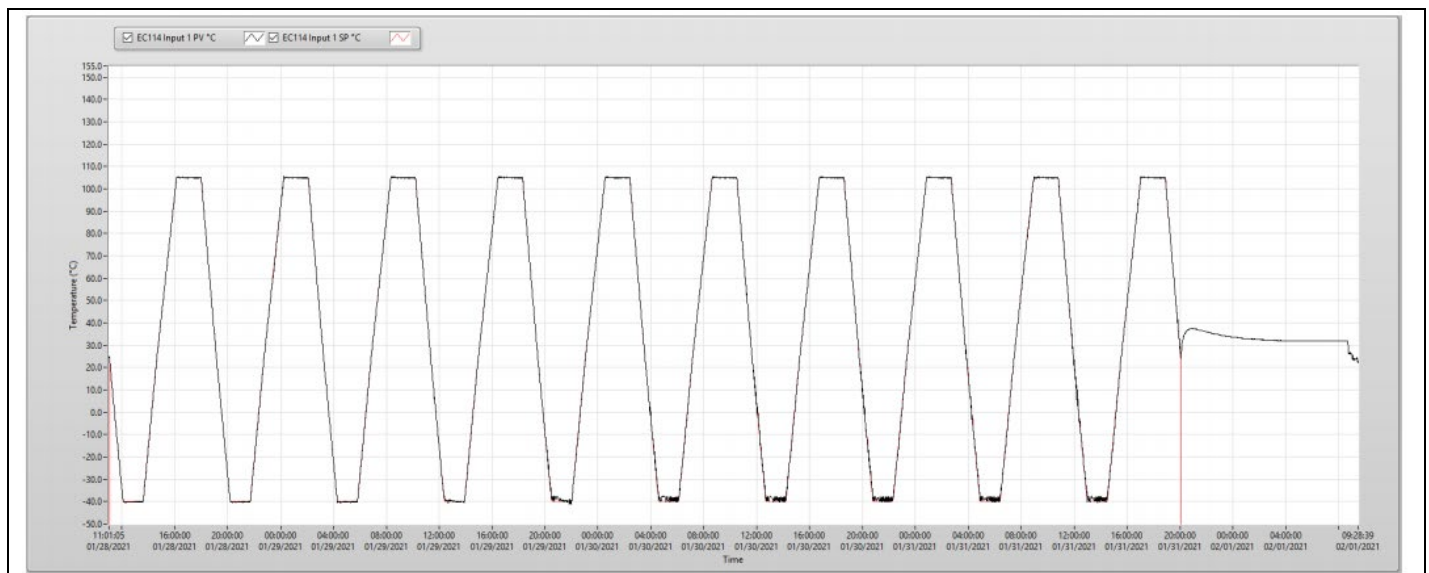

**Figure 13 – Thermal Cycling Profile**

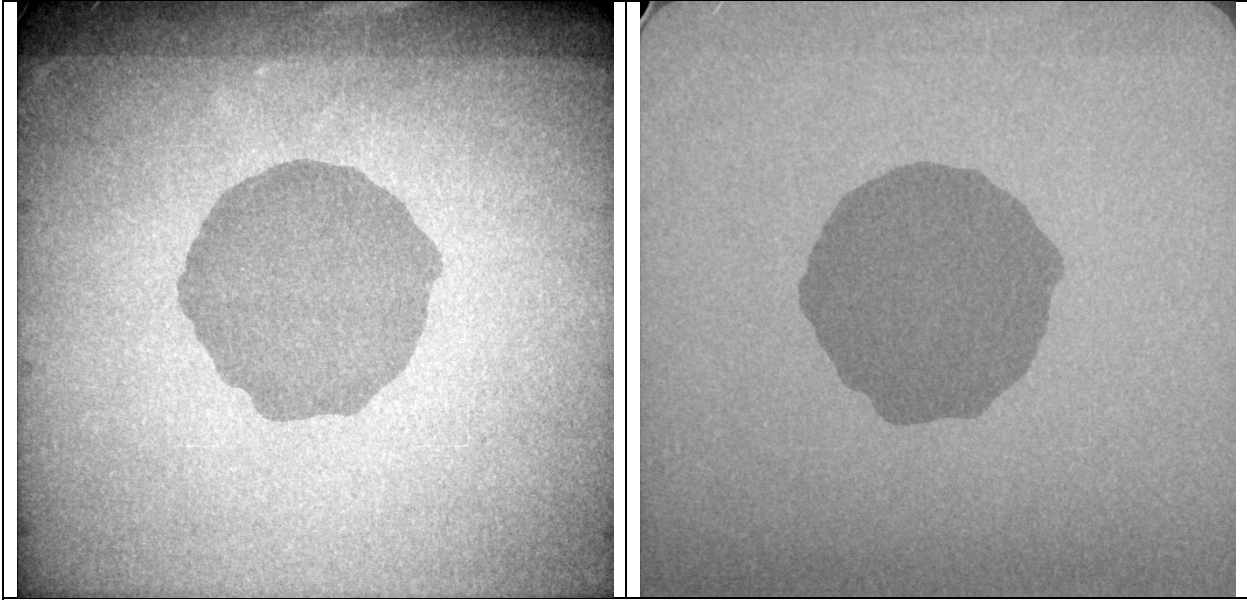


Figure 14– 0.010", cavity 1, pre-stress (left) and post-stress (right) x-rays



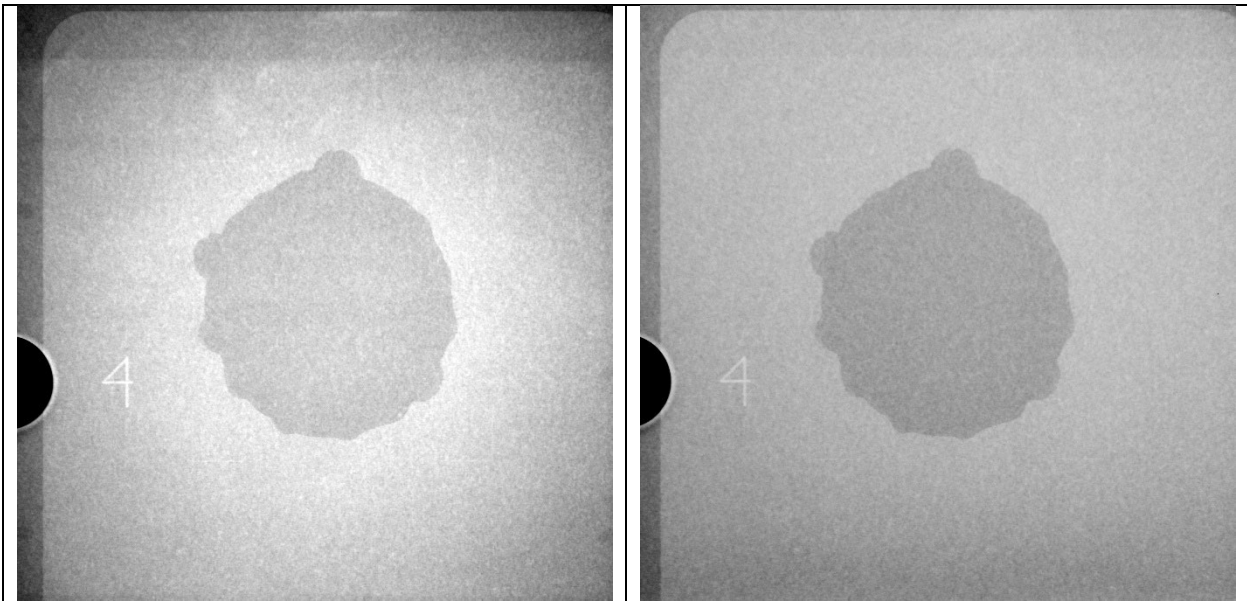



Figure 15 – 0.010", cavity 2, pre-stress (left) and post-stress (right) x-rays

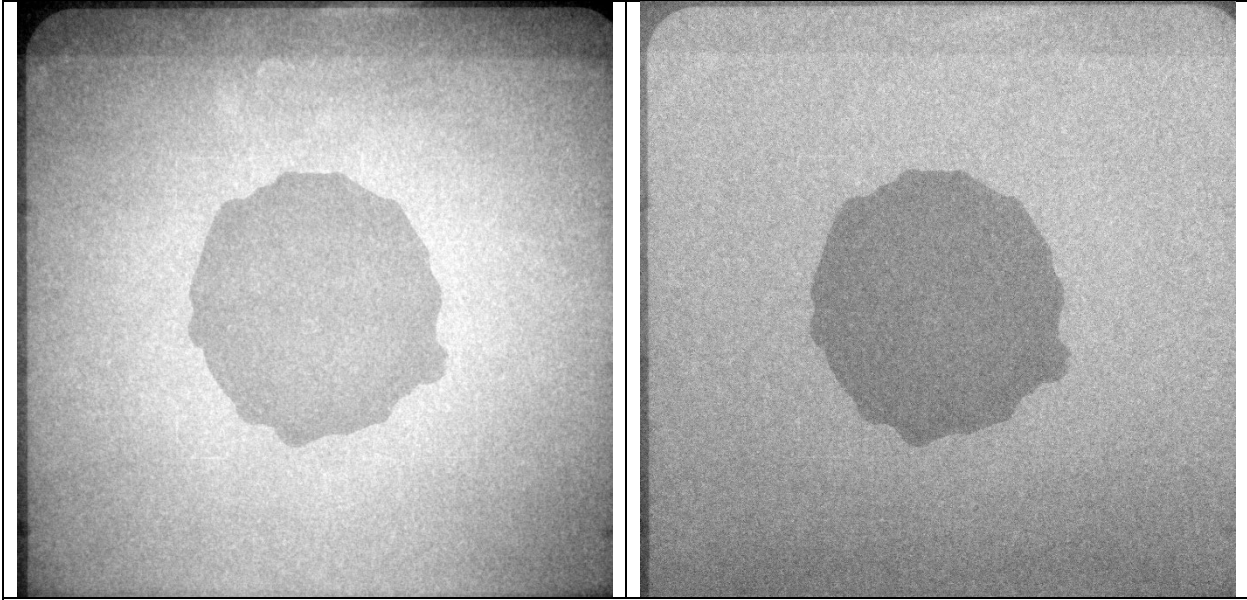


**Figure 16** – 0.010", cavity 3, pre-stress (left) and post-stress (right) x-rays

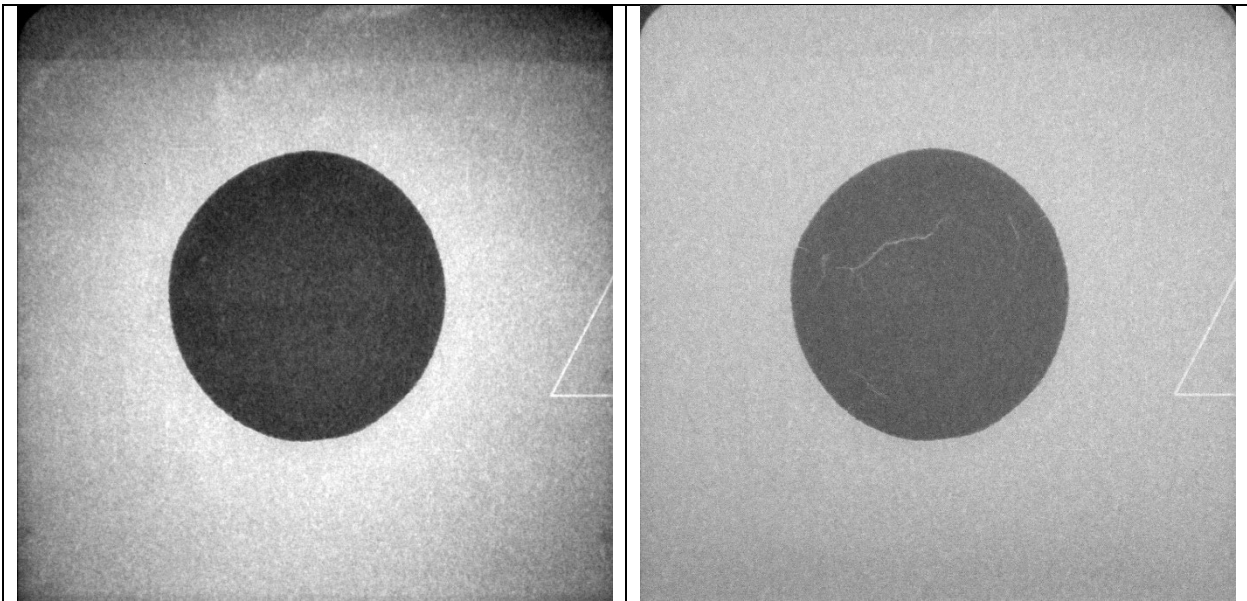

**Figure 17** – 0.040", cavity 1, pre-stress (left) and post-stress (right) x-rays

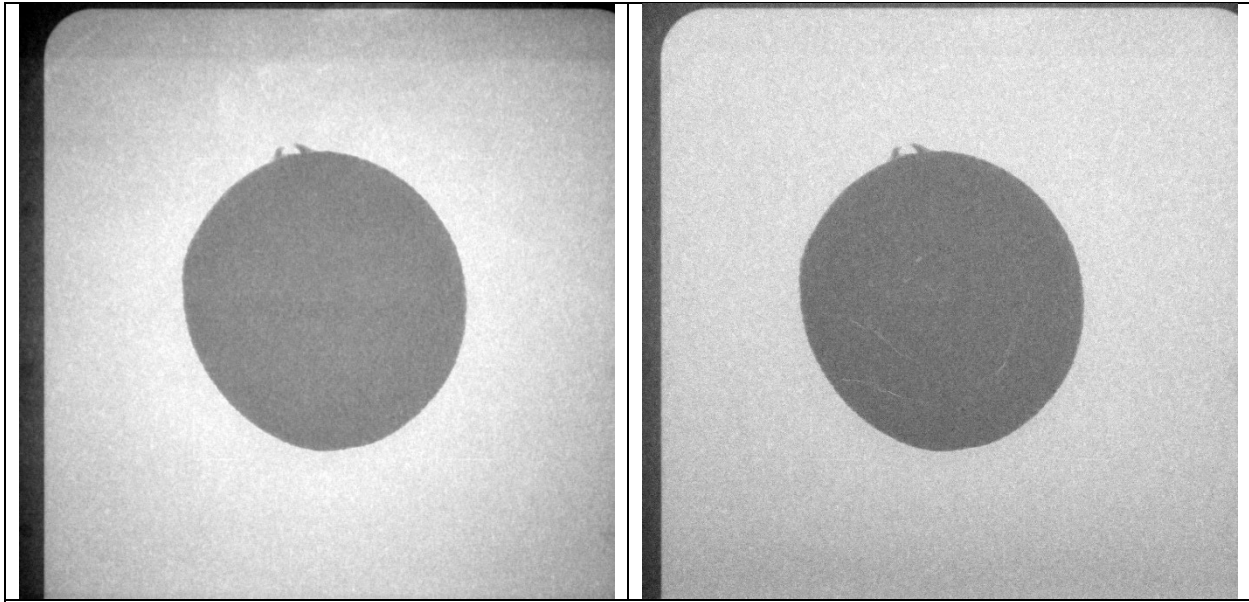

**Figure 18** – 0.040", cavity 2, pre-stress (left) and post-stress (right) x-rays

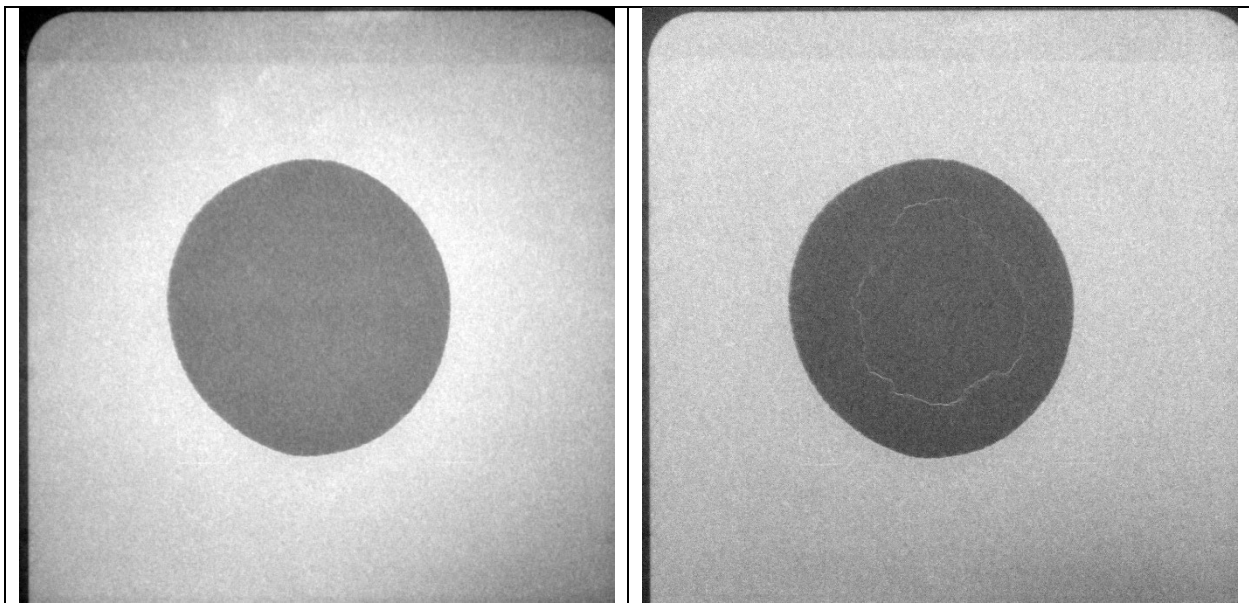

**Figure 19** – 0.040", cavity 3, pre-stress (left) and post-stress (right) x-rays

## 8.0 Conclusion

Considering the combined stress of high frequency vibration and thermal cycling, along with the duration of the test (81 hours per axis, 243 hours in total), the material holds up very well to the stress it was subjected to and demonstrates excellent performance in the gap thicknesses tested. The results of this study provide evidence that GEL 75 maintains reliability after testing.