

Needle Valve

VRMM MicroMetering Series 60,000 psi (4140 bar)

10VRMM, 15PVRMM (NPT), 30VRMM, 60VRMM Series



Principle of Operation:

MicroMetering valves are designed for applications where more precise control of small flow is required than is possible with a standard regulating stem. Barrel and Thimble micrometer design permits settings to be repeated.

Metering is controlled by a finely tapered stem acting in a precisely mated replaceable seat. Very fine stem position is achieved utilizing a 40 TPI thread. The Barrel and Thimble are calibrated for proper metering at the factory.

These valves are designed for metering only and cannot be used as a shutoff valve. Minimum flow is factory set and occurs at "0" position. DO NOT OPERATE THE VALVE BELOW THE ZERO POSITION OR DAMAGE WILL RESULT. When shutoff action is required, a pressure matching shutoff valve is recommended.

MicroMetering Valve Features:

- Barrel and Thimble design permits repeatable settings
- Barrel divisions every 0.025"
- 25 Thimble divisions, each representing 0.001" stem travel. One revolution = 0.025" stem travel.
- Operating Temperatures vary per model but can range from -100° to 800°F (-73° to 427°C)
- UNS S31600 cold worked type 316 stainless steel body. Stem and seat are cold-worked type 316 stainless steel.
- Packing below stem threads is PTFE for the 10VRMM, 15PVRMM and 30VRMM valves and nylon-leather for the 60VRMM. For packing options, see Technical Information Section.
- Speedbite "W" Series compression sleeve connections are used on the 10VRMM Series. Operating temperatures are limited from -100° to 650°F
- 1/4" NPT connections (ANPT Aerospace version) are used on 15PVRMM Series. Operating temperatures are limited from -100°F to 400°F
- Parker AE High Pressure Cone & Thread connections are used on both the 30VRMM and 60VRMM Series
- Electric Flow Control Actuators are available for all VRMM Style Valves. See Actuator Section of Catalog for suffix code options.

Parker Autoclave Engineers valves are complemented by a complete line of fittings, tubing, check valves and line filters. Traceability is ensured by use of heat a purchase order codes etched on valve body that also include model number, MAWP rating, and Material Type references. All valves include connection sleeve/collar and gland nut as appropriate.

All Parker Autoclave Engineers products are designed in accordance with ASME B31.3 Chapter IX High Pressure Piping standards.



ENGINEERING YOUR SUCCESS.

MicroMetering Series: Pressures to 60,000 psi (4137bar)




Valve Series	Tube Outside Diameter Size (inches)	Connection Type	Orifice Size Inches (mm)	Rated C_V^*	Pressure Rating psi (bar) @Room Temperature**
10VRMM	1/8	W125	0.062 (1.57)	.004	15,000 (1034)
15PVRMM	1/4	NPT	0.062 (1.57)	.004	15,000 (1034)
30VRMM	1/4	F250C	0.062 (1.57)	.004	30,000 (2069)
60VRMM	1/4	F250C	0.062 (1.57)	.004	60,000 (4137)
60VRMM	3/8	F375C	0.062 (1.57)	.004	60,000 (4137)

Notes


** For complete temperature ratings see pressure/temperature rating guide in Technical Information section.

15PVRMM "NPT" version shown above

Generalized Flow Coefficient Curves (C_V)

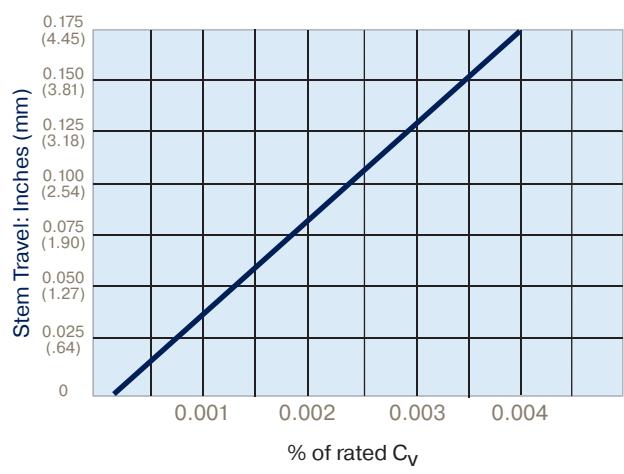

MicroMetering (VRMM) Series Flow Curve

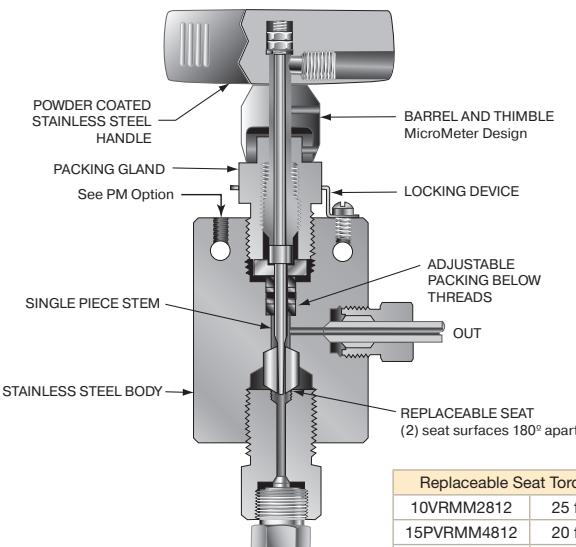

To ensure proper fit use Parker Autoclave tubing
NPT valve option will not have connection collar and gland nut as shown above.

Valve Packing Options:

Standard Parker Autoclave Engineers 10VRMM, 15PVRMM and 30VRMM Series valves with PTFE packing may be operated to 450°F (232°C). 60VRMM series valves with nylon/leather/nylon packing may be operated from 40°F (4°C) to 230°F (110°C).

***TG** Standard valve with PTFE glass packing -100° to 600°F (-73° to 316°).

GY Standard valve with graphite braided yarn packing to 32° to 800°F (0° to 427°).

B Cryogenic trim materials and PTFE packing required when below 0°F (-18°C) to -100°F (-73°C).

Note: *60VRMM valves with -TG option supplied with PEEK/PTFE Glass/PEEK packing

Parker Autoclave Engineers does not recommend Low Pressure Speedbite sleeve connections below -100°F (-73°C) or above 650°F (343°C). NPT Pipe Connections can be used from -100° to over 400°F (-72 to 204°C) (dependent on sealant temperature range). See needle valve options for stem and seat coating for erosive service.


Ordering Guide:

For complete information on available stem types, optional connections and additional valve options, see Needle Valve Options section or contact your Sales Representative. VRMM Series valves are furnished complete with connection components, unless otherwise specified.

Building a Part Number: <i>Example: 60VRMM4812</i>										
Example Part Number:	60VRMM	4	81	2	XX					
Ordering Parameters/Options:	Valve Series	Outside Diameter Tube Size	Stem/Seat Type	Body Pattern	Options					
Table Reference: (see below)	A	B	C	D	E					
A - Valve Series										
10VRMM	MicroMetering Valve (Compression Sleeve connection)									
15PVRMM	MicroMetering Valve (NPT connection)									
30VRMM	MicroMetering Valve, High Pressure Cone & Thread									
60VRMM	MicroMetering Valve, High Pressure Cone & Thread									
B - Outside Diameter Tube/Pipe Size										
2	1/8" (10VRMM only available)									
4	1/4" (15PVRMM & 30VRMM only available)									
6	3/8"									
C - Stem/Seat Type										
81	Rotating MicroMetering one piece stem with Replaceable Seat									
D - Body Pattern										
2	Two-Way Angle									
E - Options										
For extreme temperatures and other options, see Valve Options.										
PM	Panel Mount, additional #10-24 screw is supplied									
CSS	N-Dura Coated Stem and Seat									
B	Cryogenic Trim material change required when below 0°F									
TG	PTFE Glass (25%) Packing to 600°F									
GY	Graphite Yarn Packing for Temperatures to 800°F									

Material of Construction:

Item #	Description	Material
1	Handle, 3 inches	316 SS
2	Set Screw, #8-35 x .25 LG	Steel
3	Thimble	303 SS
4	Packing Gland	AMPCO 45
5*	Packing	Nylon
6*	Packing	Leather
7	Packing Washer	316 SS
8	Stem	316 SS
9	Barrel	303 SS
10	Set Screw, #8-35 x .125 LG	Steel
11	Locking Device	302 SS
12	Screw, Fillister Head #10	18-8 SS
13	Backup Washer	17-4 PH
14	Replaceable Seat	17-4 PH
15	Valve Body	316 SS
16	Seat Retainer	316 SS
Typical spare parts found in Repair Kits		
*	10VRMM, 15PVRMM, and 30VRMM have a single PTFE packing ring	

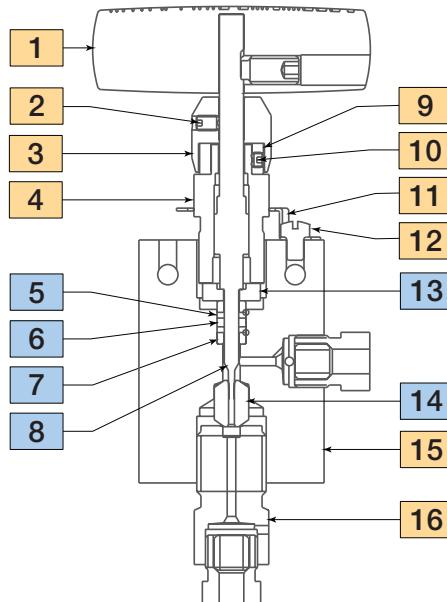

Basic Repair Kits for 316 SS Material:

Basic Repair Kit for 316 SS Material					
Stem Type		10VRMM	15PVRMM	30VRMM	60VRMM
2 Way Angle Vee Stem	VEE	R10VRMM2812	R15PVRMM	R30VRMM4812	R60VRMM (both sizes)
Consult your Parker Autoclave Engineers representative for other kit numbers, body part numbers, and pricing. Visit www.autoclave.com for product Operation manuals.					

VRMM Series Dimensions:


2 Way Angle - 10VRMM		Catalog Number
Stem Type	VEE	10VRMM2812
Outside Diameter Tube		1/8 (3.17)
Orifice Diameter		0.062 (1.57)
Dimensions: inches (mm)		
	A	1.50 (38)
	B	0.88 (22)
	C	0.31 (8)
	D	0.94 (24)
	E	1.56 (40)
	F	3.00 (76)
	G	0.75 (19)
	G1	0.16 (40)
	H*	5.06 (129)
	M	1.00 (25)
	N	0.25 (6)
Block Thickness		0.75 (19)

2 Way Angle - 30 & 60VRMM		Catalog Number		
Stem Type	VEE	30VRMM4812	60VRMM4812	60VRMM6812
Outside Diameter Tube		1/4 (6.35)	1/4 (6.35)	3/8 (9.53)
Orifice Diameter		0.062 (1.57)	0.062 (1.57)	0.062 (1.57)
Dimensions: inches (mm)				
	A	2.00 (50.80)	2.00 (50.80)	2.00 (50.80)
	B	1.00 (25.40)	1.00 (25.40)	1.00 (25.40)
	C	0.50 (12.70)	0.50 (12.70)	0.53 (13.46)
	D	1.12 (28.44)	1.31 (33.27)	1.31 (33.27)
	E	2.00 (50.80)	2.63 (66.80)	2.63 (66.80)
	F	3.00 (76.20)	3.00 (76.20)	3.00 (76.20)
	G	1.00 (25)	1.00 (25)	1.00 (25)
	G1	0.22 (5.58)	0.22 (5.58)	0.22 (5.58)
	H*	5.06 (128.52)	6.06 (153.92)	6.06 (153.92)
	M	0.69 (17.25)	0.69 (17.25)	0.69 (17.25)
	N	0.50 (12.70)	0.38 (9.65)	0.38 (9.65)
Block Thickness		1.00 (25.40)	1.00 (25.40)	1.00 (25.40)

G - Packing Gland mounting hole drill size • G1 - Bracket mounting hole size • H* - Dimension is with stem in closed position
All dimensions for reference only and subject to change • For prompt service, Parker Autoclave stocks select products. Consult factory.

VRMM Series Dimensions:

2 Way Angle - 15PVRMM (NPT)		Catalog Number
Stem Type	VEE	15PVRMM4812
Outside Diameter Tube		1/4 (6.35)
Orifice Diameter		0.062 (1.57)
Dimensions: inches (mm)	A	2.00 (51)
	B	1.00 (25)
	C	-
	D	1.25 (32)
	E	2.16 (53)
	F	3.00 (76)
	G	1.00 (25)
	G1	0.22 (6)
	H*	5.25 (132)
	M	0.69 (17)
	N	0.5 (13)
Block Thickness		1.00 (25)

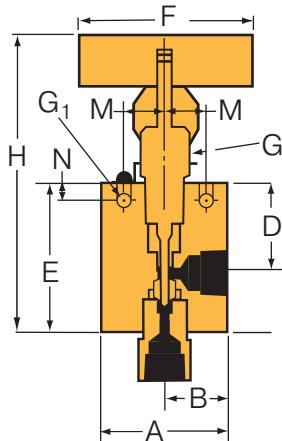

Notes

NPT Pipe Thread Connections:

NPT threads must be sealed using a high quality PTFE tape (3 wraps minimum) and/or thread sealant paste product suitable for process temperature.

Refer to thread sealant manufacturer's instructions for application instructions. A good thread lubrication product (metal flake style) capable of process temperatures is also necessary to prevent thread galling.


Sealing performance may vary based on many factors such as pressure, temperature, media, thread quality, thread material, proper engagement, and proper use of thread sealant.

End user should limit the number of times an NPT fitting is assembled and disassembled as thread deformation during assembly will result in deteriorating seal quality over time.

Panel Hole Sizes:

Valve Size	Inches			
	A	B	Screw Size	G
10VRMM	.63 *	.22	#10-24	0.75
15PVRMM	1.38	.22	#10-24	1.0
30VRMM	1.38	.22	#10-24	1.0
60VRMM (both sizes)	1.38	.22	#10-24	1.0

* 10VRMM Valve has only one mounting screw. Dimension shown is from stem center to panel hole center.
10VRMM Thimble must be removed to mount on panel.

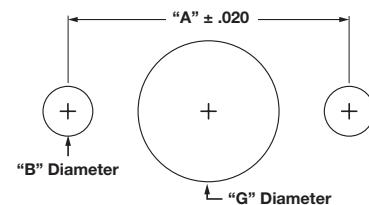

Needle Valve Panel Mount

Valve Options:


(For Actuator Options please reference specific Actuator brochure)



Electric Valve Actuators:

Parker Autoclave Engineers has developed an electric actuator capable of fine, multi-turn, control.

This actuator is designed specifically for our VRMM Series valves to facilitate remote control of these high pressure low flow metering valves. 4-20mA (-C4 suffix) or 0-10VDC (-C10 suffix) control signal options are available.

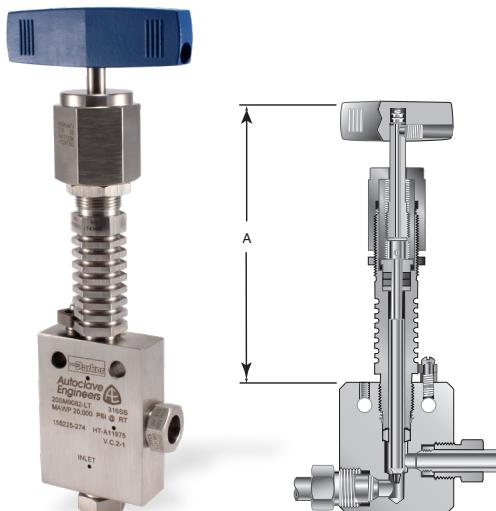

High Temperature Extension:

Required for extreme temperatures

-HT High Temperature (over 600°F to 800°F maximum)

Valve Series	Outside Diameter Tube Size (inches)	Dimensions "A" inches (mm)
10VRMM	1/8"	5.38 (137)
15PVRMM	1/4"	6.00 (152)
30VRMM		
60VRMM	3/8"	6.00 (152)

HT option code includes Graphite (-GY) packing



Needle Valve Clam Shell Handle Lockout:

(order separately using part numbers shown below, padlock not included)

Clam Shell Handle locks are provided to lockout valves in open or closed position preventing unauthorized personnel from actuating valve during shutdown or emergency situations. This clamshell design is available in four (4) sizes dependent on handle length:

P/N AE004855 – 1" to 2.5" handle length

P/N 90088 – 2.5" to 5.0" handle length

P/N 90194 – 6.5" to 10" handle length

P/N AE004350 – 8" to 13" handle length

NOTES:

Parker Worldwide

North America	Asia Pacific	Europe, Middle East, Africa	
USA – Corporate, Cleveland, OH Tel: +1 256 896 3000	AU – Australia, Dandenong Tel: +61 (0)2 9842 5150 customer.service.au@parker.com	AE – UAE, Dubai Tel: +971 4 812 7100 parker.me@parker.com	ES – Spain, Madrid Tel: +34 902 33 00 01 parker.spain@parker.com
USA – IPD, Huntsville, AL Tel: +1 256 881 2040 ipdcct@parker.com	CN – China, Shanghai Tel: +86 21 2899 5000 INGtechnical.china@parker.com	AT – Austria, Wiener Neustadt Tel: +43 (0)2622 23501-0 parker.austria@parker.com	FI – Finland, Vantaa Tel: +358 (0)20 753 2500 parker.finland@parker.com
USA – IPD, (Autoclave), Erie, PA Tel: +1 814 860 5700 ipdaecct@parker.com	HK – Hong Kong Tel: +852 2428 8008	AT – Eastern Europe, Wiener Neustadt Tel: +43 (0)2622 23501 900 parker.easternEurope@parker.com	FR – France, Contamine s/Arve Tel: +33 (0)4 50 25 80 25 parker.france@parker.com
CA – Canada, Grimsby, Ontario Tel: +1 905-945-2274 ipd_canada@parker.com	IN – India, Mumbai Tel: +91 22 6513 7081-85	AZ – Azerbaijan, Baku Tel: +994 50 2233 458 parker.azerbaijan@parker.com	GR – Greece, Athens Tel: +30 210 933 6450 parker.greece@parker.com
South America		BE/LU – Belgium, Nivelles Tel: +32 (0)67 280 900 parker.belgium@parker.com	HU – Hungary, Budapest Tel: +36 223 885 470 parker.hungary@parker.com
AR – Argentina, Buenos Aires Tel: +54 3327 44 4129 falecom@parker.com	JP – Japan, Tokyo Tel: +(81) 3 6365 4020 infophj@parker.com	BG – Bulgaria, Sofia Tel: +359 2 980 1344 parker.bulgaria@parker.com	IE – Ireland, Dublin Tel: +353 (0)1 466 6370 parker.ireland@parker.com
BR – Brazil, Diadema, SP Diadema, SP Tel: +55 11 4360 6700 falecom@parker.com	KR – South Korea, Seoul Tel: +82 2 559 0400 parkerkr@parker.com	BY – Belarus, Minsk Tel: +48 (0)22 573 24 00 parker.belarus@parker.com	IT – Italy, Corsico (MI) Tel: +39 02 45 19 21 parker.italy@parker.com
CL – Chile, Santiago Tel: +56 (0) 2 2303 9640 falecom@parker.com	MY – Malaysia, Selangor Tel: +603 784 90 800 parkermy@parker.com	CH – Switzerland, Etoy Tel: +41 (0) 21 821 87 00 parker.switzerland@parker.com	KZ – Kazakhstan, Almaty Tel: +7 7273 561 000 parker.easternEurope@parker.com
MX – Mexico, Toluca Tel: +52 722 275 4200 contacto@parker.com	SG – Singapore, Tel: +65 6887 6300 parkersg@parker.com	CZ – Czech Republic, Klecany Tel: +420 284 083 111 parker.czechrepublic@parker.com	NL – The Netherlands, Oldenzaal Tel: +31 (0)541 585 000 parker.nl@parker.com
	TH – Thailand, Bangkok Tel: +66 2 186 7000 phthailand@parker.com	DE – Germany, Kaarst Tel: +49 (0)2131 4016 0 parker.germany@parker.com	NO – Norway, Stavanger Tel: +47 66 75 34 00 parker.norway@parker.com
	TW – Taiwan, Taipei Tel: +886 2 2298 8987 enquiry.taiwan@parker.com	DK – Denmark, Ballerup Tel: +45 43 56 04 00 parker.denmark@parker.com	PL – Poland, Warsaw Tel: +48 (0)22 573 24 00 parker.poland@parker.com
	VN – Vietnam, Hochi Minh City Tel: +848 382 508 56 parker_viet@parker.com		

! CAUTION !

Do not mix or interchange component parts or tubing with those of other manufacturers. Doing so is unsafe and will void warranty.

Parker Autoclave Engineers Valves, Fittings, and Tools are not designed to interface with common commercial instrument tubing and are designed to only connect with tubing manufactured to Parker Autoclave Engineers AES specifications. Failure to do so is unsafe and will void warranty.

WARNING

FAILURE, IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met. The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

Offer of Sale

The items described in this document are available for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. Any sale contract entered by Parker will be governed by the provisions stated in Parker's standard terms and conditions of sale (copy available upon request).

©2021 Parker Hannifin Corporation | Autoclave Engineers is a registered trademark of the Parker Hannifin Corporation

Literature #: 02-0115SE May 2021



Instrumentation Products Division
Autoclave Engineers Operation
8325 Hessinger Drive
Erie, PA 16509-4679
Tel: 814 860 5700
Fax: 814 860 5811
www.autoclave.com
www.parker.com/ipd

Instrumentation Products Division
Division Headquarters
1005 A Cleaner Way
Huntsville, AL 35805 USA
Tel: 256 881 2040
Fax: 256 881 5072

Parker Hannifin Manufacturing Ltd.
Instrumentation Products Division,
Europe
Riverside Road
Pottington Business Park
Barnstaple, UK, EX31 1NP, UK
Tel: 44 1271 313131
Fax: 44 1271 373636

ISO-9001 Certified

Needle Valves: VRMM MicroMetering Series 02-0115SE 0521