



# THERM-A-GAP™ GEL 37 Reliability Report

## TR1103 February 2020 Rev. A

Chomerics Division of Parker Hannifin  
77 Dragon Court, Woburn, MA 01888  
(781) 939-4623

### **WARNING – USER RESPONSIBILITY**

**FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.**

This document and other information from Parker-Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors. To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.

## Executive Summary

THERM-A-GAP™ GEL 37 is a high-performance, one-component, fully-cured dispensable thermally conductive gel. The paste-like consistency enables superior performance and long-term thermal stability. This material is designed to be dispensed in applications requiring low compressive forces and minimal thermal resistance for maximal thermal performance. This document outlines the examination of the thermal reliability of this high-performance gap filler after being subjected to long-term environmental aging under dry heat, heat & humidity conditions, and temperature cycling from -40°C to 125°C.

The thermal performance of THERM-A-GAP™ GEL 37 was examined after being subjected to multiple environmental stress tests. The thermal impedance of the aged samples did not experience a significant increase after any of the treatments studied. After 1000-hour dwell at 125°C, 1000 hours at 85°C/85% relative humidity, and 1000 temperature cycles from -40°C to 125°C, there was no statistically significant change in impedance according to one-way ANOVA with the Tukey method for multiple comparisons. The mean value for thermal impedance decreased slightly for each aging treatment, indicating an improvement in thermal performance. This improvement can likely be attributed to enhanced wetting at the interface between the gel and the reliability fixture.

Based on these results, THERM-A-GAP™ GEL 37 demonstrates the ability to withstand long-term aging without a reduction in thermal performance.

## **1.0 Introduction**

The purpose of this document is to examine the thermal reliability of this high-performance thermal gel. Samples of production-scale batches were subjected to long-term aging conditions, and the thermal performance was measured over time.

Successful survival of long-term aging is demonstrated by a lack of statistically significant increase in thermal impedance of the reliability fixtures after the full aging duration. The reliability fixtures comprise GEL 37 sandwiched between two stainless-steel coupons, with thickness set by PTFE spacers. It is worth noting that the exact impedance value of the reliability fixture is not representative of the impedance value of the thermal interface material itself, but it can be used to measure changes to thermal performance over time.

## **2.0 Long-Term Aging**

### **2.1. Purpose**

Long-term aging was performed on GEL 37 between stainless-steel substrates to evaluate the reliability of thermal performance over time. The material was subjected to an extended dwell time of 1000 hours at 125°C, 1000 cycles of temperature cycling from -40°C to 125°C, and long-term heat and humidity aging at 85°C and 85% relative humidity.

### **2.2. Materials**

- 2.2.1. Twenty-four 1" x 1" x 0.040" 316 stainless-steel coupons.
- 2.2.2. PTFE shims, 0.040" thick.
- 2.2.3. Twenty-four clamps.
- 2.2.4. Russells Humidity Chamber GD-16-3-3-AC.
- 2.2.5. Sun Electronics Systems PTL-001 Temperature Cycling System.

### **2.3. Sample Preparation**

- 2.3.1. 2.5 g samples of GEL 37 were dispensed onto the center of each stainless-steel coupon.
- 2.3.2. The 0.040" PTFE shims were placed at each corner of the coupon.
- 2.3.3. A second stainless-steel coupon was placed on top of the dispensed material.
- 2.3.4. Two clamps were placed onto the assembly to hold the substrates at a constant thickness of 0.040".
- 2.3.5. The above procedure was performed for all 12 sample assemblies.

### **2.4. Test Procedure**

- 2.4.1. The assemblies were removed from their clamps and one drop of 500 cSt silicone oil was applied by pipette to the outside of each stainless-steel substrate.
- 2.4.2. The samples were tested initially for thermal impedance at 50°C and 100 psi per ASTM D5470.

- 2.4.3. After testing each assembly, the silicone oil was gently removed from the surfaces and the clamps were placed back onto the assemblies.
- 2.4.4. Four assemblies were subjected to each aging condition:
- 2.4.4.1. Dry heat aging: oven at 125°C.
  - 2.4.4.2. Heat/humidity aging: humidity chamber at 85°C, 85% relative humidity.
  - 2.4.4.3. Temperature cycling: thermal cycling chamber from -40°C to 125°C; 10°C/min ramp; 15-minute dwell.
- 2.4.5. After 250 hours of dry heat or heat/humidity aging, or 250 temperature cycles, the samples were removed from their respective environments, allowed to equilibrate at room temperature for at least two hours, and re-tested for thermal impedance.
- 2.4.6. Once tested, the samples were returned to their respective aging environments and the aging intervals were repeated until the samples had been subjected to a total of 1000 hours of dry heat or heat/humidity aging, or 1000 temperature cycles.

## 2.5. Results

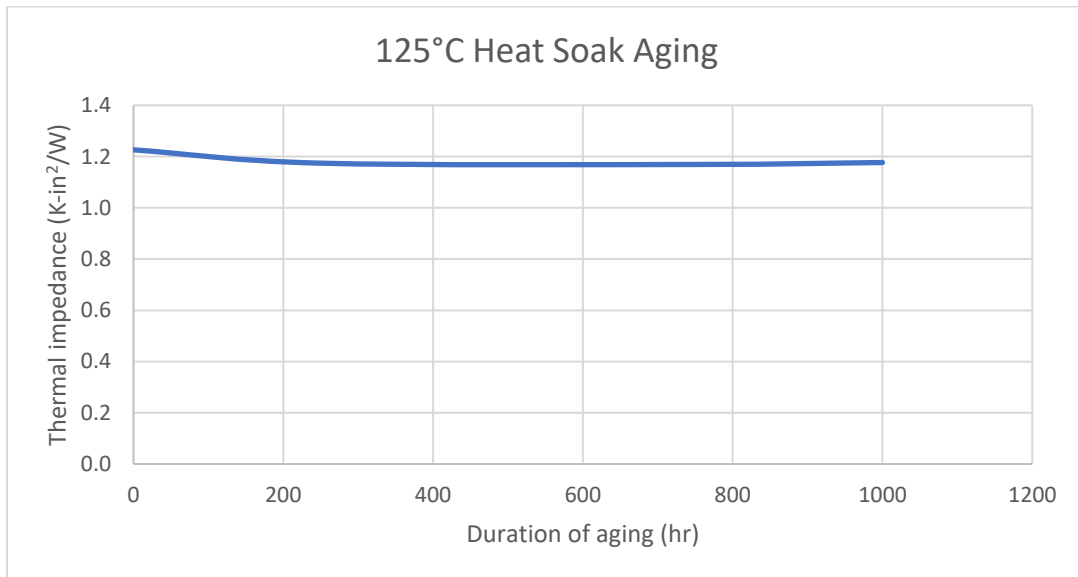


Figure 1: Dry heat aged thermal impedance versus time

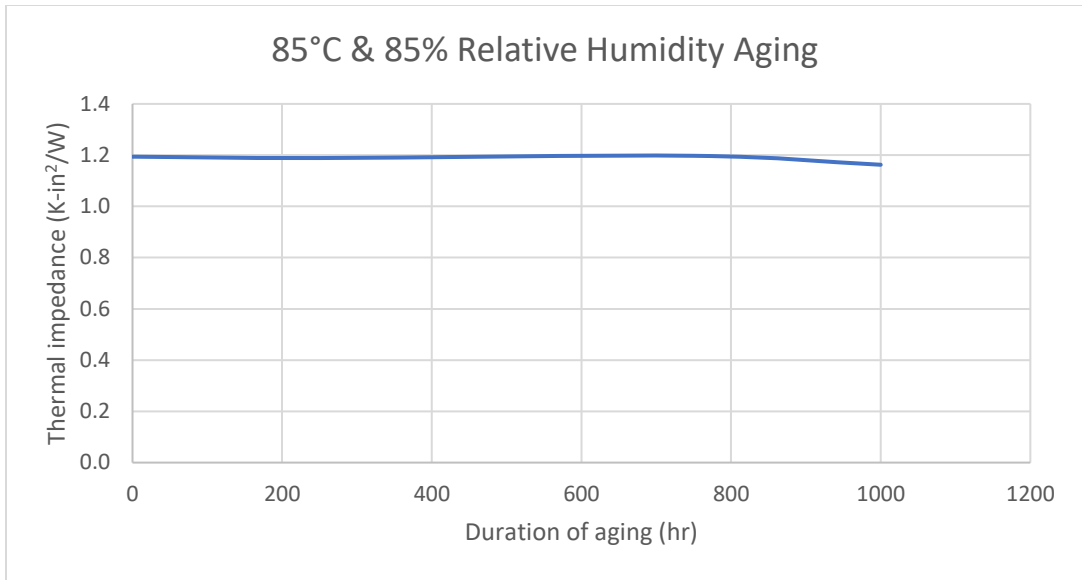


Figure 2: Heat & humidity aged thermal impedance versus time

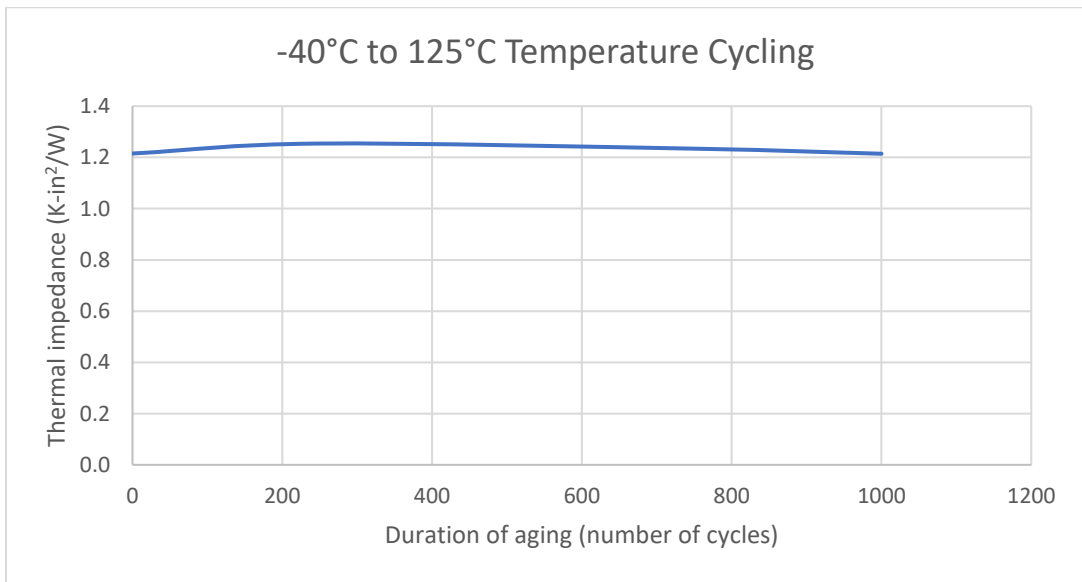


Figure 3: Temperature cycling thermal impedance versus elapsed cycles

### 3.0 Total Mass Loss

#### 3.1. Purpose

This test is intended to provide data on the volatile silicone content of THERM-A-GAP™ GEL 37. Volatile silicone is of concern due to its ability to migrate and cause problems in electronics applications. The material was tested by thermogravimetric analysis (TGA).

#### 3.2. Materials

- 3.2.1. TA Instruments Thermogravimetric Analyzer.
- 3.2.2. Small sample of GEL 37.

#### 3.3. Test Procedure

- 3.3.1. A small amount of GEL 37 was dispensed onto a TGA test pan.
- 3.3.2. The sample was subjected to 125° C for three hours in a nitrogen environment and the sample weight loss was recorded.

#### 3.4. Results

GEL 37 experienced a total mass loss of 0.028% after a 3-hour dwell at 125°C.

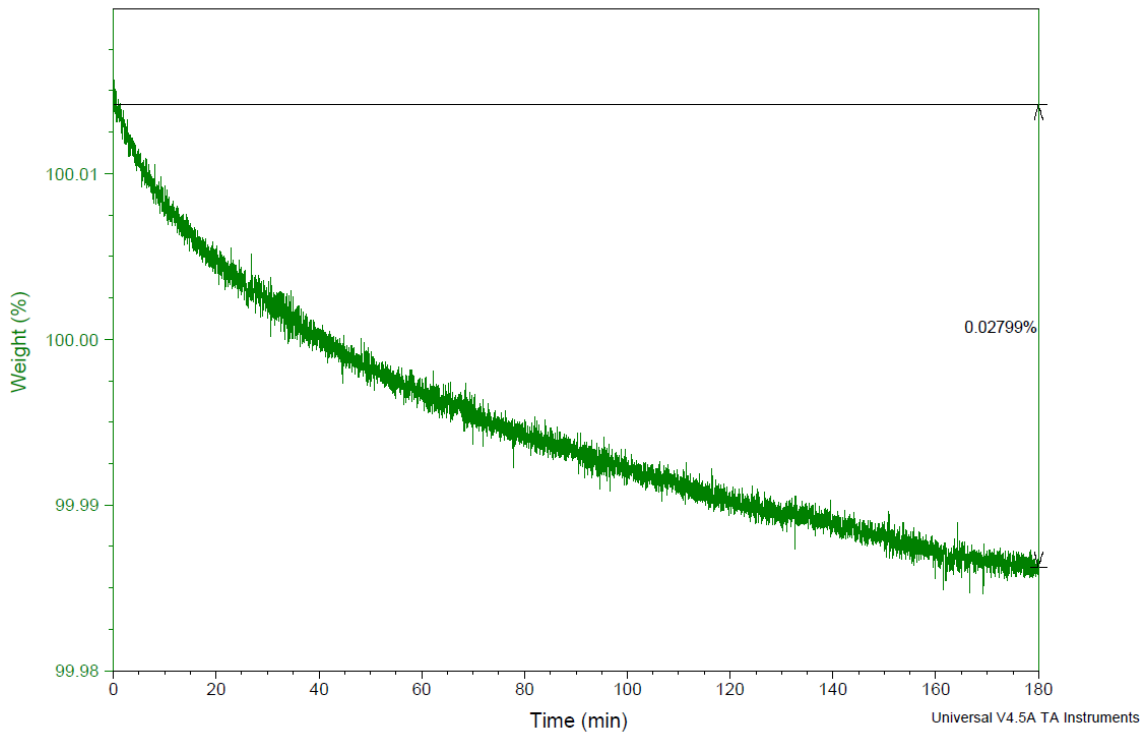


Figure 4: Thermogravimetric Analysis of GEL 37 at 125°C for 3 hours

## **4.0 Results**

THERM-A-GAP™ GEL 37 is a one-component, fully-cured, dispensable thermal compound. The thermal performance of GEL 37 was measured after exposure to multiple accelerated aging conditions. The aging treatments featured in this study include 1000 hours of dry heat aging at 125°C, 1000 hours of heat and humidity aging at 85°C and 85% relative humidity, and 1000 temperature cycles from -40°C to 125°C. There was no statistically significant change in the thermal impedance of the sample assemblies for any of the aging treatments according to one-way ANOVA with the Tukey method for multiple comparisons.

The mean impedance values after dry heat aging, heat and humidity aging, and temperature cycling decreased by 4.0%, 2.6%, and 0.1% respectively. A substantial decrease in impedance represents improved thermal performance, and this phenomenon may be attributed to enhanced wetting at the interface between the thermal compound and the substrate.

## **5.0 Conclusion**

The results of this study provide evidence that GEL 37 maintains reliability after long-term aging.