



Pneumatic Division
Richland, Michigan 49083

Installation & Service Instructions E107P

H Series Fieldbus 24 VDC Output
Modules, Series A (PSST8M23A,
PSST8M12A, PSST8M8A, PSST16M23A,
PSST16D25A, PSST16M12A)

ISSUED: February, 2016
Supersedes: October, 2008
Doc.# E107P, EN# 160064, Rev. D

WARNING

To avoid unpredictable system behavior that can cause personal injury and property damage:

- Disconnect electrical supply (when necessary) before installation, servicing, or conversion.
- Disconnect air supply and depressurize all air lines connected to this product before installation, servicing, or conversion.
- Operate within the manufacturer's specified pressure, temperature, and other conditions listed in these instructions.
- Medium must be moisture-free if ambient temperature is below freezing.
- Service according to procedures listed in these instructions.
- Installation, service, and conversion of these products must be performed by knowledgeable personnel who understand how pneumatic products are to be applied.
- After installation, servicing, or conversion, air and electrical supplies (when necessary) should be connected and the product tested for proper function and leakage. If audible leakage is present, or the product does not operate properly, do not put into use.
- Warnings and specifications on the product should not be covered by paint, etc. If masking is not possible, contact your local representative for replacement labels.

Safety Guide

For more complete information on recommended application guidelines, see the Safety Guide section of Pneumatic Division catalogs or you can download the **Pneumatic Division Safety Guide** at: www.parker.com/safety

Introduction


Follow these instructions when installing, operating, or servicing the product.

H Series Fieldbus 24 VDC Output Modules, Series A


(PSST8M23A, PSST8M12A, PSST8M8A, PSST16M23A, PSST16D25A, PSST16M12A)

The sealed IP67 housing of these modules requires no enclosure. (Note that environmental requirements other than IP67 may require an additional appropriate housing.) I/O connectors are sealed M8 (pico) or M12 (micro) or M23 or 25-Pin D-Sub styles. The mounting base ships with the module. The PSST8M23A, PSST8M12A, PSST8M8A, PSST16M23A, PSST16D25A and PSST16M12A modules are shown below.


PSST8M23A

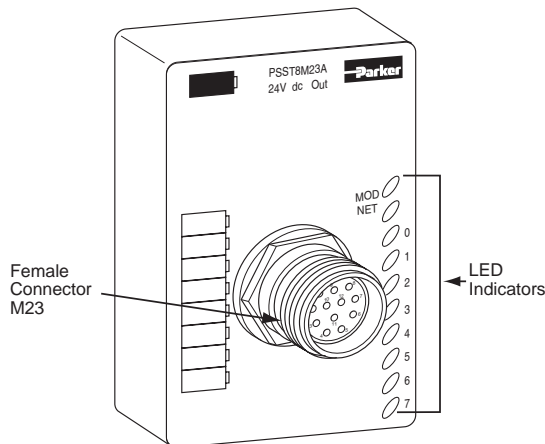

PSST8M12A

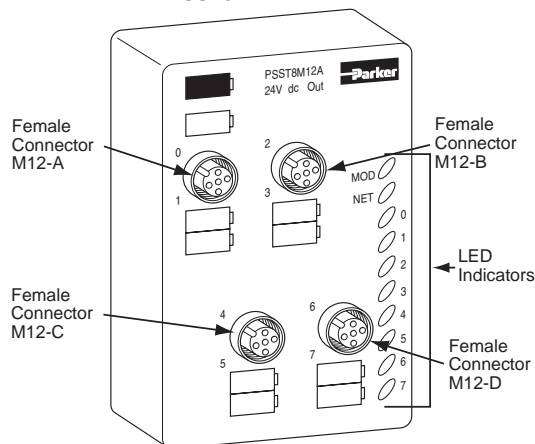

PSST8M8A

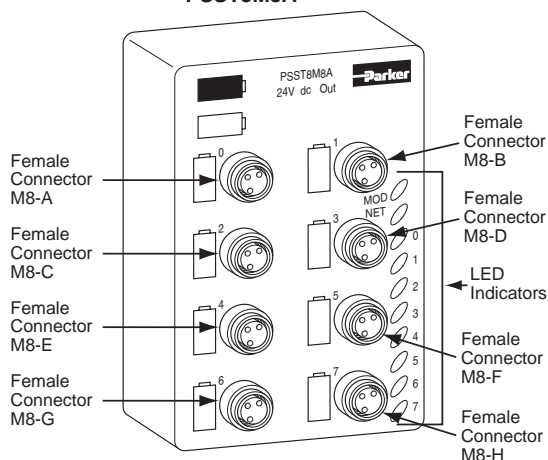

WARNING


FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application, including consequences of any failure and review the information concerning the product or systems in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.


EXTRA COPIES OF THESE INSTRUCTIONS ARE AVAILABLE FOR INCLUSION IN EQUIPMENT / MAINTENANCE MANUALS THAT UTILIZE THESE PRODUCTS. CONTACT YOUR LOCAL REPRESENTATIVE.

PSST16M23A

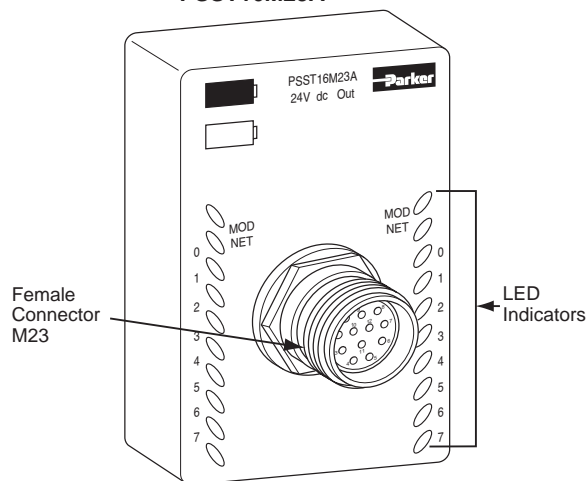

Note:
PSST16D25A similar in appearance but with 25-Pin Connector.

PSST16M12A

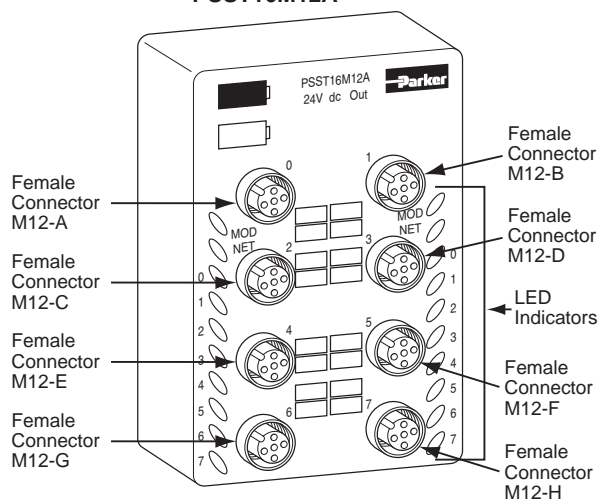

Important User Information

Solid state equipment has operational characteristics differing from those of electromechanical equipment. *Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls* (available online at www.parker.com/pneu/hseriesfieldbus) describes some important differences between solid state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.

In no event will Parker Hannifin Corporation be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Parker Hannifin Corporation cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Parker Hannifin Corporation with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Parker Hannifin Corporation is prohibited.

Throughout this manual we use notes to make you aware of safety considerations.

WARNING



Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.

IMPORTANT

Identifies information that is critical for successful application and understanding of the product.

ATTENTION



Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you:

- Identify a Hazard
- Avoid a Hazard
- Recognize the Consequence

SHOCK HAZARD



Labels may be located on or inside the equipment to alert people that dangerous voltage may be present.

BURN HAZARD



Labels may be located on or inside the equipment to alert people that surfaces may be dangerous temperatures.

ATTENTION



Environment and Enclosure

This equipment is intended for use in overvoltage Category II applications (as defined in IEC publication 60664-1), at altitudes up to 2000 meters without derating. This equipment is considered Group 1, Class A industrial equipment according to IEC/CISPR Publication 11. Without appropriate precautions, there may be potential difficulties ensuring electromagnetic compatibility in other environments due to conducted as well as radiated disturbance. This equipment is supplied as "enclosed" equipment. It should not require additional system enclosure when used in locations consistent with the enclosure type ratings stated in the Specifications section of this publication. Subsequent sections of this publication may contain additional information regarding specific enclosure type ratings, beyond what this product provides, that are required to comply with certain product safety certifications.

NOTE: See NEMA Standards publication 250 and IEC publication 60529, as applicable, for explanations of the degrees of protection provided by different types of enclosure. Also, see the appropriate sections in this publication, as well as the publication E115P ("Industrial Automation Wiring and Grounding Guidelines"), for additional installation requirements pertaining to this equipment.

ATTENTION



Preventing Electrostatic Discharge

This equipment is sensitive to electrostatic discharge, which can cause internal damage and affect normal operation. Follow these guidelines when you handle this equipment:

- Touch a grounded object to discharge potential static.
- Wear an approved grounding wriststrap.
- Do not touch connectors or pins on component boards.
- Do not touch circuit components inside the equipment.
- If available, use a static-safe workstation.
- When not in use, store the equipment in appropriate static-safe packaging.


Mount the I/O Base

To mount the I/O base on a wall or panel, use the screw holes provided in the base.

IMPORTANT

The I/O module must be mounted on a grounded metal mounting plate or other conductive surface.

A mounting illustration for the base with an adapter is shown below.

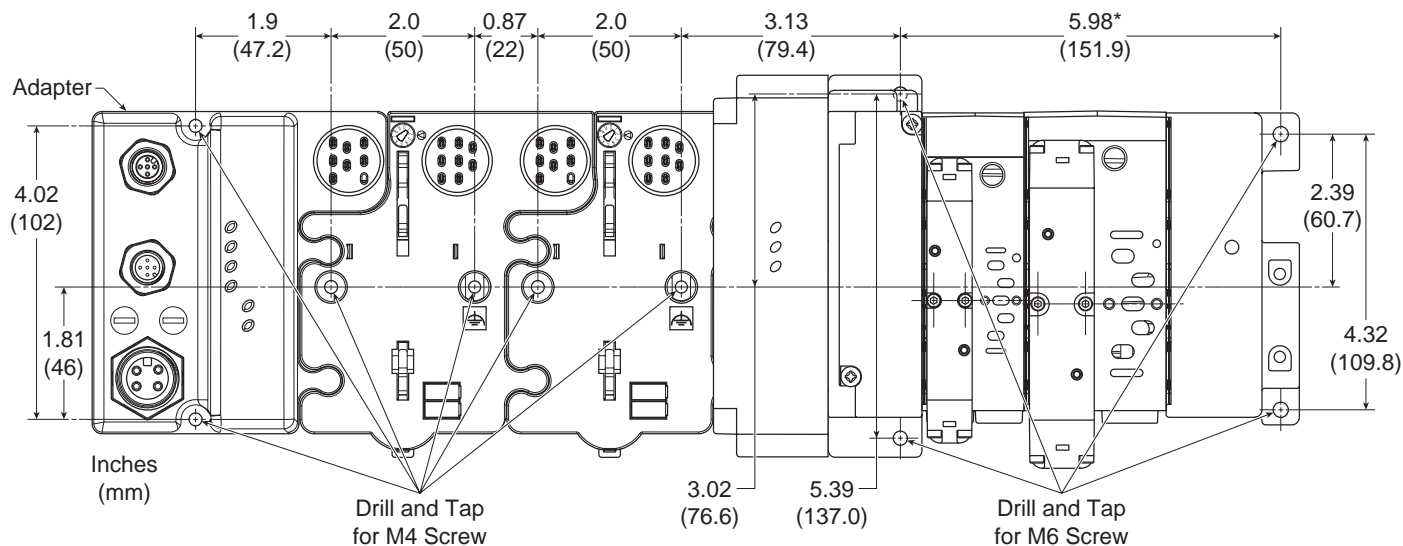


* Depending on the type and number of manifolds, this dimension may vary. Refer to Catalog 0600P-# for additional information.

Install the Mounting Base as Follows:

1. Lay out the required points as shown above in the drilling dimension drawing.
2. Drill the necessary holes for #8 (M4) machine or self-tapping screws.
3. Mount the base using #8 (M4) screws.
4. Ground the system using the ground lug connection. (The ground lug connection is also a mounting hole.)


Mounting Base

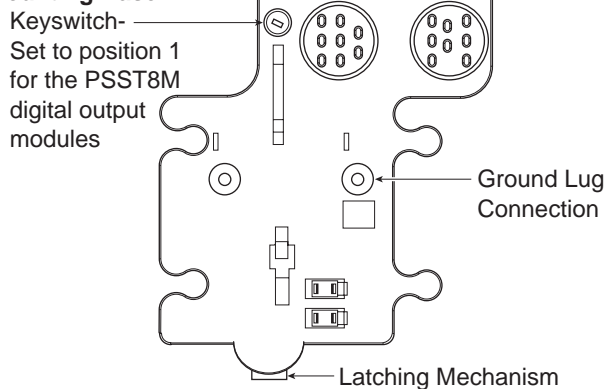

Install the Digital Output Module

To Install the Digital Output Module, Proceed as Follows:

1. Using a bladed screwdriver, rotate the keyswitch on the mounting base clockwise until the number 1 aligns with the notch in the base.
2. Position the module vertically above the mounting base. The module will bridge two bases.

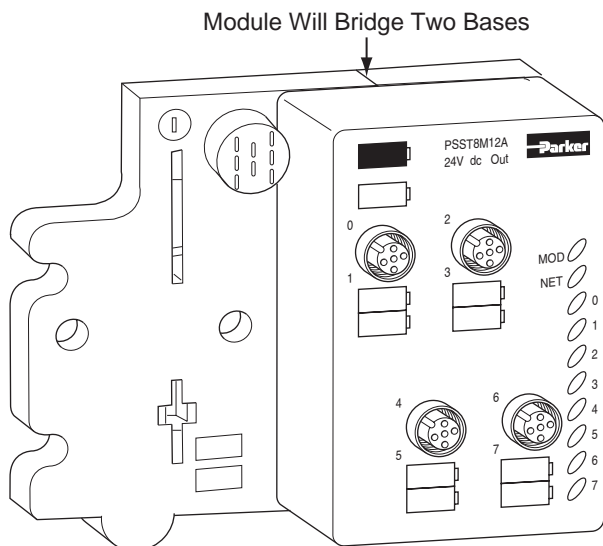

3. Push the module down until it engages the latching mechanism. You will hear a clicking sound when the module is properly engaged. The locking mechanism will lock the module to the base.

Remove the Digital Output Module From the Mounting Base


To Remove the Module from the Mounting Base:

1. Put a flat blade screwdriver into the slot of the orange latching mechanism.
2. Push the screwdriver toward the I/O module to disengage the latch. The module will lift up off the base.
3. Pull the module off of the base.

Wire the Output Modules

Following are wiring instructions for the digital output modules.


PSST8M23A

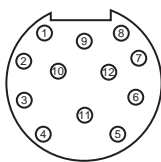

(view into connector)

- | | |
|------------------|-----------------------|
| Pin 1 - Output 0 | Pin 7 - Output 6 |
| Pin 2 - Output 1 | Pin 8 - Output 7 |
| Pin 3 - Output 2 | Pin 9 - Return (Com) |
| Pin 4 - Output 3 | Pin 10 - Return (Com) |
| Pin 5 - Output 4 | Pin 11 - 24VDC |
| Pin 6 - Output 5 | Pin 12 - Chassis |


PSST8M12A

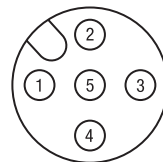

(view into connector)

- | | |
|--------------------------|--------------------------|
| Pin 1 - 24VDC | |
| Pin 2 - Output 1 (M12-A) | Pin 4 - Output 0 (M12-A) |
| Output 3 (M12-B) | Output 2 (M12-B) |
| Output 5 (M12-C) | Output 4 (M12-C) |
| Output 7 (M12-D) | Output 6 (M12-D) |
| Pin 3 - Common | Pin 5 - No Connect |


PSST8M8A

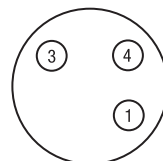

(view into connector)

- | |
|-------------------------|
| Pin 1 - 24VDC |
| Pin 3 - Common |
| Pin 4 - Output 0 (M8-A) |
| Output 1 (M8-B) |
| Output 2 (M8-C) |
| Output 3 (M8-D) |
| Output 4 (M8-E) |
| Output 5 (M8-F) |
| Output 6 (M8-G) |
| Output 7 (M8-H) |

PSST16M12A

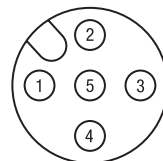


(view into connector)


- | | |
|-------------------------|------------------|
| Pin 1 - 24VDC | |
| Pin 2 - Input 1 (M12-A) | Input 9 (M12-E) |
| Input 3 (M12-B) | Input 11 (M12-F) |
| Input 5 (M12-C) | Input 13 (M12-G) |
| Input 7 (M12-D) | Input 15 (M12-H) |
| Pin 3 - Common | |
| Pin 4 - Input 0 (M12-A) | Input 8 (M12-E) |
| Input 2 (M12-B) | Input 10 (M12-F) |
| Input 4 (M12-C) | Input 12 (M12-G) |
| Input 6 (M12-D) | Input 14 (M12-H) |
| Pin 5 - No Connect | |

ATTENTION

Make sure all connectors and caps are securely tightened to properly seal the connections against leaks and maintain IP67 requirements.

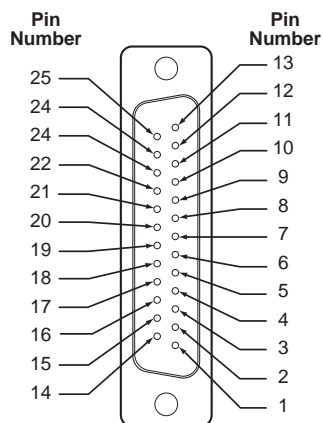PSST16D25A**D-Sub, 25-Pin Female Connector**

Pin	Description	Function	Remarks
1	Channel 0 Output	Output	24VDC @500mA
2	Channel 2 Output	Output	24VDC @500mA
3	Channel 4 Output	Output	24VDC @500mA
4	Channel 6 Output	Output	24VDC @500mA
5	Channel 8 Output	Output	24VDC @500mA
6	Channel 10 Output	Output	24VDC @500mA
7	Channel 12 Output	Output	24VDC @500mA
8	Channel 14 Output	Output	24VDC @500mA
9	24VDC Common	Common	24VDC Return
10	24VDC Common	Common	24VDC Return
11	24VDC Common	Common	24VDC Return
12	24VDC Common	Common	24VDC Return
13	24VDC Common	Common	24VDC Return
14	Channel 1 Output	Output	24VDC @500mA
15	Channel 3 Output	Output	24VDC @500mA
16	Channel 5 Output	Output	24VDC @500mA
17	Channel 7 Output	Output	24VDC @500mA
18	Channel 9 Output	Output	24VDC @500mA
19	Channel 11 Output	Output	24VDC @500mA
20	Channel 13 Output	Output	24VDC @500mA
21	Channel 15 Output	Output	24VDC @500mA
22	24VDC Common	Common	24VDC Return
23	24VDC Common	Common	24VDC Return
24	24VDC Common	Common	24VDC Return
25	24VDC Common	Common	24VDC Return

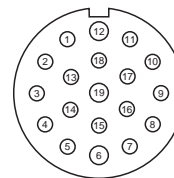PSST16M23A**M23, 19-Pin Female Connector**

Pin	Description	Function	Remarks
1	Channel 0 Output	Output	24VDC @500mA
2	Channel 1 Output	Output	24VDC @500mA
3	Channel 2 Output	Output	24VDC @500mA
4	Channel 3 Output	Output	24VDC @500mA
5	Channel 4 Output	Output	24VDC @500mA
6	24VDC Common	Common	24VDC Return
7	Channel 5 Output	Output	24VDC @500mA
8	Channel 6 Output	Output	24VDC @500mA
9	Channel 7 Output	Output	24VDC @500mA
10	Channel 8 Output	Output	24VDC @500mA
11	Channel 9 Output	Output	24VDC @500mA
12	Not Used		
13	Channel 10 Output	Output	24VDC @500mA
14	Channel 11 Output	Output	24VDC @500mA
15	Channel 12 Output	Output	24VDC @500mA
16	Channel 13 Output	Output	24VDC @500mA
17	Channel 14 Output	Output	24VDC @500mA
18	Channel 15 Output	Output	24VDC @500mA
19	Not Used		

Communicate With Your Module

I/O messages are sent to (consumed) and received from (produced) the I/O modules. These messages are mapped into the processor's memory. These I/O output modules produce 1 or 2 bytes of input data (scanner Rx - status). They consume 1 or 2 bytes of I/O data (scanner Tx).

Default Data Map for the Output Modules

PSST8M23A, PSST8M12A, PSST8M8A

Message Size: 1 Byte

	7	6	5	4	3	2	1	0	
Produces (Scanner Rx)	Ch7	Ch6	Ch5	Ch4	Ch3	Ch2	Ch1	Ch0	Channel Status
Consumes 0 (Scanner Rx)	Ch7	Ch6	Ch5	Ch4	Ch3	Ch2	Ch1	Ch0	Output State

Where: Channel Status 0 = no error, 1 = error;
Output State 0 = OFF, 1 = ON

PSST16M23A, PSST16D25A, PSST16M12A

Message Size: 2 Byte

	7	6	5	4	3	2	1	0	
Produces 0 (Scanner Rx)	Ch7	Ch6	Ch5	Ch4	Ch3	Ch2	Ch1	Ch0	Channel Status
Produces 1	Ch15	Ch14	Ch13	Ch12	Ch11	Ch10	Ch9	Ch8	Channel Status
Consumes 0 (Scanner Tx)	Ch7	Ch6	Ch5	Ch4	Ch3	Ch2	Ch1	Ch0	Output State
Consumes 1	Ch15	Ch14	Ch13	Ch12	Ch11	Ch10	Ch9	Ch8	Output State

Where: Channel Status 0 = no error, 1 = error;
Output State 0 = OFF, 1 = ON


EDS File Requirements

The EDS files are available online at www.parker.com/pneu/hseriesfieldbus


Add 24 VDC Output Modules to RSLogix 5000 I/O Configuration

To add your output modules to RSLogix 5000 I/O configuration, follow these steps:

- In RSLogix 5000:
 - For ControlNet, highlight the **PSSCCNA** or **1738-ACNR** (**Shown**), right click and select **New Module**.

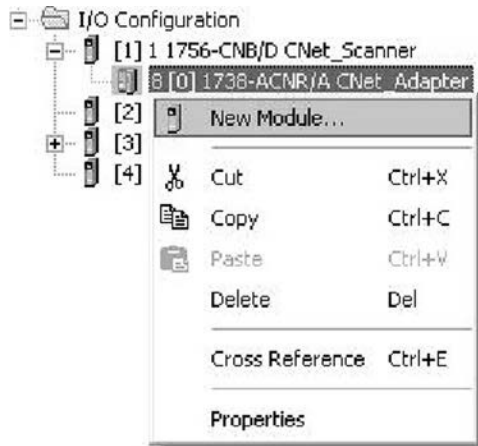


- For EtherNet/IP, highlight the **PSSCENA** or **1738-AENT** (**Shown**), right click and select **New Module**.

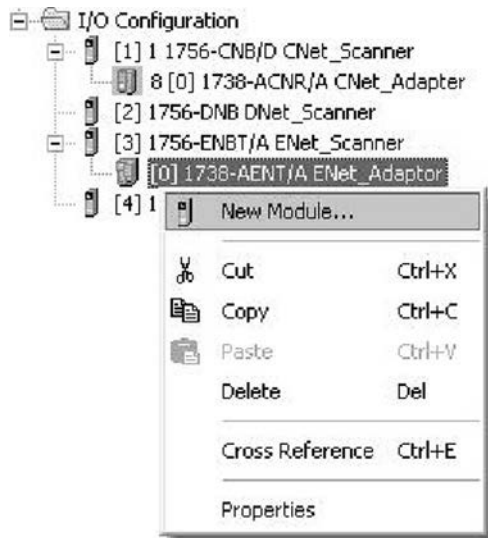


If your RSLogix 5000 is Version 15.X or greater:

- Choose the **PSST8M12A** module from the list of Parker Hannifin modules.

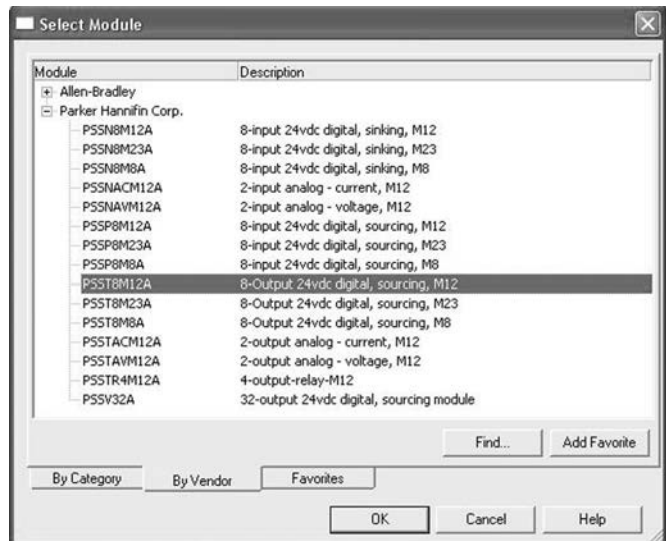


- Enter a name and click OK.

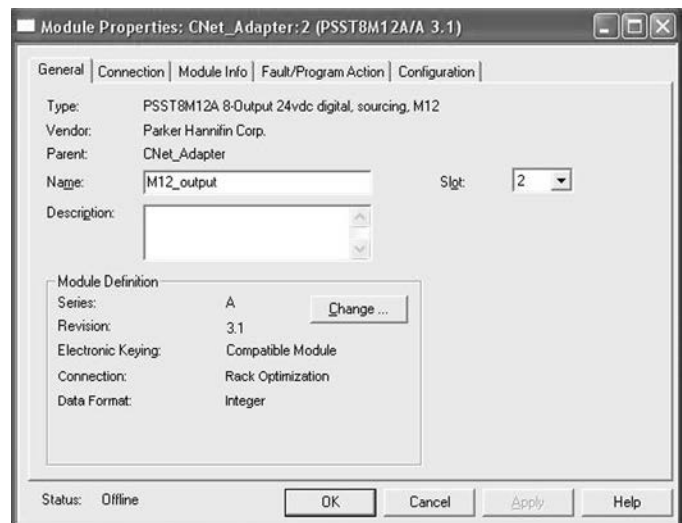

- Notice that the PSST8M12A is now under the I/O configuration.

If your RSLogic 5000 is Version 13.X:


- Choose the equivalent Rockwell Automation module from the list of modules.

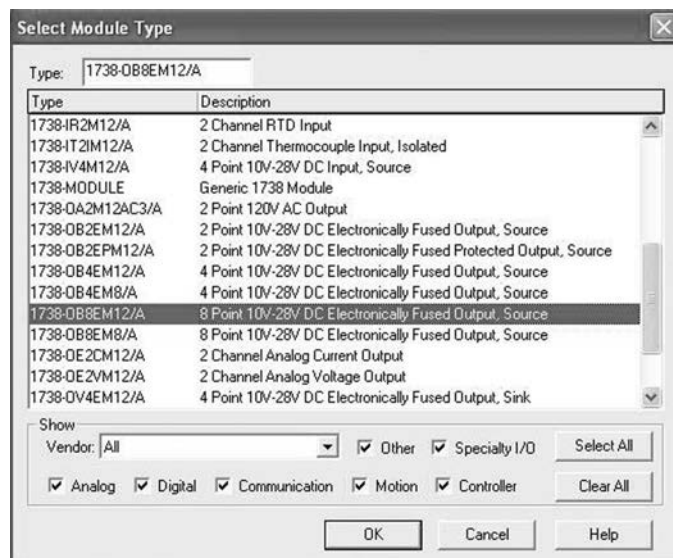

H Series Fieldbus Modules	Equivalent Rockwell Automation 1738 ArmorPoint Modules
PSST8M8A	1738-OB8EM8
PSST8M12A	1738-OB8EM12
PSST8M23A	1738-OB8EM23*


* 1738-OB8EM23 profile will be available in RSLogix 5000 v15. To use 1738-OB8EM23 in RSLogix 5000 v13, choose 1738-OB8EM12 profile and disable keying.

- Enter a name (optional), slot number, and communication format. Make sure to choose **Compatible Module for Electronic Keying** setting.

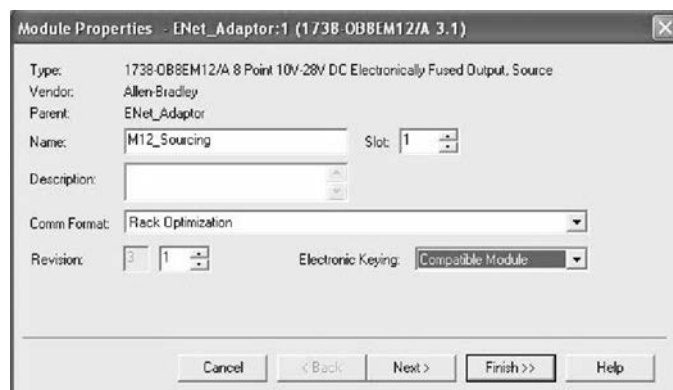

- Choose **Next** to set RPI.
- Choose **Finish**. Notice that the output module is now under the I/O configuration

H Series Fieldbus Modules	Equivalent Rockwell Automation 1738 ArmorPoint Modules
PSST16M23A	1738-OB16E19M23
PSST16D25A	1738-OB16E25DS
PSST16M12A	1738-OB16EM12

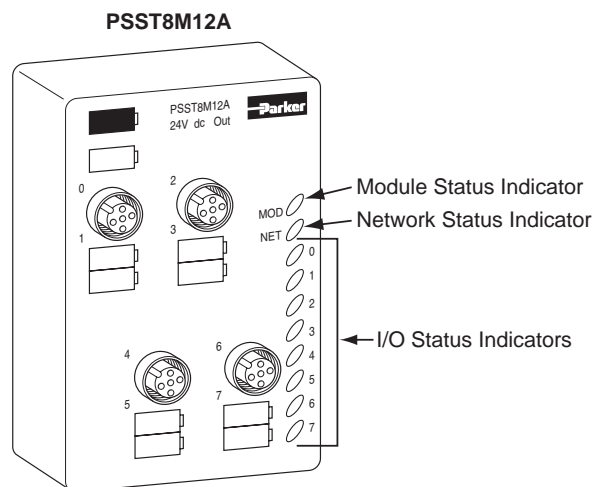Troubleshoot With the Indicators

Indication	Probable Cause
Module Status	
Off	No power applied to device
Green	Device operating normally
Flashing Green	Device needs commissioning due to missing, incomplete, or incorrect configuration
Flashing Red	Recoverable fault
Red	Unrecoverable fault - may require device replacement
Flashing Red/Green	Device is in self-test

Indication	Probable Cause
Network Status	
Off	Device is not on line: - Device has not completed dup_MAC-id test. - Device not powered - check module status indicator.
Flashing Green	Device is on line but has no connections in the established state.
Green	Device is on line and has connections in the established state.
Flashing Red	One or more I/O connections in timed-out state.
Red	Critical link failure - failed communication device. Device detected error that prevents it from communicating on the network.
Flashing Red/Green	Communication faulted device - the device has detected a network access error and is in communication faulted state. Device has received and accepted an Identity Communication Faulted Request - long protocol message.

Indication	Probable Cause
I/O Status	
Off	Output is inactive
Yellow	Output is active and under control
Flashing Red	Open circuit detection. No load. (Off-State only)
Red	Short circuit detected. (On-State only)

Specifications - Following are specifications for the digital output modules.

Digital Output Modules		
Outputs per Module	8 (1 Group of 8) Non-isolated, Sourcing	16 (1 Group of 16) Non-isolated, Sourcing
Voltage Drop, On-State Output, Maximum	0.2VDC (Sourcing Modules) 0.7VDC (Sinking Module)	
Voltage, Off-State Output, Maximum	28.8VDC	
Voltage, On-State Output, Maximum	28.8VDC	
Minimum	10VDC	
Nominal	24VDC	
Current Leakage, Off-State Output, Maximum	0.5 mA	
Current, On-State Output Minimum	1.0 mA Per C hannel	
Output Current Rating	1.0 A Per Channel, Not To Exceed 3.0 A Maximum Per Module	
Output Delay Time OFF to ON, Maximum ¹	0.1 ms	
Output Delay Time, ON to OFF, Maximum ¹	0.1 ms	
Output Point Density	8 or 16	
Output Surge Current, Maximum	2 A for 10 ms, Repeatable Every 3 Seconds	
External DC Power Supply Current	32 mA	
External DC Power Supply Voltage Range	10 to 28.8VDC	
External DC Power Supply Voltage Nominal	24VDC	
Keyswitch Position	1	
LED Indicators	8 or 16 Yellow/Red Output Status, Logic Side 1 Green/Red Network Status, Logic Side 1 Green/Red Module Status, Logic Side	
PointBus Current, Maximum	75 mA @ 5VDC	
Power Dissipation, Maximum	PSST8M - 2.0W @ 28.8VDC	
Thermal Dissipation, Maximum	PSST8M - 6.8 BTU/hr. @ 28.8VDC	
Isolation Voltage (continuous-voltage withstand rating)	50V rms Tested at 1250VAC rms for 60s	
Dimensions (includes I/O module and mounting base)	Inches (Millimeters)	4.72H x 2.82W x 1.65D (120H x 72W x 42D)
Operating Temperature	IEC 60068-2-1 (Test Ad, Operating Cold), IEC 60068-2-2 (Test Bd, Operating Dry Heat), IEC 60068-2-14 (Test Nb, Operating Thermal Shock): -20 to 60°C (-4 to 140°F)	
Storage Temperature	IEC 60068-2-1 (Test Ab, Un-packaged Non-operating Cold), IEC 60068-2-2 (Test Bb, Un-packaged Non-operating Dry Heat), -40 to 85°C (-40 to 185°F)	
Relative Humidity	IEC 60068-2-30 (Test Db, Un-packaged Non-operating Damp Heat): 5 to 95% Non-condensing	
Shock	IEC60068-2-27 (Test Ea, Unpackaged Shock): Operating 30g Non-operating 50g	
Vibration	IEC60068-2-6 (Test Fc, Operating): 5g @ 10 to 500Hz	
ESD Immunity	IEC 61000-4-2: 6kV Contact Discharges 8kV Air Discharges	
Radiated RF Immunity	IEC 61000-4-3: 10V/m with 1kHz Sine-wave 80% AM from 30MHz to 2000MHz 10V/m with 200Hz 50% Pulse 100% AM at 900Mhz 10V/m with 200Hz 50% Pulse 100% AM at 1890Mhz	
EFT/B Immunity	IEC 61000-4-4: ±3kV at 5kHz on Signal Ports	
Surge Transient Immunity	IEC 61000-4-5: ±1kV Line-line(DM) and ±2kV Line-earth(CM) on Signal Ports	
Conducted RF Immunity	IEC 61000-4-6: 10Vrms with 1kHz Sine-wave 80%AM from 150kHz to 80MHz	
Emissions	CSPR 11: Group 1, Class A	
Enclosure Type Rating	Meets IP65/66/67 (when marked)	
Mounting Base Screw Torque	#8 Screw, 7.5 in. lbs. in Aluminum, 16 in. lbs. in Steel	
Wiring Category ²	1 - on Signal Ports	
Weight Imperial (Metric)	0.64 lb. (0.29 kg)	
Certifications: (when product is marked)	c-UL-us UL Listed Industrial Control Equipment, certified for US and Canada CE European Union 89/336/EEC EMC Directive, compliant with: EN 61000-6-4; Industrial Emissions EN 50082-2; Industrial Immunity EN 61326; Meas./Control/Lab., Industrial Requirements EN 61000-6-2; Industrial Immunity C- Tick Australian Radiocommunications Act, compliant with: AS/NZS CISPR 11; Industrial Emissions	

1. OFF to ON or ON to OFF delay is time from a valid output "on" or "off" signal to output energization or de-energization.

2. Use this Conductor Category information for planning conductor routing. Refer to Publication E115P, "Industrial Automation Wiring and Grounding Guidelines".